

[Manuals.plus](#) /

› [ZOSKVEE](#) /

› ZOSKVEE Smart Watch N29 User Manual

ZOSKVEE N29

ZOSKVEE Smart Watch N29 User Manual

Model: N29

1. INTRODUCTION

Thank you for choosing the ZOSKVEE Smart Watch N29. This device is designed to help you monitor your health and fitness activities, and stay connected. This manual provides detailed instructions on how to set up, operate, and maintain your smartwatch. Please read it carefully before use.



Image 1.1: The ZOSKVEE Smart Watch N29.

2. WHAT'S IN THE BOX

Upon unboxing, please ensure all items are present:

- ZOSKVEE Smart Watch N29
- Charging Cable
- User Manual



Image 2.1: Smart Watch N29 and accessories.

3. SETUP

3.1 Initial Activation and Charging

Before initial use, please charge the watch to activate it. Connect the charging cable to the watch and a USB power source. A full charge typically takes approximately 2 hours.

3.2 Connecting the Watch with Your Phone (InxFit App)

The ZOSKVEE Smart Watch N29 is compatible with smartphones running Android 6.0 / iOS 10.0 or higher. Download the '**InxFit**' App from your phone's app store. Ensure Bluetooth is enabled on your phone, but **do not connect directly via your phone's Bluetooth settings list**. All pairing should be initiated through the InxFit App.

There are three methods to connect your watch after registering an account and logging into the InxFit App:

1. **Method 1:** Open the 'InxFit' App, tap 'Device', tap 'Bind device' at the bottom of the page, tap 'N29', tap '✓' on the watch screen, allow the Bluetooth pairing request, and tap 'complete'.

2. **Method 2:** Open the 'InxFit' App, tap the '+' icon on the upper right corner, tap 'Add device', tap 'N29', tap '✓' on the watch screen, allow the Bluetooth pairing request, and tap 'complete'.
3. **Method 3:** Open the 'InxFit' App, tap the '+' icon on the upper right corner, tap 'Scan code', scan the QR code (found by navigating to 'Setting' → 'About' on the watch and swiping down), tap '✓' on the watch screen, allow the Bluetooth pairing request, and tap 'complete'.



Image 3.1: The InxFit App interface.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The watch features a 1.4-inch HD display. Swipe left/right or up/down on the screen to navigate through different functions and menus.

Multi function interface display

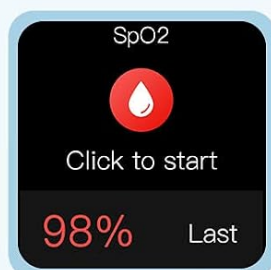
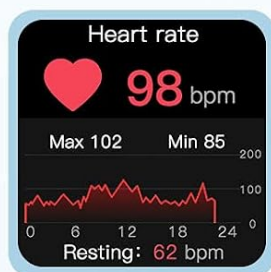


Image 4.1: Multi-function interface display.

4.2 Changing Watch Faces

You can customize your watch face using two methods:

- **On the Smart Watch:** Open the watch, find and tap 'Setting', then tap 'Dial setting'. Swipe the watch screen left and right to select your preferred watch face and tap to confirm.
- **Via InxFit App:** Ensure a stable connection between the watch and the 'InxFit' App. Tap 'Device' in the App, find 'Watch faces' and tap 'more'. In the 'Recommend' interface, you can choose from various patterns. In the 'Mine' interface, you can customize a picture from your phone as your watch face.

Custom Watch Face



Image 4.2: Custom Watch Face options.

4.3 Monitoring Health Data (Heart Rate, Blood Oxygen, Sleep)

The watch can monitor your heart rate, blood oxygen saturation, and sleep patterns. You can view today's data directly on the watch. For historical data and detailed analysis, connect the watch with the InxFit App.

- **Heart Rate:** Monitors all-day heart rate.
- **Blood Oxygen Saturation (SpO2):** Measures blood oxygen levels.
- **Sleep Tracker:** Monitors your sleep from 9 PM to 10 AM.

Important Note for Measurements: For accurate heart rate and blood oxygen measurements, wear the watch correctly, ensuring it is close to your skin. Place your arm flat on a table and keep it still for a few seconds during measurement. It is recommended to take the average of multiple measurements to ensure accuracy. *This watch is not intended for medical use; all measurements are for general fitness and wellness purposes.*



Understand your health on a deeper level.



Blood Oxygen: Measure your blood oxygen saturation with new sensor accurately.



Heart Rate: Measure your heart rate on your wrist continuously.

Image 4.3: Heart Rate and Blood Oxygen Monitoring.

4.4 Smart Notification Assistant

Stay connected by receiving important messages and calls directly on your watch. The smartwatch can store up to 10 messages. You can reject calls and delete messages from the watch. *Please note that this watch does not support answering calls or replying to messages.*

To enable message reminders:

- If you allowed all permissions during InxFit App installation: Connect the watch with the app. Tap 'Device' in the app, tap 'Notice', enable the app notifications you want, and tap '✓' icon to save settings.
- If you did not allow all permissions during InxFit App installation:
 - **For iOS phones:**
 - i. Tap 'Settings' on your phone, tap 'Bluetooth', tap the 'i' icon next to 'N29' to open Share System Notifications.
 - ii. Tap 'Notifications' on your phone Settings, tap 'Show Previews', choose 'Always'.
 - iii. Tap 'Device' in the app, tap 'Message Notification', enable the app notifications you want, and tap '✓' icon to save

settings.

- **For Android phones:**

- Tap 'Notifications' on your phone Settings, tap 'More notification content', choose 'Show notification icons in the status bar'. Then find the 'InxFit' app in the phone notification settings, click the app, and allow notifications.
- Tap 'Device' in the app, tap 'Message Notification', enable the app notifications you want, and tap '✓' icon to save settings.

Note: Ensure that the app from which you wish to receive messages can display notifications in the status bar.



Image 4.4: Call and Message Reminder feature.

4.5 Sports Modes

The watch supports 10 sports modes to track your daily exercise, including Outdoor Running, Indoor Running, Outdoor Walking, Indoor Walking, Cycling, Spinning, Yoga, Rowing Machine, Elliptical Machine, and Other Sports.

10 Sports Modes



Image 4.5: 10 Sports Modes.

4.6 Other Functions

The InxFit App and watch offer additional smart features:

- **Alarm & Sedentary Alert:** Set alarms and reminders to move.
- **Stopwatch & Timer:** For timing activities.
- **Weather Forecast:** Get current weather information.
- **Music Control:** Control your phone's music player (adjust volume, skip tracks, play/pause).
- **Breathing Training:** Guided breathing exercises.

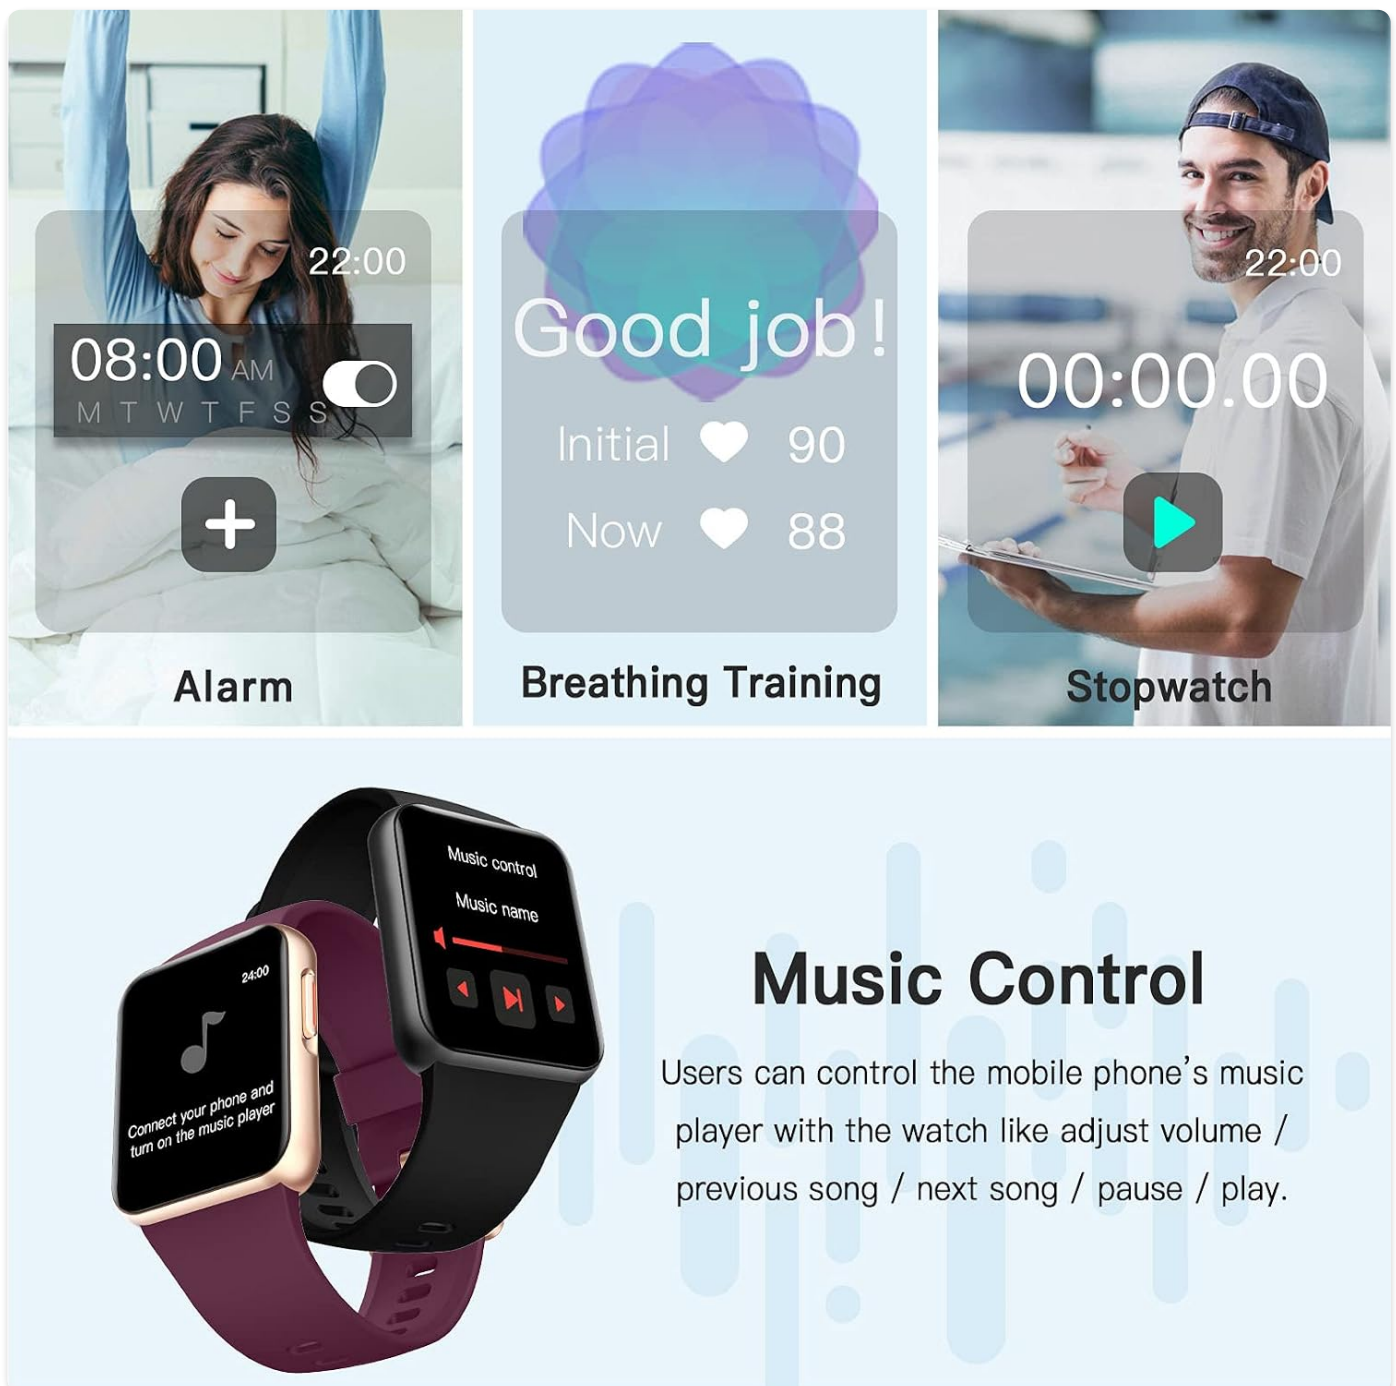


Image 4.6: Additional Smartwatch Functions.

5. MAINTENANCE

5.1 Water Resistance

The ZOSKVEE Smart Watch N29 features IP68 water resistance. This means you can wear the smartwatch while washing hands, swimming, and bathing (at temperatures under 40°C). *It cannot track swim data.* Avoid exposing the watch to hot water or steam, as this may compromise its water resistance.



Image 5.1: IP68 Water Resistance.

5.2 General Care

- Clean the watch regularly with a soft, dry cloth.
- Avoid using harsh chemicals or abrasive materials.
- Keep the charging contacts clean and dry.

6. TROUBLESHOOTING

6.1 Device Fails to Connect

If you encounter issues connecting your watch to your phone:

1. Check if the watch is connected to another smartphone. Disconnect it from other devices, forget 'N29' in the Bluetooth list of other phones, and restore the watch to factory settings.
2. Ensure 'N29' is not listed in your phone's Bluetooth settings before attempting to connect via the InxFit app. Simply turn on Bluetooth and use the InxFit app to bind the watch.
3. If you used a different account to register the app, restore the watch to factory settings and re-bind it with the app using the correct account.
4. If the above steps fail, ensure 'N29' is not in your Bluetooth list, restore the watch to factory settings, delete the InxFit app, and then reinstall it before attempting to connect again.

7. SPECIFICATIONS

Dimension



Image 7.1: Product Dimensions.

Feature	Detail
Model Number	N29
Product Dimensions	0.9 x 9.2 x 1.3 inches
Item Weight	3.87 ounces
Batteries	1 Lithium Polymer batteries required (included)
Standing Screen Display Size	1.4 Inches
Operating System	Android, iOS

Feature	Detail
Special Features	Alarm Clock, Heart Rate Monitor, Notifications, Phone Call (reject), Sleep Monitor, Time Display
Wireless Communication Standard	Bluetooth
Battery Cell Composition	Lithium Polymer
Shape	Heart (referring to heart rate monitoring feature)
Screen Size	1.4 Inches
Brand	ZOSKVEE
Style	Modern
Color	Black
Target Audience	Men, Women

8. WARRANTY AND SUPPORT

ZOSKVEE is committed to providing excellent after-sales service. We value consumer feedback and are dedicated to resolving any issues you may encounter with your product. For support, please refer to the contact information provided with your purchase or visit the official ZOSKVEE store page on Amazon: [ZOSKVEE Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question