

ZMJH ZMA201

ZMJH ZMA201 Elongated Smart Toilet Seat User Manual

Model: ZMA201

1. INTRODUCTION

Thank you for choosing the ZMJH ZMA201 Elongated Smart Toilet Seat. This manual provides essential information for the safe installation, operation, and maintenance of your new smart toilet seat. Please read this manual thoroughly before installation and use, and retain it for future reference.

The ZMA201 offers advanced features designed for enhanced hygiene and comfort, including adjustable water temperature, heated seat, warm air dryer, and various wash modes. It features a durable, hygienic stainless steel nozzle and an illuminating LED nightlight.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of injury, electric shock, fire, or damage to property, always follow basic safety precautions when using electrical appliances. This product requires an electrical connection.

- Ensure the power outlet is properly grounded and rated for the product's electrical requirements.
- Do not immerse the product in water or other liquids.
- Do not attempt to repair or modify the product yourself. Contact qualified service personnel for assistance.
- Unplug the unit from the power outlet before cleaning or performing any maintenance.
- Keep the power cord away from heated surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning installation:

- ZMJH ZMA201 Smart Toilet Seat (Elongated)
- Mounting Hardware
- Water Supply Hose

- T-Valve Connector
- Remote Control (with batteries, if applicable)
- User Manual (this document)

4. SETUP AND INSTALLATION

Installation of the ZMJH ZMA201 smart toilet seat requires basic plumbing and electrical connections. If you are unsure about any steps, it is recommended to consult a qualified professional.

4.1 Pre-Installation Checklist

- Ensure your toilet is an elongated type. Refer to the dimension diagram below.
- Verify that a grounded electrical outlet (120V AC) is available within 4.9 feet (1.5 meters) of the toilet.
- Confirm that the water supply valve is accessible and can be shut off.

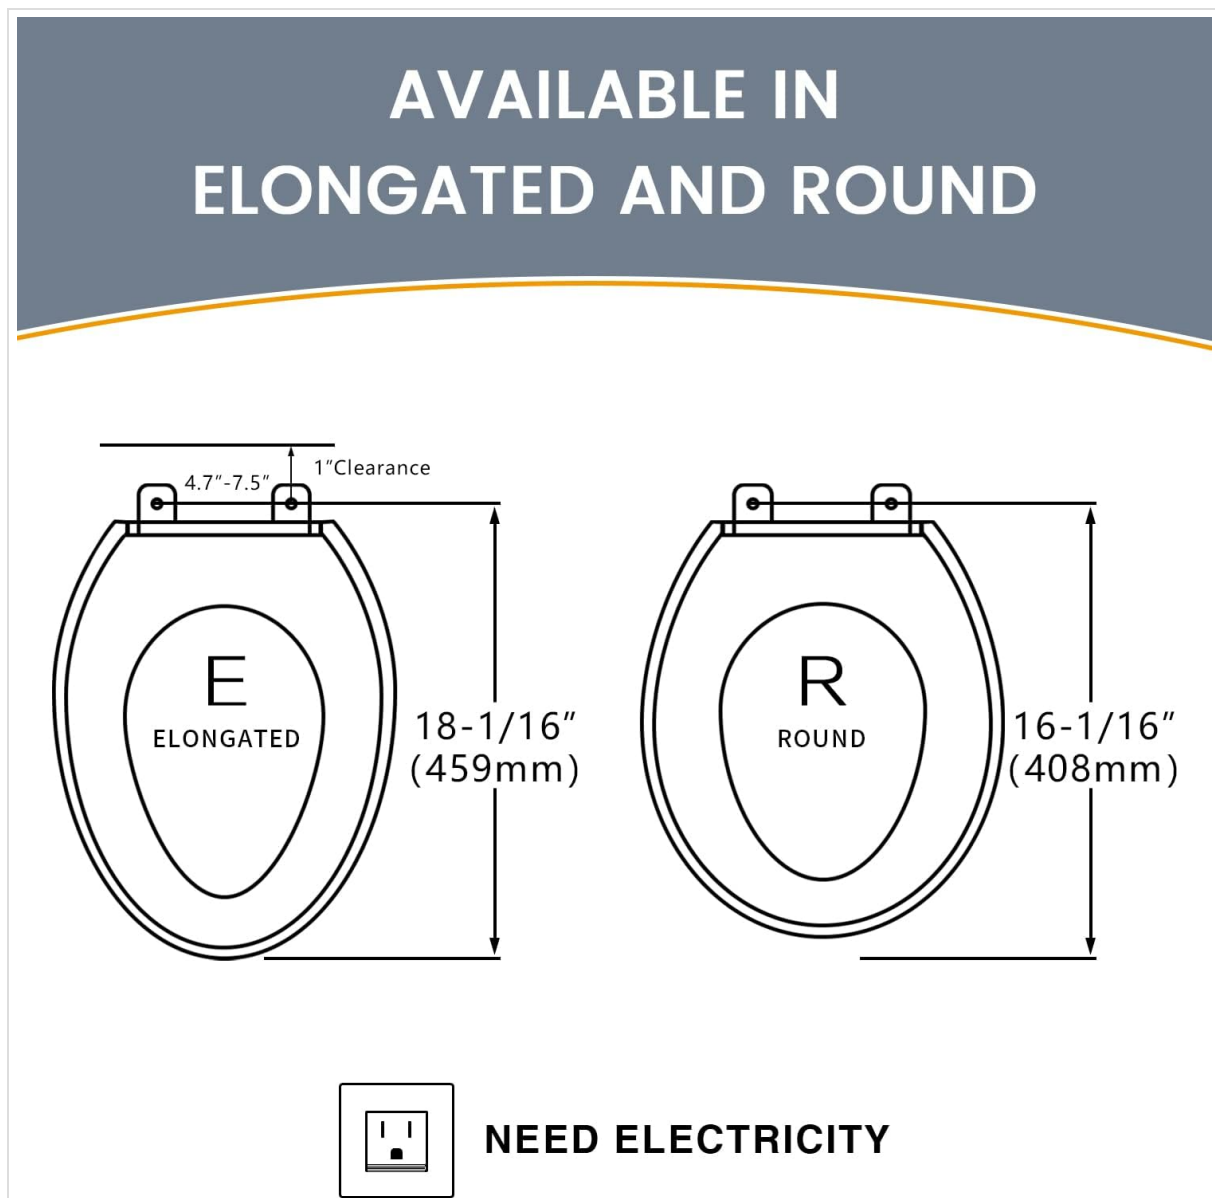


Image: This diagram provides dimensional guidance for both elongated and round toilet seats, helping users determine compatibility. The ZMA201 is an elongated model, requiring specific measurements for proper fit.

4.2 Installation Steps

1. **Turn off Water Supply:** Locate the water supply valve behind your toilet and turn it clockwise to shut off the water. Flush the toilet to empty the tank.


2. **Remove Existing Toilet Seat:** Unscrew and remove your current toilet seat and lid. Clean the toilet bowl rim thoroughly.
3. **Install Mounting Plate:** Place the mounting plate over the toilet bowl holes. Insert the mounting bolts and secure them loosely with washers and nuts from underneath.
4. **Connect T-Valve:** Disconnect the existing water supply hose from the toilet tank. Install the provided T-valve connector to the toilet tank's fill valve. Reconnect the original water supply hose to one end of the T-valve.
5. **Connect Bidet Water Hose:** Connect the provided bidet water supply hose from the T-valve to the water inlet on the smart toilet seat. Ensure all connections are hand-tightened, then use a wrench for a quarter turn to prevent leaks.
6. **Slide Seat onto Mounting Plate:** Carefully slide the ZMJH ZMA201 smart toilet seat onto the mounting plate until it clicks into place. Adjust the seat position as needed, then tighten the mounting bolts securely.
7. **Restore Water Supply:** Slowly turn the water supply valve counter-clockwise to restore water flow. Check for any leaks.
8. **Connect Power:** Plug the power cord into a grounded electrical outlet. The unit will perform a self-test.



Image: An image of the ZMJH ZMA201 smart toilet seat properly installed on a toilet, demonstrating its appearance in a typical bathroom environment and highlighting the necessary electrical connection to a wall outlet.

5. OPERATING INSTRUCTIONS

The ZMJH ZMA201 smart toilet seat is operated via its integrated side control panel. Familiarize yourself with the functions below.

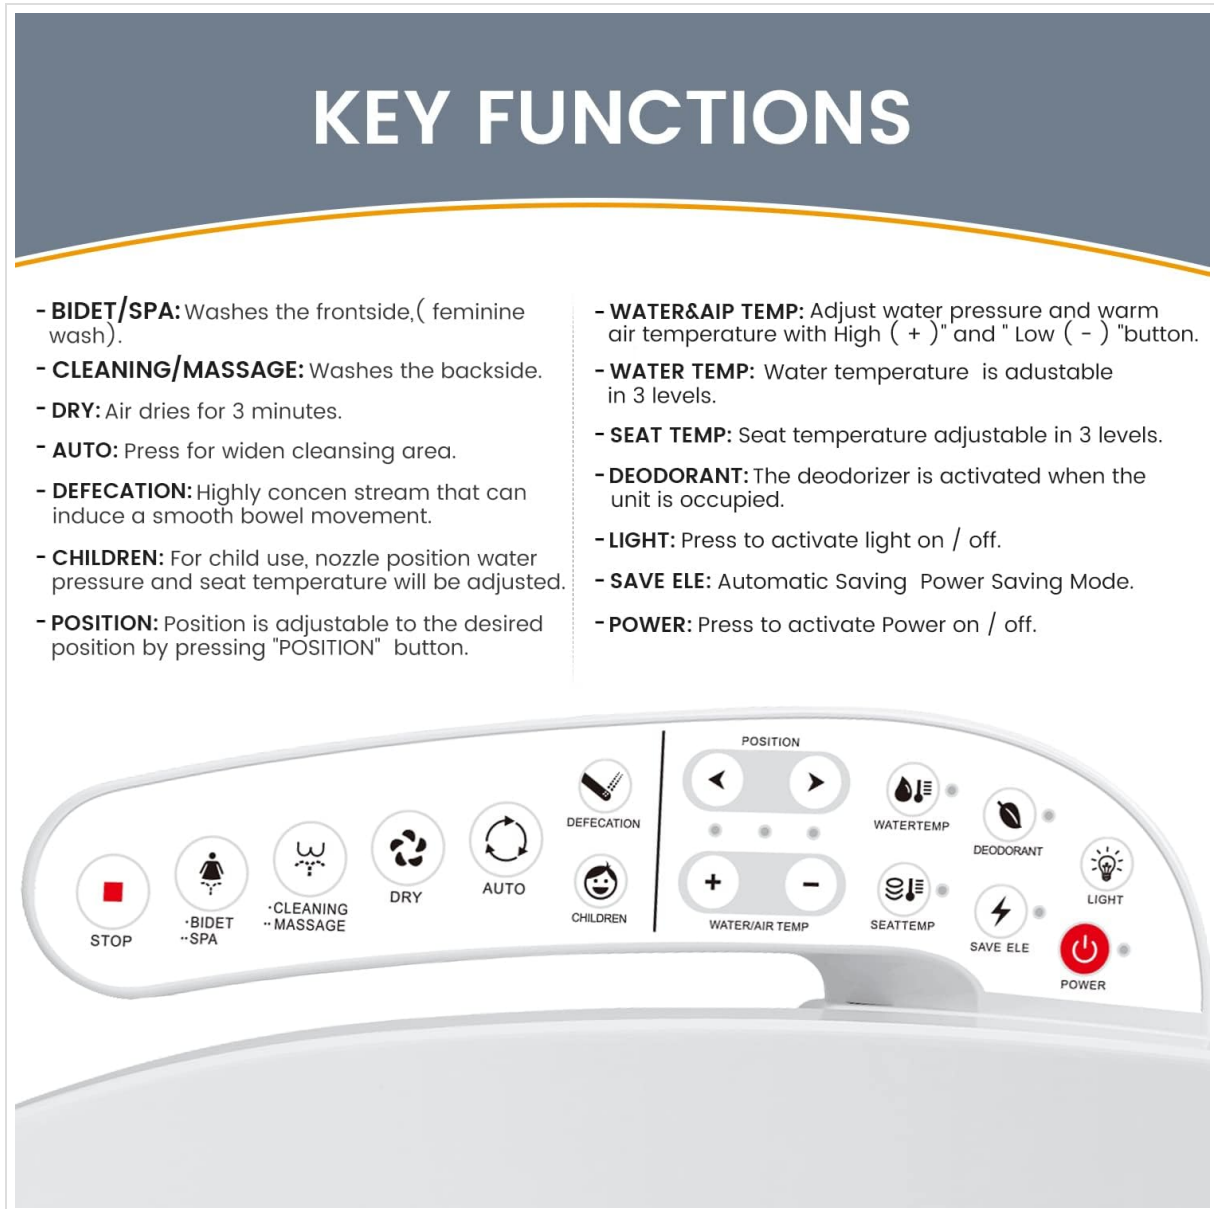

- **BIDET/SPA:** Washes the frontside, (feminine wash).
- **CLEANING/MASSAGE:** Washes the backside.
- **DRY:** Air dries for 3 minutes.
- **AUTO:** Press for widen cleansing area.
- **DEFECATION:** Highly concen stream that can induce a smooth bowel movement.
- **CHILDREN:** For child use, nozzle position water pressure and seat temperature will be adjusted.
- **POSITION:** Position is adjustable to the desired position by pressing "POSITION" button.

- **WATER&AIP TEMP:** Adjust water pressure and warm air temperature with High (+)" and " Low (-)" button.
- **WATER TEMP:** Water temperature is adustable in 3 levels.
- **SEAT TEMP:** Seat temperature adjustable in 3 levels.
- **DEODORANT:** The deodorizer is activated when the unit is occupied.
- **LIGHT:** Press to activate light on / off.
- **SAVE ELE:** Automatic Saving Power Saving Mode.
- **POWER:** Press to activate Power on / off.

Image: This diagram illustrates the various buttons and their corresponding functions on the control panel, including wash modes, temperature adjustments, and power settings, for easy reference during operation.

5.1 Basic Functions

- **POWER:** Press to activate or deactivate the unit.
- **STOP:** Stops all current operations (wash, dry).
- **BIDET/SPA (Feminine Wash):** Initiates a gentle front wash.
- **CLEANING/MASSAGE (Posterior Wash):** Initiates a rear wash.
- **DRY:** Activates the warm air dryer for approximately 3 minutes after a wash cycle.
- **LIGHT:** Press to activate or deactivate the illuminating LED nightlight.

VARIOUS WASH MODES



Image: The image highlights the dual-function stainless steel nozzle, indicating options for posterior and feminine wash modes for comprehensive cleaning.

5.2 Adjustable Settings

- **WATER/AIR TEMP:** Adjusts water pressure and warm air temperature. Use '+' for higher settings and '-' for lower settings. Water temperature is adjustable in 3 levels.
- **SEAT TEMP:** Adjusts the heated seat temperature. Adjustable in 3 levels (High, Middle, Low).
- **POSITION:** Adjusts the nozzle position to the desired setting.
- **AUTO:** Provides a wider cleansing area.
- **CHILDREN:** Adjusts nozzle position, water pressure, and seat temperature for child use.
- **DEFECATION:** Provides a highly concentrated stream to assist with bowel movement.
- **DEODORANT:** The deodorizer activates automatically when the unit is occupied.
- **SAVE ELE (Energy Save Mode):** Activates automatic power saving mode to reduce electricity consumption.



Image: This graphic demonstrates the adjustable heated seat feature, allowing users to select from three temperature levels: High, Middle, and Low, for personalized comfort.

ADJUSTABLE WARM AIR



Image: The image displays the warm air dryer vent, which provides adjustable drying with High, Middle, and Low intensity settings after washing, contributing to a complete and comfortable experience.

6. MAINTENANCE

Regular maintenance ensures the longevity and hygienic operation of your smart toilet seat.

- **Cleaning the Nozzle:** The stainless steel nozzle is self-cleaning. It will rinse itself before and after each use. For additional cleaning, you may manually extend the nozzle (refer to control panel functions) and gently wipe it with a soft cloth and mild, non-abrasive cleaner.
- **Cleaning the Unit:** Unplug the unit before cleaning. Wipe the exterior surfaces with a soft, damp cloth and a mild, non-abrasive cleaning solution. Do not use harsh chemicals, abrasive cleaners, or scrub brushes, as these can damage the finish.
- **Water Filter (if applicable):** Check and clean or replace the water filter periodically according to local water quality.
- **Long-Term Storage:** If the unit will not be used for an extended period, unplug it, turn off the water supply, and drain any remaining water from the unit to prevent freezing or stagnation.

7. TROUBLESHOOTING

If you encounter issues with your ZMJH ZMA201 smart toilet seat, refer to the following common problems and

solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
No power / Unit not turning on	Power cord unplugged, circuit breaker tripped, power outlet malfunction.	Ensure power cord is securely plugged in. Check circuit breaker. Test outlet with another appliance.
No water / Weak water pressure	Water supply valve closed, water hose kinked, water filter clogged.	Open water supply valve fully. Check for kinks in the water hose. Clean or replace water filter.
Water temperature not warm	Water heater setting too low, unit not fully warmed up.	Adjust water temperature setting to a higher level. Allow a few moments for the water heater to activate.
Heated seat not warm	Heated seat setting too low, unit not fully warmed up.	Adjust seat temperature setting to a higher level. Allow a few moments for the seat to heat up.
Leaks from connections	Loose connections, damaged washers.	Tighten all water connections. If leaks persist, check washers and replace if damaged.

8. SPECIFICATIONS

Feature	Detail
Brand	ZMJH
Model Number	ZMA201
Type	Elongated Smart Toilet Seat
Material	ABS
Color	White
Dimensions (L x W x H)	50.8 x 45.97 x 13.97 cm (20 x 18.1 x 5.5 inches)
Item Weight	5.47 kg (12.06 lbs)
Cord Length	4.9 Feet (approx. 1.5 meters)
Power Requirement	Standard Electrical Outlet (Voltage not specified, assumed 120V AC for US market based on reviews, but generally check local standards)
Heated Seat	3 adjustable temperature levels
Water Heater	Hybrid Heating Technology, 3 adjustable temperature levels
Warm Air Dryer	3 adjustable levels
Nozzle Type	Stainless Steel, Self-cleaning, Posterior & Feminine Wash
Nightlight	Illuminating LED
Energy Saving	Eco-Friendly Energy Save Mode
UPC	768432524814

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact ZMJH customer service directly. Keep your purchase receipt as proof of purchase for warranty claims. Contact information for ZMJH customer support can typically be found on the product packaging or the official ZMJH website.