



[Manuals.plus](#) /

> [kleankin](#) /

> kleankin Lighted Medicine Cabinet 834-418V80 - Instruction Manual

kleankin 834-418V80

kleankin Lighted Medicine Cabinet - Instruction Manual

Model: 834-418V80

[Introduction](#) [Safety Information](#) [Package Contents](#) [Specifications](#) [Setup & Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the safe installation, operation, and maintenance of your kleankin Lighted Medicine Cabinet. Please read this manual thoroughly before assembly and use, and retain it for future reference.



Image 1.1: The Kleankin Lighted Medicine Cabinet installed in a modern bathroom setting, showcasing its integrated mirror and open shelving.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent injury or damage to the product:

- Read all instructions before assembly and installation.
- Ensure all components are present and undamaged before beginning assembly.
- Always use appropriate tools and follow recommended installation procedures.
- Mount the cabinet securely to a sturdy wall structure to prevent falling.
- Do not overload shelves; adhere to specified weight capacities.
- Keep electrical components (LED lights, USB port) away from direct water exposure.
- Disconnect power before performing any maintenance or cleaning on electrical parts.
- This product is intended for indoor use only.

3. PACKAGE CONTENTS

Verify that all parts are included in your package. If any parts are missing or damaged, contact customer support immediately.

- Medicine Cabinet Unit with Integrated Mirror and LED Lights
- Adjustable Shelves (Quantity: 4)
- Mounting Hardware (screws, anchors, etc.)
- Instruction Manual



Image 3.1: The product is shipped in a single package. Ensure the package is intact upon delivery.

4. SPECIFICATIONS

Feature	Detail
Model Number	834-418V80
Overall Dimensions (D x W x H)	6" x 23.5" x 25.5" (15.24 cm x 59.69 cm x 64.77 cm)
Material	Engineered Wood, Glass
Color	White
Weight Capacity (Total)	33 lbs (15 kg)
Weight Capacity (Shelf)	11 lbs (5 kg)
Number of Shelves	4 (3 adjustable levels inside cabinet)
LED Light Color Temperature	6500K White
Power Source	USB (Adapter not included)
Mounting Type	Wall Mount
Special Features	Dimmable LED, Touch Sensor, Memory Function, USB Charge Port, Soft-Close Door



Image 4.1: Key dimensions of the medicine cabinet: 25.5" H x 6" D x 23.5" W.

5. SETUP & INSTALLATION

Assembly is required for this product. Follow the detailed instructions provided in the separate assembly guide included with your package. Ensure you have all necessary tools before starting.

5.1 Wall Mounting

1. Choose a suitable location on a sturdy wall, ensuring there are no hidden electrical wires or plumbing.
2. Mark the desired mounting height and positions for the wall anchors/screws using a level.
3. Drill pilot holes and insert wall anchors if necessary, according to your wall type.
4. Securely attach the cabinet to the wall using the provided mounting hardware.

5.2 Shelf Adjustment

The internal shelves are adjustable to three different levels. To adjust a shelf:

1. Remove any items from the shelf.
2. Carefully lift the shelf to disengage it from the support pins.
3. Relocate the support pins to the desired height.

4. Place the shelf back onto the support pins, ensuring it is level and secure.

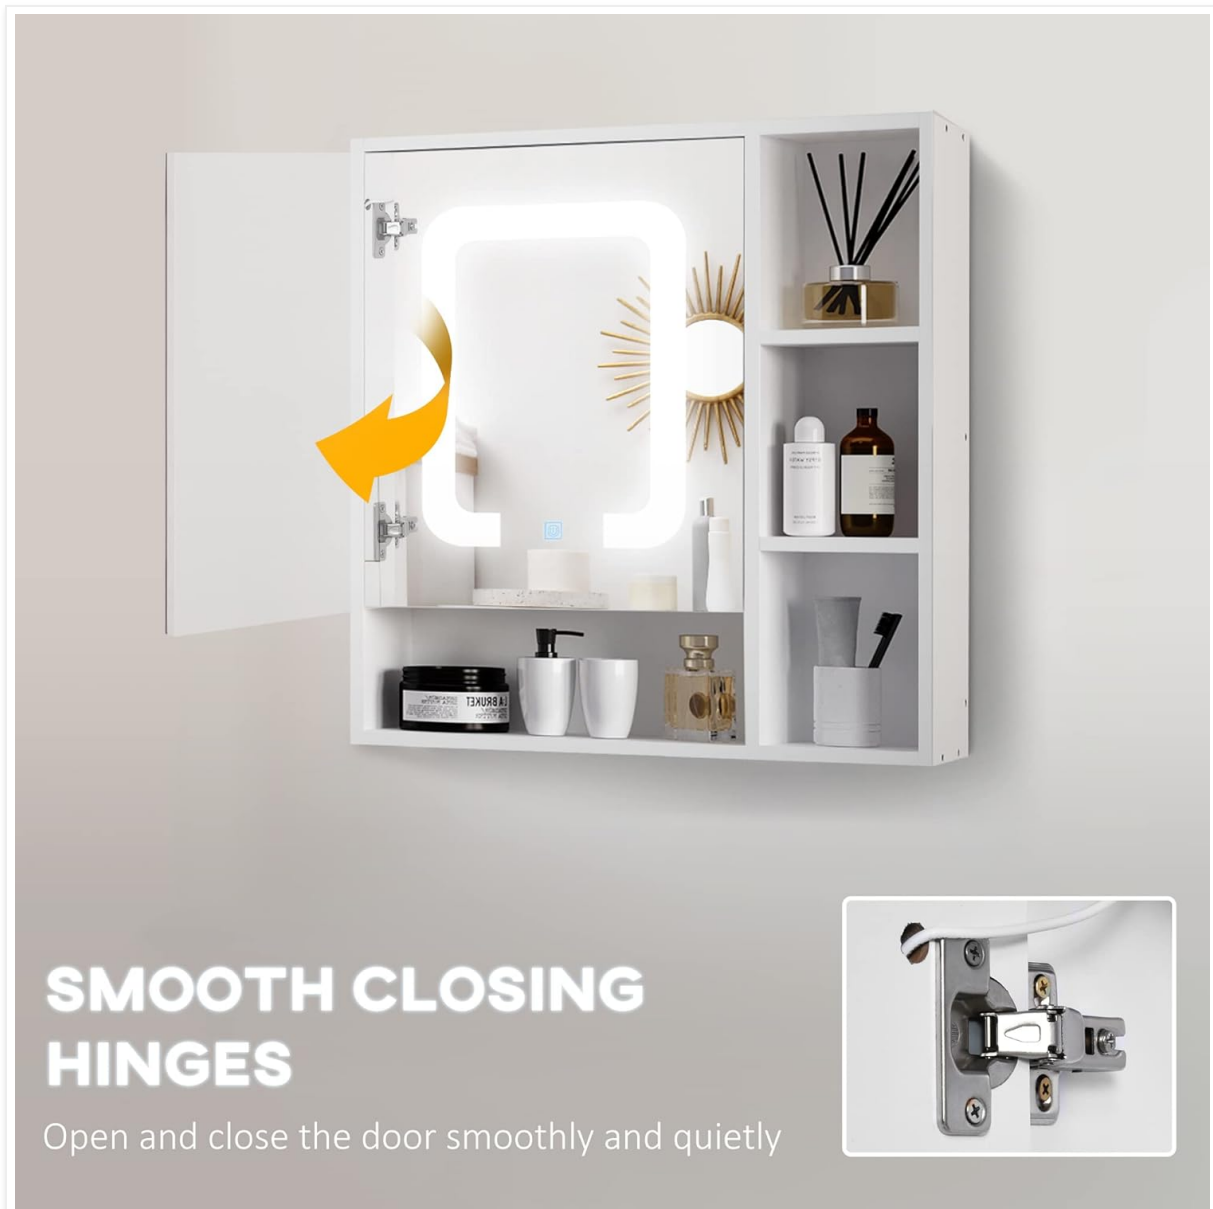


Image 5.1: The adjustable shelf can be moved up or down in 1.25-inch increments to accommodate various item sizes.

6. OPERATION

6.1 LED Lighting

The cabinet features integrated 6500K white LED lighting with smart touch control.

- **Power On/Off:** Touch the power icon on the mirror surface to turn the LED lights on or off.
- **Dimmer Brightness:** Press and hold the power icon to adjust the brightness level. Release when the desired brightness is reached.
- **Memory Function:** The light system will remember your last brightness setting for convenience.



Image 6.1: The mirror features smart touch controls for dimmable 6500K white LED lighting and a memory function. The unit is USB powered; an adapter is not included.

6.2 USB Charging

A USB port is integrated into the cabinet for convenient charging of small electronic devices. Connect your device's USB cable to the port. Note that a USB power adapter is required and not included with the cabinet.



Image 6.2: The USB power input for the LED lights and charging port is located on the side of the cabinet.

6.3 Soft-Close Door

The cabinet door is equipped with soft-closing hinges to prevent slamming and ensure quiet operation. This mechanism also helps protect the cabinet and its contents from impact.

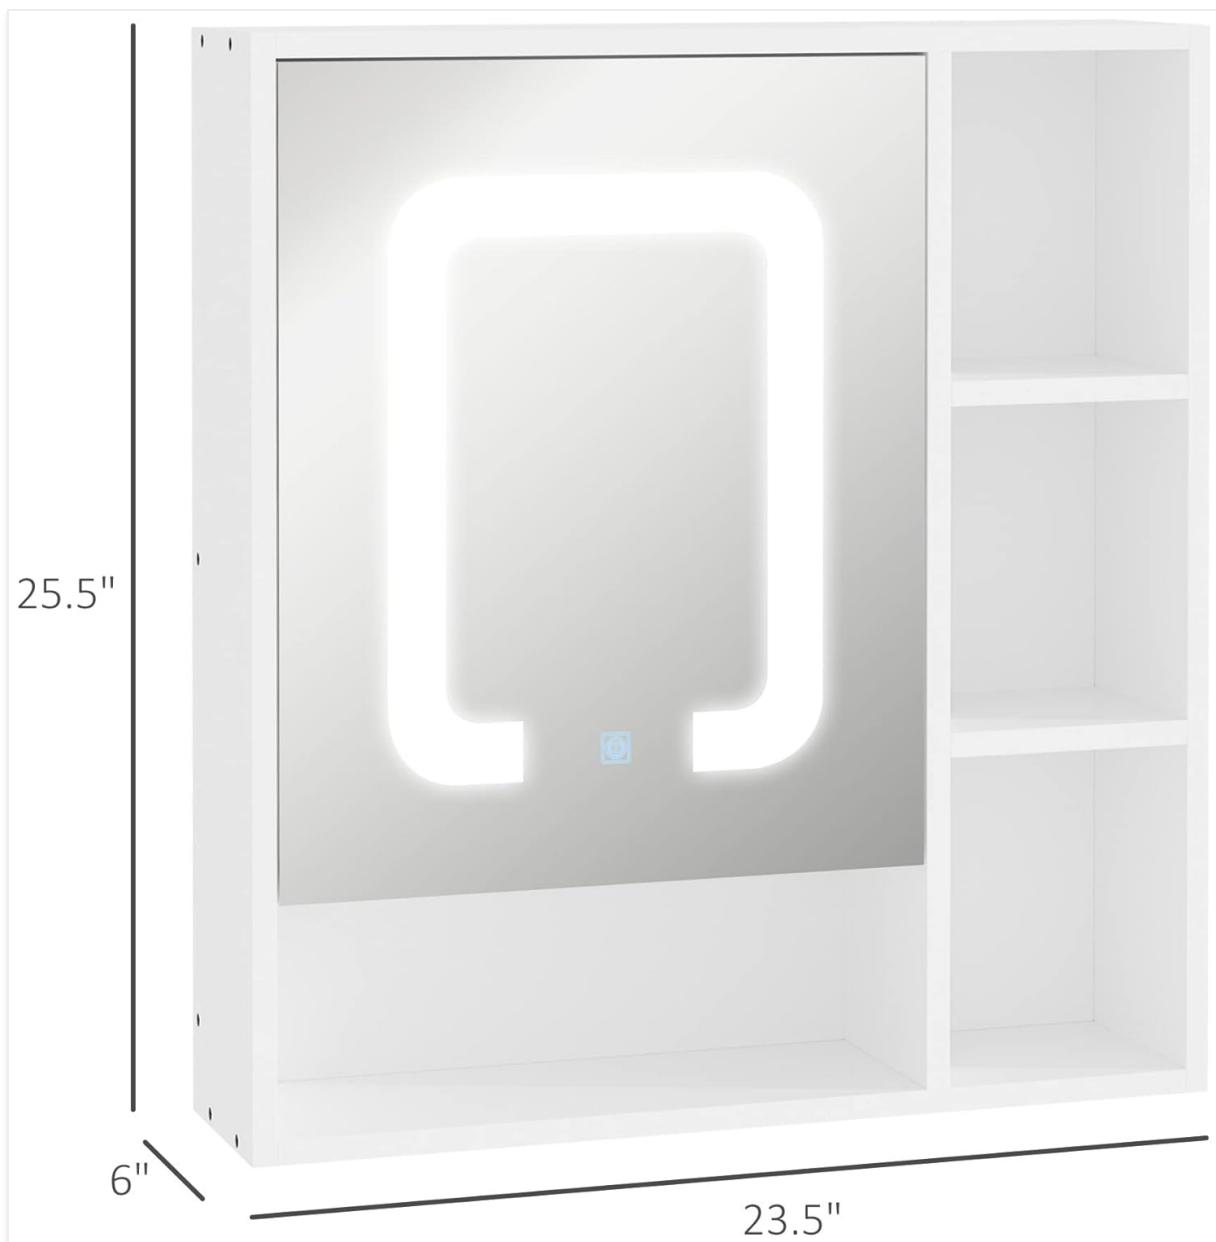


Image 6.3: The cabinet door features smooth closing hinges for quiet and gentle operation.

7. MAINTENANCE

To ensure the longevity and appearance of your medicine cabinet, follow these maintenance guidelines:

- **Cleaning:** Wipe clean with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish or mirror surface.
- **Mirror Care:** Use a glass cleaner specifically designed for mirrors. Spray cleaner onto a cloth, not directly onto the mirror, to prevent liquid from seeping into edges.
- **Electrical Components:** Ensure the unit is unplugged from its USB power source before cleaning around the LED lights or USB port.
- **Hinges:** Periodically check hinges for tightness and smooth operation. Tighten screws if necessary.

8. TROUBLESHOOTING

If you encounter issues with your kleankin Lighted Medicine Cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
LED lights do not turn on.	No power, loose connection, faulty USB adapter.	Ensure USB cable is securely connected. Try a different USB power adapter. Verify power outlet is functional.
LED lights are too dim or too bright.	Brightness setting needs adjustment.	Press and hold the touch sensor on the mirror to adjust brightness.
Door does not close smoothly.	Hinges are loose or misaligned.	Check and tighten hinge screws. Ensure cabinet is level.
USB charging port not working.	No power, faulty USB cable, device incompatibility.	Ensure cabinet is powered. Try a different USB cable or device.

If the problem persists after attempting these solutions, please contact [kleankin customer support](#).

9. WARRANTY & SUPPORT

For warranty information, product support, or to order replacement parts, please contact the retailer or manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Aosom LLC

For further assistance, visit the [kleankin Store on Amazon](#).