

[Manuals.plus](#) /

› [OmySalon](#) /

› OmySalon Hydraulic Tattoo Chair Esthetician Bed SBWP-B Instruction Manual

OmySalon SBWP-B

OmySalon Hydraulic Tattoo Chair Esthetician Bed SBWP-B Instruction Manual

Model: SBWP-B

1. PRODUCT OVERVIEW

The OmySalon Hydraulic Tattoo Chair Esthetician Bed is a multi-purpose 3-section facial bed table designed for professional use in beauty salons, spas, and tattoo studios. It features adjustable components and a sturdy construction to provide comfort and versatility for various services.



Image 1.1: The OmySalon Hydraulic Tattoo Chair Esthetician Bed shown in different configurations.

2. SAFETY INFORMATION

WARNING: This product requires assembly. Follow the provided instructions carefully to avoid injury. Do not attempt to operate or adjust the height while in use. Ensure the product is fully assembled and stable before use. Do not exceed the weight capacity of 440 pounds. Keep children and pets away from the product during assembly and use. Always supervise children when they are near the product.

3. PRODUCT COMPONENTS

The OmySalon Hydraulic Tattoo Chair Esthetician Bed consists of several key components designed for functionality and durability:

- **Removable Armrests:** For client comfort and versatility.

- **Removable & Comfortable Headrest:** Features a face hole for prone positions.
- **High Quality & Soft PU Material:** Durable, waterproof, scratch-resistant, and easy to clean.
- **Heavy-Duty Steel Frame:** Provides stability and supports up to 440 pounds.
- **Hydraulic Pump:** Allows for height adjustment of the bed.
- **Anti-Skid Footpads:** Ensures stability and prevents movement during use.



Image 3.1: Detailed view of the product's main features and components.

4. ASSEMBLY INSTRUCTIONS

The salon bed is designed for quick and easy setup. Please follow the provided installation instructions carefully. The item is delivered in two separate boxes, which may arrive at different times. Begin assembly only after receiving both boxes.

Package Contents:


- **Box 1:** Chair Base, Backrest, Footrest, Armrest
- **Box 2:** Hydraulic Pump, Steel Frame

Package Details

Comes in 2 boxes

BOX 1

Chair Base + Backrest +Footrest +Armrest

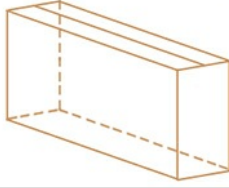

BOX 2

Hydraulic Pump + Steel Frame




Image 4.1: The product is shipped in two distinct packages.

Refer to the detailed assembly guide included in your packaging for step-by-step instructions and diagrams.

5. OPERATING INSTRUCTIONS

The OmySalon Hydraulic Tattoo Chair Esthetician Bed offers several adjustable features for optimal client positioning and comfort:

- **Hydraulic Height Adjustment:** The bed is equipped with a hydraulic pump allowing for height adjustments up to 6 inches. Use the foot pedal to raise or lower the bed to the desired working height.
- **360-Degree Swivel:** The bed can swivel 360 degrees, providing flexibility for various procedures. A locking mechanism is included to secure the bed in place.
- **Adjustable Backrest:** The backrest can be easily adjusted from 0° (flat) up to 65° to accommodate different client needs and services.
- **Adjustable Footrest:** The footrest can be adjusted from 0° (flat) down to 45°, allowing for comfortable leg positioning.

360° Rotation



Image 5.1: The bed's 360-degree rotation capability.

Adjustable Backrest & Footrest



Image 5.2: The backrest adjusts up to 65° and the footrest adjusts down to 45°.

6. MAINTENANCE

To ensure the longevity and hygiene of your OmySalon Hydraulic Tattoo Chair Esthetician Bed, follow these care instructions:

- **Cleaning:** Wipe the faux leather surfaces with a dry cloth after each use. For deeper cleaning, use a mild disinfectant solution and wipe dry immediately. Avoid abrasive cleaners or solvents that may damage the material.
- **Inspection:** Regularly inspect all moving parts, bolts, and connections to ensure they are secure. Tighten any loose components as needed.
- **Hydraulic System:** Periodically check the hydraulic pump for smooth operation. If any issues arise, consult a qualified technician.

7. SPECIFICATIONS

Feature	Detail
Model Number	SBWP-B
Material	Faux Leather
Color	Black
Product Dimensions	73 x 27.6 x 29.1 inches (L x W x H)
Item Weight	94.8 pounds
Weight Capacity	440 pounds
Backrest Adjustment	0° to 65°
Footrest Adjustment	0° to 45°
Height Adjustment Range	Max 6 inches (Hydraulic)
Rotation	360° with locking mechanism

Product Dimensions



Image 7.1: Product dimensions for planning space requirements.

8. TROUBLESHOOTING

If you encounter any issues with your OmySalon Hydraulic Tattoo Chair Esthetician Bed, please refer to the following general troubleshooting tips:

- **Difficulty Adjusting Height:** Ensure the hydraulic pump is functioning correctly and that no obstructions are preventing movement. Check for any leaks in the hydraulic system.
- **Unstable Bed:** Verify that all assembly bolts are securely tightened. Ensure the anti-skid footpads are properly positioned on a flat, stable surface.
- **Swivel Mechanism Issues:** Check if the locking mechanism is disengaged for rotation. If rotation is stiff, ensure the base is clean and free of debris.

For persistent problems or issues not covered here, please contact OmySalon customer support.

9. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or technical support, please refer to the warranty card included with your purchase or visit the official OmySalon website. Keep your purchase receipt as proof of purchase for any warranty claims.