



[Manuals.plus](#) /

> [Wordcam](#) /

> Wordcam XL Interior Cat Door Instruction Manual

Wordcam Wordcam

Wordcam XL Interior Cat Door Instruction Manual

Model: Wordcam

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Wordcam XL Interior Cat Door. Designed for convenience and durability, this cat door allows your feline companions to move freely between rooms while restricting access for larger pets. Please read this manual thoroughly before installation and use to ensure proper function and safety.

SAFETY INFORMATION

- Always use appropriate safety gear, such as eye protection and gloves, when using power tools for installation.
- Ensure the door is stable and secured before cutting to prevent injury or damage.
- Keep small children and pets away from the work area during installation.
- Verify that the installation location does not interfere with electrical wiring, plumbing, or structural components within the door.
- The cat door is designed for pets up to 20-25 lbs. Do not allow pets exceeding this weight limit to use the door.

PACKAGE CONTENTS

Please check the package to ensure all components are present and undamaged:

- Cat Door (2 halves)
- Mounting Screws (long and short sets)
- Screw Caps
- Spacers (for varying door thicknesses)
- Cutting Template



Image: All components included in the Wordcam XL Interior Cat Door package.

SPECIFICATIONS

External Dimensions	12.4" (31cm) x 10.63" (27cm) x 2.44" (5.5cm)
Pass-Through Opening	8.46" (21.5cm) x 7.87" (20cm)
Compatible Door Thickness	0.8" - 1.78"
Material	Acrylonitrile Butadiene Styrene (ABS) Plastic
Weight Limit	Up to 25 lbs (for larger cats)
Color	White

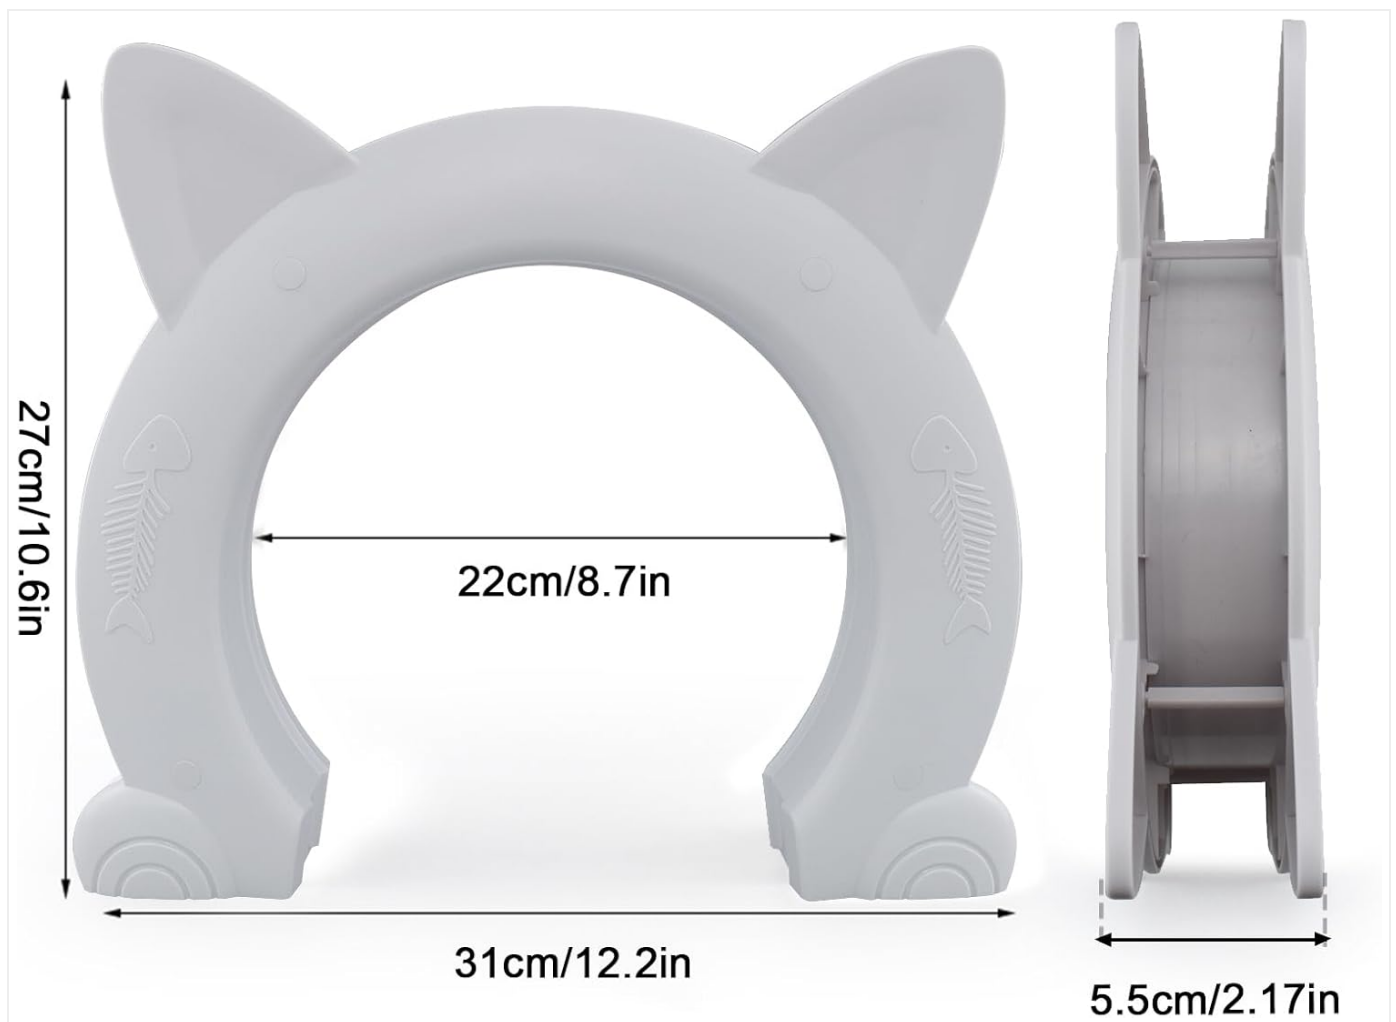


Image: Detailed dimensions of the cat door.

INSTALLATION GUIDE

This section provides step-by-step instructions for installing your Wordcam XL Interior Cat Door. A cutting template is included to simplify the process.

Tools Required:

- Pencil
- Tape Measure
- Jigsaw or Electric Saw
- Drill
- Screwdriver

Installation Steps:

1. **Prepare the Cat Door and Door:** Unpack the cat door and its components. Ensure all parts are present and undamaged. If possible, remove the door from its hinges for easier installation. If removing the door, use a flat screwdriver to lift hinge pins and tap upwards with a hammer. Support the door securely to prevent damage or injury.
2. **Mark the Cutting Area:** Lay the door flat on a sturdy work surface. Position the provided cutting template on the desired location on the door. Ensure the template is aligned correctly and draw the outline onto the door using a pencil. The ideal height for the bottom of the opening is typically a few inches from the floor, depending on your cat's size.

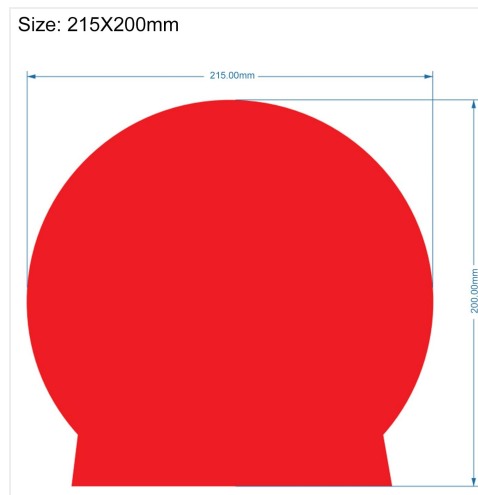


Image: Cutting template for the cat door opening.

- Cut the Opening:** Carefully use an electric saw or jigsaw to cut along the drawn outline. Take your time to ensure a clean and precise cut.
- Prepare the Cat Door Halves:** The cat door is designed with a "cuttable range" to accommodate various door thicknesses (0.8" - 1.78"). If your door is thinner than the maximum thickness, you may need to cut the inner edges of the cat door halves along the designated cutting tracks to ensure a flush fit.

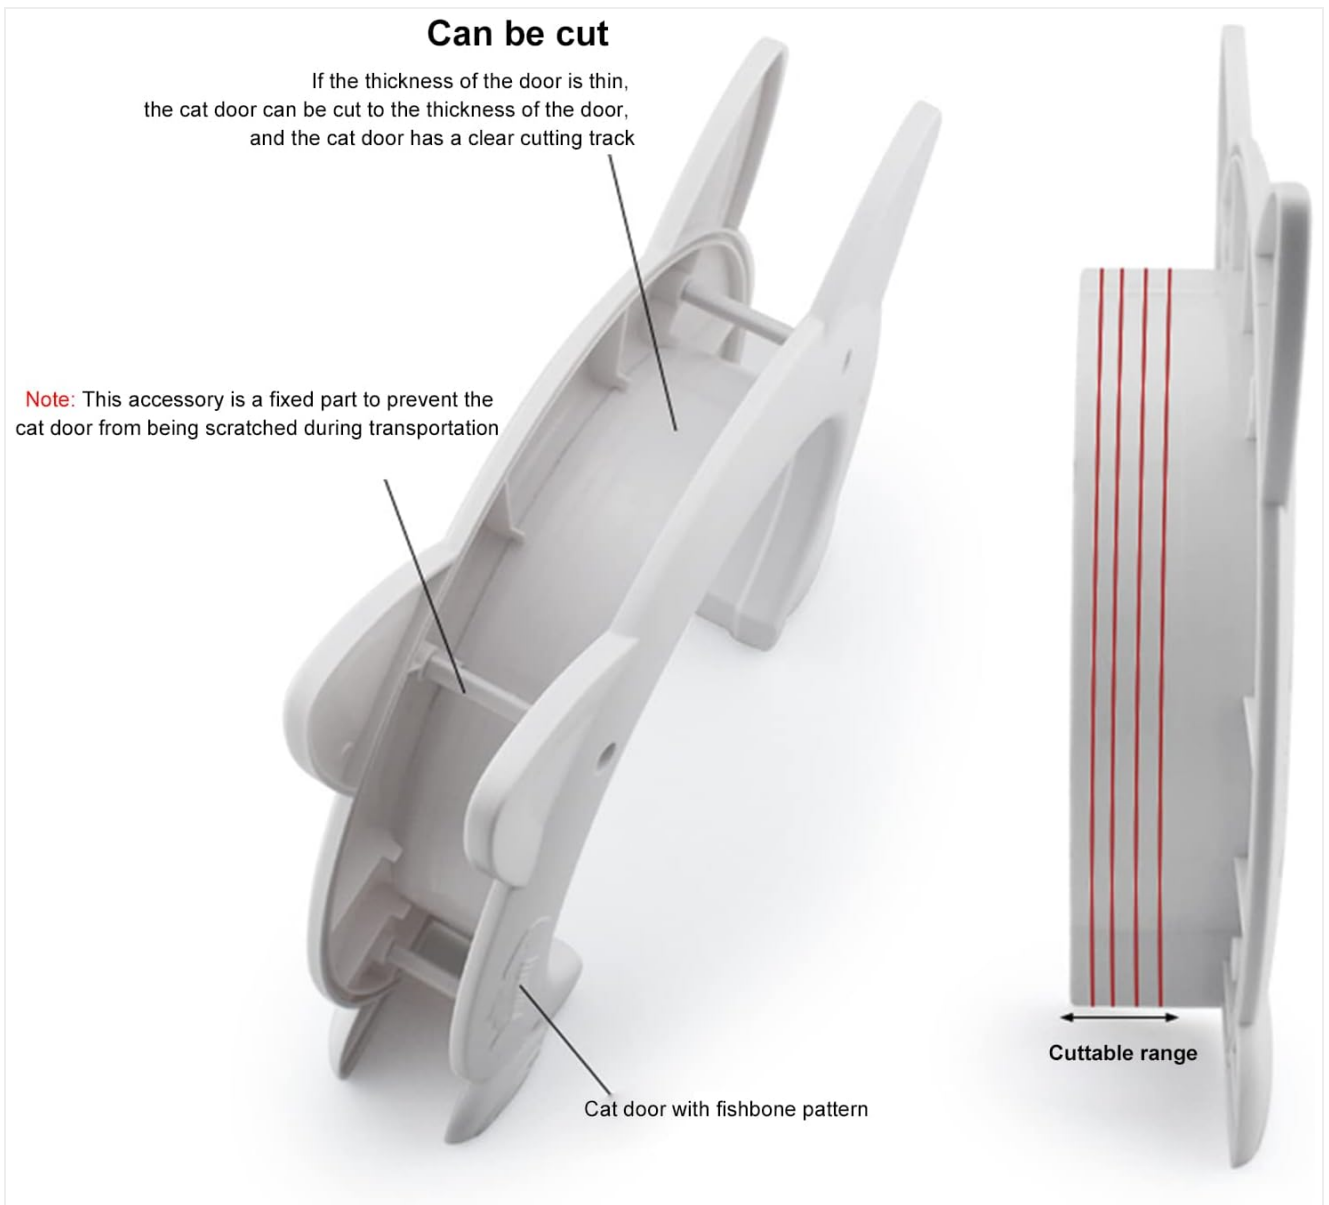




Image: Cat door halves showing the cuttable range for door thickness adjustment.

5. **Position and Mark Screw Holes:** Place one half of the cat door into the cut opening. Using a pencil, mark the positions for the screw holes on the door.
6. **Drill Pilot Holes:** Using a drill, create pilot holes at the marked locations. Ensure the drill bit size is appropriate for the screws to prevent splitting the door material.
7. **Install the Cat Door:** Insert the cat door halves into the opening, aligning the screw holes. Use the appropriate length screws (long for thicker doors, short for thinner doors) to secure the front and back halves together through the door. Do not overtighten. If your door is thinner, use the provided spacers to ensure a snug fit and prevent the door from bending.
8. **Finish Installation:** Once secured, place the screw caps over the screw heads for a clean finish. Re-hang the door if it was removed.


Tools used: pencil, size, chainsaw, drill, screwdriver, tape measure





1. Take out and disassemble the cat door, check the parts and templates, and confirm whether there is any that missing or damaged.

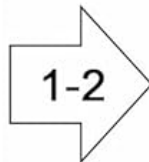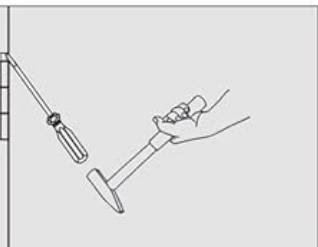
2. Remove the door from the doorway by pulling hinge pins. **HINT:** Position a flat screwdriver to catch the top of the pin and tap upward with a hammer. Begin with the bottom hinge and work upwards. Be sure to support the door so it does not fall and cause damage or injury.

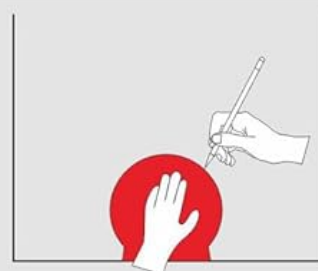



3. Lay the door down on a sturdy work surface. Double-check that you are working on the bottom of the door. Align the template with the bottom of the door and draw a line along the edge of the template.

4. Use an electric saw or other saws to cut out the size of the hole required to install the cat door along the drawn mark.

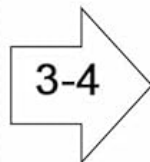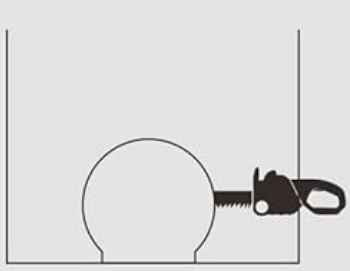

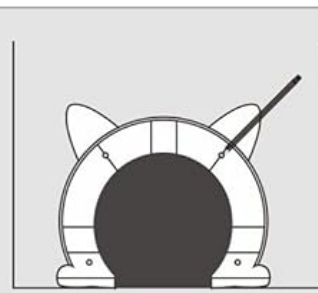5. Put on the cat door, insert a pencil from the screw hole of the product and determine the drilling position on the door.

6. After marking the drilling location, use an electric drill to drill four holes.

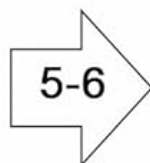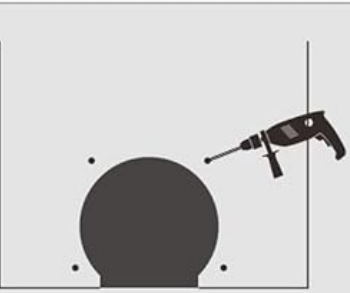

7. Install the cat door, insert and tighten the screws in each of the 4 holes. Do not over-tighten screws.
HINT: We recommend you use long screws on the front and short screws on the back. Please use suitable screws according to the thickness of your door. Then insert a screw cap cover into each hole.



8. The installation is complete, if you have any questions, please do not hesitate to contact us and we shall be very willing to solve the problem for you! Thank you for your trust and

Image: Visual representation of the installation process.



Image: The Wordcam XL Interior Cat Door installed and in use.

OPERATING INSTRUCTIONS

The Wordcam XL Interior Cat Door is designed for barrier-free access. Once installed, your cat can freely pass through the opening. No specific operation is required.

- Ensure the path through the cat door is clear of obstructions.
- Monitor your pet initially to ensure they adapt to using the new door.

MAINTENANCE

To ensure the longevity and cleanliness of your cat door:

- Regularly wipe the cat door with a damp cloth to remove dust and pet hair.
- For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid abrasive cleaners.
- Inspect the door for any signs of wear or damage periodically.
- Ensure all screws remain tight. Retighten if necessary, but do not overtighten.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cat is hesitant to use the door.	Unfamiliarity, initial apprehension.	Encourage your cat with treats or toys to pass through. Allow time for adjustment.
Door feels loose after installation.	Screws not fully tightened, incorrect screw length, or missing spacers.	Ensure screws are tightened appropriately. Verify correct screw length for door thickness. Use spacers if the door is thin.
Edges of the opening are rough.	Imprecise cutting during installation.	Carefully sand down any rough edges before installing the cat door. The cat door frame should cover minor imperfections.

WARRANTY AND SUPPORT

Wordcam is committed to providing high-quality pet products and exceptional customer service. If you encounter any issues with your Wordcam XL Interior Cat Door or have questions, please do not hesitate to contact us. We are always happy to help and aim to respond within 24 hours.

For support, please refer to the contact information provided with your purchase or visit the official Wordcam website.

