

ASHATA ASHATAwtf0rkq94y554-11

ASHATA M9 Smart Instant Language Translator User Manual

Model: ASHATAwtf0rkq94y554-11

1. INTRODUCTION

Thank you for choosing the ASHATA M9 Smart Instant Language Translator. This device is designed to facilitate seamless communication across language barriers with its advanced translation capabilities. It supports a wide range of online and offline languages, along with photo translation, making it an indispensable tool for travel, business, and learning.

Key features include:

- **109 Online Languages:** High accuracy real-time two-way translation.
- **12 Offline Languages:** Essential translation without internet access.
- **43 Photo Translation Languages:** Translate text from images using the built-in camera.
- **3-inch Touchscreen:** Intuitive user interface for easy navigation.
- **1500mAh Battery:** Long-lasting power for extended use.



Image: The ASHATA M9 Smart Instant Language Translator, showcasing its sleek design and touchscreen interface.

2. SETUP

2.1 Charging the Device

Before first use, fully charge the translator. Connect the provided USB cable to the device's charging port and plug the other end into a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.



***109 online languages supported
Real time two way translation***



Image: The ASHATA M9 Translator connected to its charging cable, illustrating the charging process.

2.2 Powering On/Off

To power on, press and hold the power button located on the side of the device until the screen lights up. To power off, press and hold the power button until the power-off options appear on the screen, then select 'Power Off'.

2.3 Network Connection (Wi-Fi)

For online translation features, connect the device to a Wi-Fi network:

1. From the home screen, tap on the 'Settings' icon.
2. Select 'Wi-Fi' and toggle it on.
3. Choose your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap 'Connect'.

2.4 Language Selection and Offline Packages

Set your preferred system language and download offline language packages:

1. Go to 'Settings' and then 'Language'. Select your desired system language.
2. For offline translation, navigate to 'Offline Package Management' in the settings.
3. Select the languages you wish to download for offline use. Ensure you have a stable Wi-Fi connection during download.

3. OPERATING INSTRUCTIONS

3.1 Real-Time Two-Way Translation

The device provides instant voice and text translation for conversations:

1. From the home screen, tap the 'Translate' icon.
2. Select the source and target languages for translation.
3. Press and hold the microphone button corresponding to the language you will speak. Speak clearly into the device.
4. Release the button, and the device will translate and speak the translation aloud, also displaying it on the screen.



109 online languages supported
Real time two way translation
12 offline languages
43 photography languages
Support WIFI, take pictures, record

Image: The ASHATA M9 Translator in use, showing a real-time two-way translation on its screen.

3.2 Offline Translation

For situations without internet access, use the pre-downloaded offline language packages:

- Ensure you have downloaded the necessary offline language packages as described in Section 2.4.
- The device will automatically switch to offline translation mode if no Wi-Fi connection is available for supported languages.
- Proceed with translation as you would for online translation. Note that offline translation may have slightly reduced accuracy compared to online translation.

3.3 Photo Translation

Translate text from images using the built-in 5-megapixel camera:

1. Tap the 'Photo Translate' icon on the home screen.
2. Position the camera over the text you wish to translate. Ensure good lighting and focus.
3. Tap the capture button on the screen.

4. Select the source and target languages for the text in the image. The translated text will appear on the screen.



Image: The ASHATA M9 Translator displaying text translated from a photograph.

3.4 User Interface and Controls

The device features a 3-inch touchscreen for navigation. Additionally, a central control dial allows for volume adjustment and menu navigation. The microphone buttons are integrated for voice input.

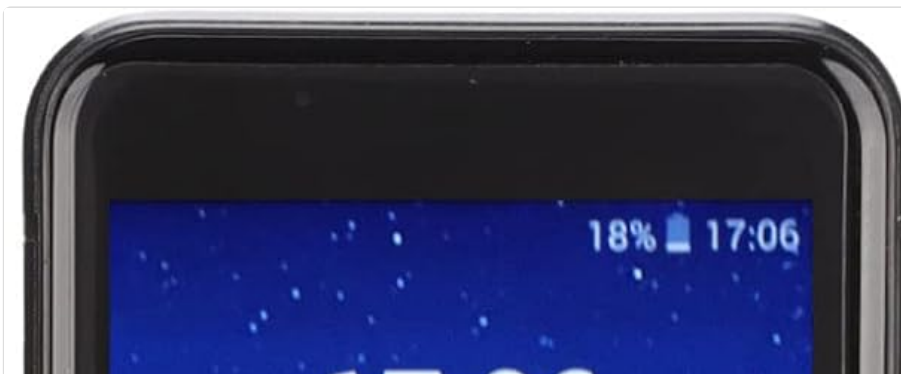




Image: A close-up view of the ASHATA M9 Translator's central control dial and surrounding buttons.

4. MAINTENANCE

4.1 Cleaning

To clean the device, gently wipe the screen and body with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or abrasive materials, as these can damage the device.

4.2 Storage

Store the translator in a cool, dry place away from direct sunlight and extreme temperatures. When storing for extended periods, ensure the battery is partially charged (around 50%) to maintain battery health.

4.3 Battery Care

The device is equipped with a 1500mAh lithium battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Do not expose the device to temperatures above 45°C (113°F) or below 0°C (32°F).
- If the device will not be used for a long time, charge it to about 50% every few months.

5. TROUBLESHOOTING

5.1 Common Issues and Solutions

Issue	Possible Cause	Solution
Device does not turn on	Low battery; System crash	Charge the device for at least 30 minutes. If still unresponsive, perform a soft reset (refer to manual for specific reset instructions if available, otherwise hold power button for 10-15 seconds).
Translation inaccuracy	Poor diction; Background noise; Outdated software; Complex sentence structure	Speak clearly and at a moderate pace. Reduce background noise. Ensure device software is updated via Wi-Fi. Simplify sentences if possible.
Cannot connect to Wi-Fi	Incorrect password; Out of range; Network issue	Double-check Wi-Fi password. Move closer to the Wi-Fi router. Restart the Wi-Fi router.
Photo translation not working	Poor lighting; Blurry image; Unsupported language	Ensure adequate lighting. Hold the device steady to avoid blur. Verify the language is supported for photo translation.

6. SPECIFICATIONS

- **Model:** ASHATAwtf0rkq94y554-11
- **Display:** 3-inch Touchscreen
- **Online Languages:** 109
- **Offline Languages:** 12
- **Photo Translation Languages:** 43
- **Camera:** 5 Megapixel (with autofocus and flashlight)
- **Battery:** 1500mAh Lithium Battery
- **Continuous Translation Time:** Up to 8 hours
- **Standby Time:** Up to 7 days (sleep mode)
- **Connectivity:** Wi-Fi, Bluetooth
- **Dimensions:** Approximately 6.3 x 3.54 x 1.97 inches
- **Weight:** Approximately 8.1 ounces
- **Manufacturer:** ASHATA
- **Country of Origin:** China

7. WARRANTY AND SUPPORT

This ASHATA M9 Smart Instant Language Translator is manufactured by ASHATA. For warranty information, please refer to the warranty card included with your purchase or contact ASHATA customer support directly. Keep your proof of purchase for any warranty claims.

For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact the manufacturer or your retailer. You may find contact information on the product packaging or the official ASHATA website.

© 2024 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question