

[Manuals.plus](#) /

› [UOGIC](#) /

› UOGIC Stylus Pen AC10-CP Instruction Manual

UOGIC AC10-CP

UOGIC Stylus Pen AC10-CP Instruction Manual

Model: AC10-CP

1. INTRODUCTION

The UOGIC Stylus Pen AC10-CP is designed to enhance your iPad experience, offering precise control, natural writing, and convenient features. This manual provides comprehensive instructions for setup, operation, and maintenance to ensure optimal performance.

2. WHAT'S INCLUDED

Upon unboxing your UOGIC Stylus Pen, you should find the following items:

- 2x UOGIC Stylus Pen
- 2x Replacement Nibs
- 1x USB-C Charging Cable
- 1x User Manual



Figure 1: Contents of the UOGIC Stylus Pen package.

Video 1: An overview of the UOGIC Stylus Pen and its included accessories.

3. SETUP

3.1 Power On/Off

To power on the stylus, gently tap the top button once. The indicator light will illuminate. To power off, press and hold the top button for a few seconds until the light turns off.

3.2 Charging

The UOGIC Stylus Pen features USB-C fast charging. A full charge takes approximately 40 minutes and provides up to 10 hours of continuous use. To charge, remove the protective cap at the top of the stylus to reveal the USB-C port, then connect the provided USB-C cable to a power source.

Fast Charging and Long Standby

- 5C fast charging
Charging 1 minute and use for 30 minutes
- Smart power saving
Automatically sleep in 1 minute.
Shut down automatically in 20 minutes to save power



- | | | | |
|---|---|---|---|
|  Power on
Green Led Light on |  Charging
Red LED light on |  Power off
The green light off |  Charging Finish
Red LED light off |
|---|---|---|---|

Figure 2: Charging port location and indicator light meanings.

3.3 Pairing (Bluetooth)

Connect the UOGIC Stylus to your iPad via Bluetooth to enable battery level display in your iPad’s battery widget and utilize convenient shortcut functions. The stylus automatically powers off after 1 hour of inactivity to conserve energy.

Battery Monitoring & Indicator light



Figure 3: Battery monitoring and indicator light meaning.

4. OPERATING INSTRUCTIONS

4.1 Palm Rejection

The stylus features advanced palm rejection technology, allowing you to rest your hand naturally on the iPad screen while writing or drawing without causing unintended marks. This ensures a fluid and distraction-free creative process.

Support Tilt & Palm Rejection

Feel free to rest your palm on the screen without gloves



Figure 4: Illustrating palm rejection technology during use.

4.2 Tilt Function

The tilt function enables shading effects, similar to a traditional pencil, when the stylus is tilted at an angle. This adds versatility for artistic and note-taking applications.

Tilt Sketch stroke

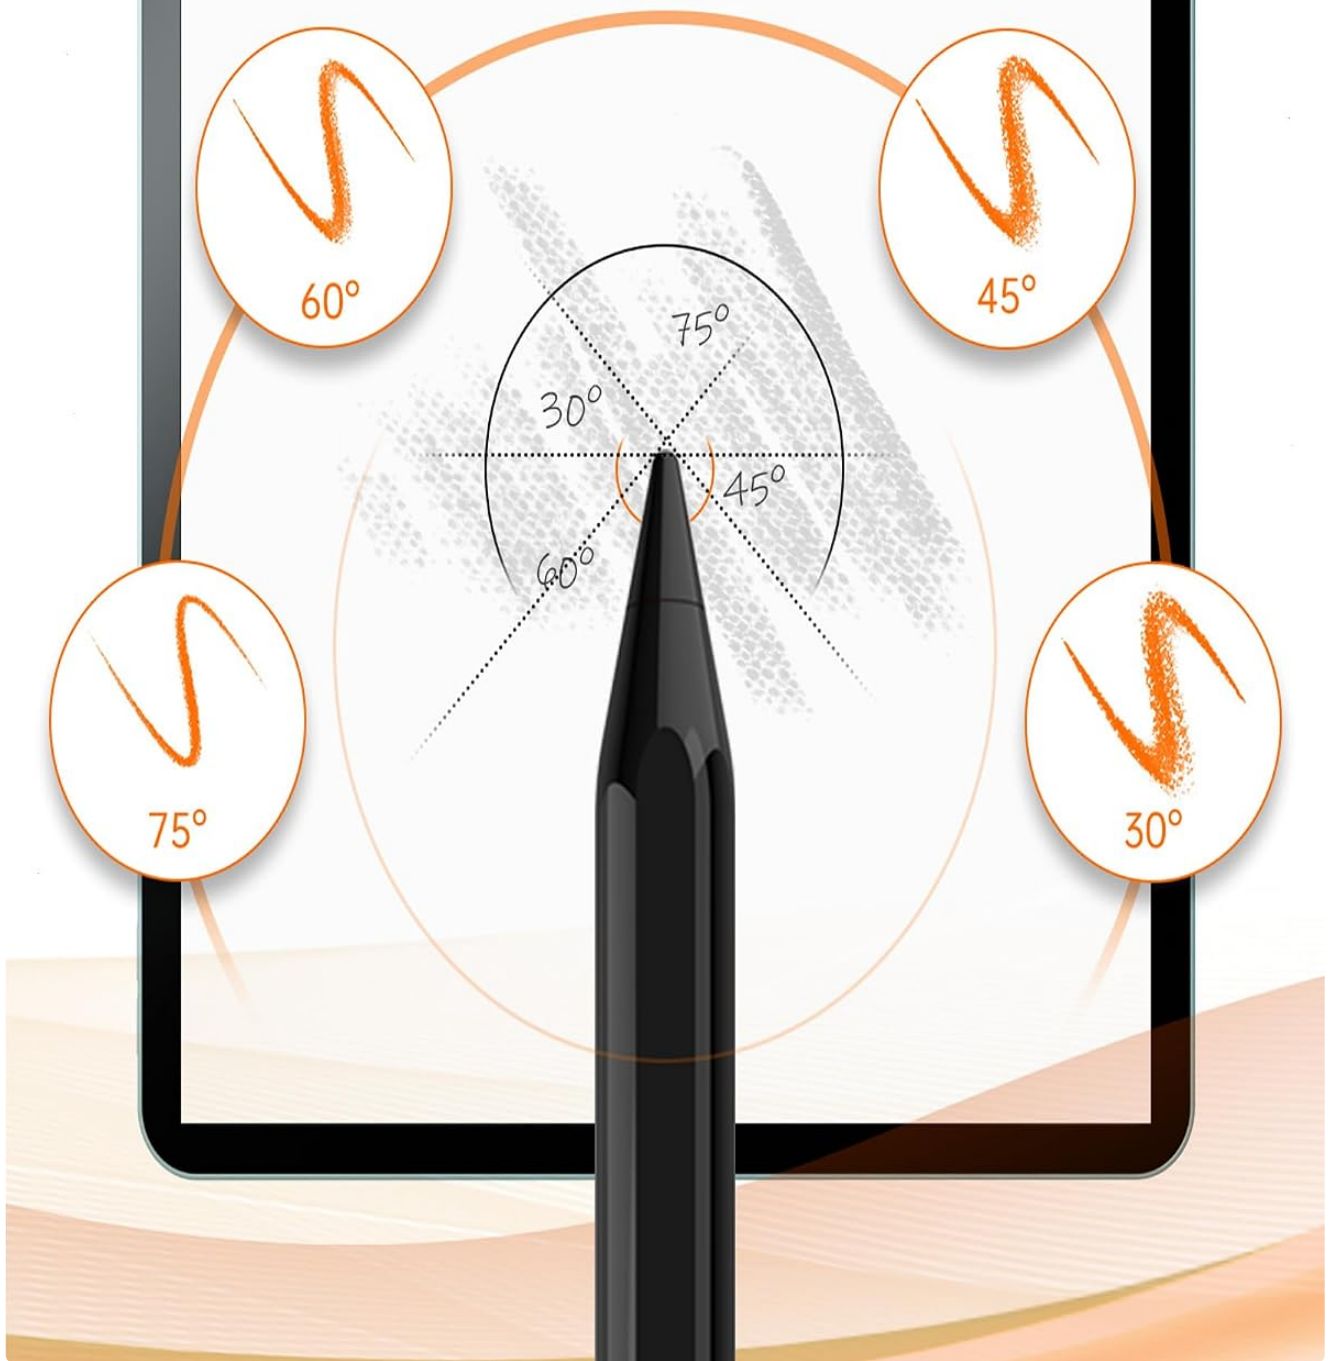


Figure 5: Tilt function for varied stroke effects.

4.3 Convenient Shortcut Functions

Once paired via Bluetooth, the stylus offers quick shortcut functions:

- **Single Press:** Open the task manager.
- **Double-Click:** Take a screenshot.
- **Triple-Click:** Capture a photo.

Handy Bluetooth Shortcut



Click Once
Return to the Main Page



Click Twice
Take a Screenshot



Click Three Times
Take Photos

Figure 6: Shortcut functions for enhanced productivity.

Video 2: Demonstration of the handy Bluetooth shortcut functions of the UOGIC Stylus Pen.

4.4 Precision & Sensitivity

The stylus features a 0.9mm upgraded POM tip for pixel-perfect precision and tilt sensitivity, enhancing your experience for studying, working, drawing, or gaming. This nib is compatible with the Apple Pencil, offering a reliable alternative.

High Accuracy and High Response

The patented structure design of the tip, ensures the high accuracy of writing.

*Accurate to every
pixel writing smoothly*



Figure 7: High accuracy and responsiveness of the stylus tip.

4.5 Magnetic Design

The magnetic design allows you to easily attach the UOGIC iPad Pencil to your compatible iPad device for convenient storage and portability.

Side magnetic adsorption

stylus can make use of its powerful magnetic suction feature to store the pen

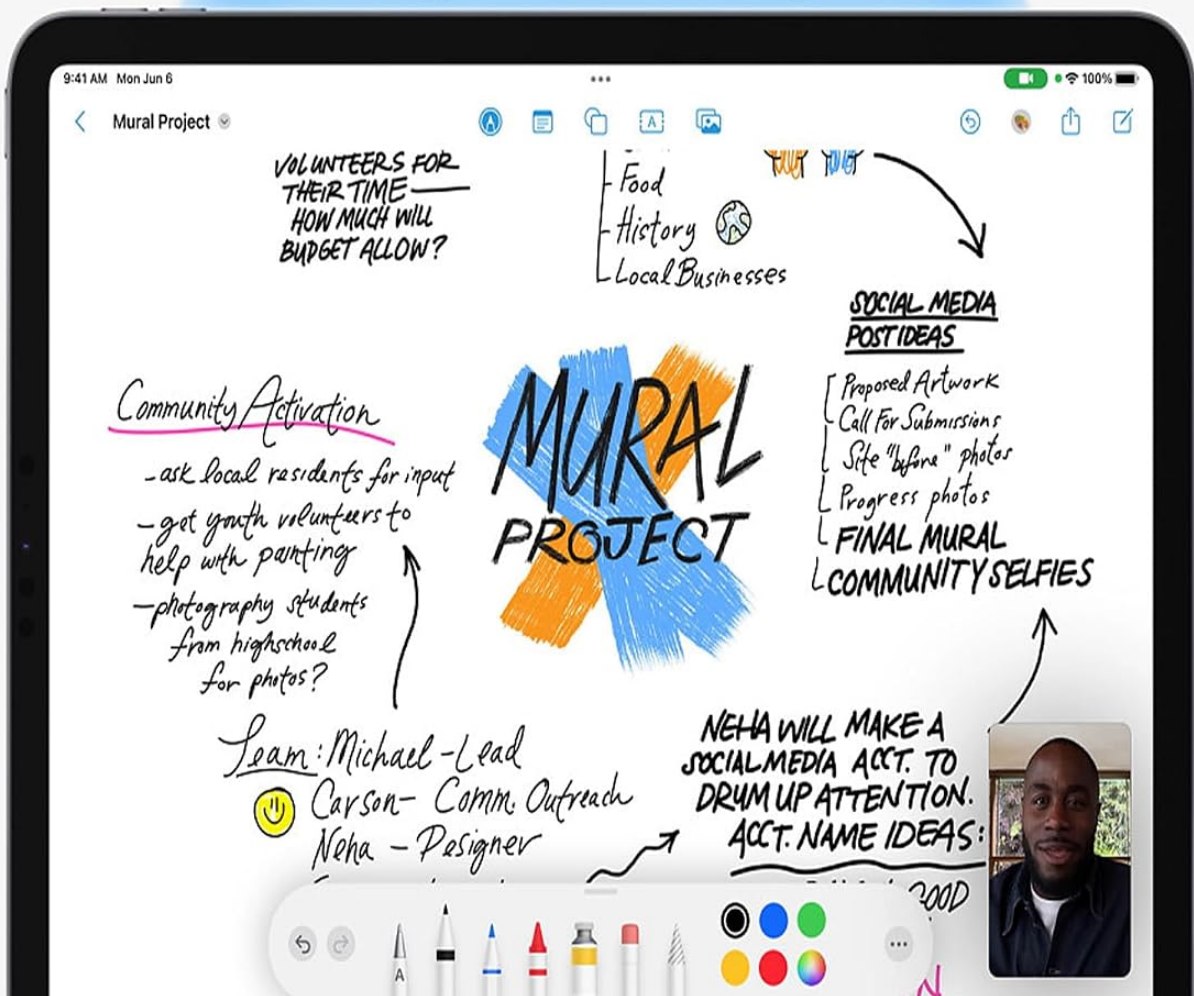


Figure 8: Magnetic adsorption feature for secure attachment to iPad.

5. COMPATIBILITY

The UOGIC Stylus Pen is compatible with a wide range of iPad models. Please ensure your iPad model is listed below:

- iPad (6th/7th/8th/9th/10th generation)
- iPad mini (5th/6th generation)
- iPad Air (3rd/4th/5th generation)

- iPad Air 11"/13" (M2)
- iPad Pro 11"/12.9"
- iPad Pro 11"/13" (M4)

Important: Incompatible with iPad models from 2018 and earlier.

SPECIAL FOR IPAD 2018-2023 VERSIONS

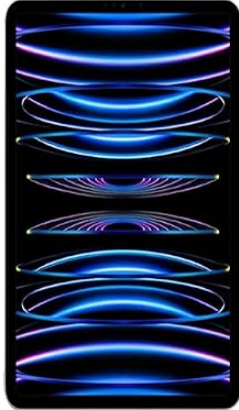
 iPad 6th/7th/8th/9th/10th A2696 A2757 A2777 A2602 A2603 A2604 A2605 A2270 A2428 A2429 A2430 A2197 A2200 A2198 A1893 A1954	 iPad Pro-11" 1st/2nd/3rd /4th generation A2759 A2435 A2761 A2762 A2377 A2459 A2310 A2460 A2228 A2068 A2231 A1980 A2013 A1979
 iPad Air 3rd/4th/5th generation A2588 A2589 A2591 A2316 A2324 A2325 A2072 A2152 A2123 A2154	 iPad Pro-12.9" 3rd/4th/5th/6th generation A2436 A2764 A2437 A2766 A2378 A2461 A2379 A2462 A2229 A2069 A2233 A1876 A2014 A1983
 iPad mini 5th/6th generation A2567 A2568 A2569 A2126 A2133 A2124 A2125	Not Work For: Not available for ipad 2017 and ipad before 2017. iPhone, Android and Microsoft De- vices.

Figure 9: Visual guide to compatible iPad models.

6. MAINTENANCE

6.1 Replacing Nibs

The stylus comes with durable and replaceable POM tips. If the tip becomes worn or damaged, it can be easily replaced. Simply unscrew the old tip and screw on a new one. Two replacement nibs are included in the package.

Durable and Replaceable Tip Design

The tip is made of high wear-resistant material, durable and replaceable.

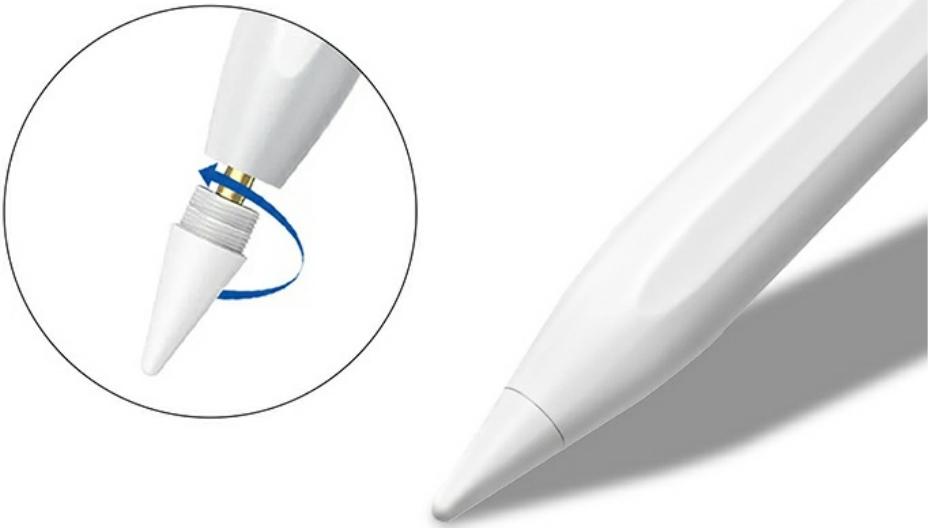


Figure 10: Instructions for replacing the stylus nib.

7. TROUBLESHOOTING

If you encounter any issues with your UOGIC Stylus Pen, please try the following general troubleshooting steps:

- Ensure the stylus is fully charged.
- Verify that Bluetooth is enabled on your iPad and the stylus is paired.
- Restart your iPad and the stylus.
- Check for any physical damage to the stylus tip. Replace if necessary.
- Confirm your iPad model is listed as compatible.

For further assistance, refer to the Warranty and Support section.

8. SPECIFICATIONS

Feature	Detail
Model Number	AC10-CP
Product Dimensions	6.54 x 0.35 x 0.33 inches
Item Weight	0.48 ounces
Battery Type	1 Lithium Polymer battery required

Charging Time	Approx. 40 minutes for full charge
Continuous Use Time	Up to 10 hours
Auto Power-Off	After 1 hour of inactivity
Material	Aluminum
Tip Material	POM (0.9mm)

9. WARRANTY AND SUPPORT

UOGIC products come with a 12-month warranty. For any questions or assistance, our customer support team is available 24/7. Please contact us through the retailer's support channels or visit the official UOGIC website for contact information.

Video 3: A user review highlighting key features and benefits of the UOGIC Stylus Pen.

© 2023 UOGIC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question