



[Manuals.plus](#) /

› [OhO sunshine](#) /

› OhO sunshine Bluetooth Audio Smart Glasses A8 Pro User Manual

OhO sunshine A8 Pro

OhO sunshine Bluetooth Audio Smart Glasses A8 Pro User Manual

Model: A8 Pro

1. INTRODUCTION

Thank you for choosing the OhO sunshine Bluetooth Audio Smart Glasses. These innovative glasses combine stylish eyewear with integrated open-ear audio technology, allowing you to listen to music, make calls, and use voice assistants while staying aware of your surroundings. They feature blue light blocking lenses to protect your eyes from digital screens and are designed for comfort and durability in various activities.

2. PACKAGE CONTENTS

Please ensure all items are present in your package:

- OhO sunshine Bluetooth Audio Smart Glasses (Model A8 Pro)
- USB Charging Cable
- Cleaning Cloth
- Hard Shell Protective Case
- Soft Pouch
- Interchangeable Lenses (Blue Light Blocking, Polarized Sunglasses, Light Tinted)
- Blue Light Test Card and Light



Image: The OhO sunshine Bluetooth Audio Smart Glasses displayed with their included accessories, such as the charging cable, cleaning cloth, and protective cases.

3. PRODUCT OVERVIEW

Familiarize yourself with the key components and controls of your OhO sunshine Smart Glasses:

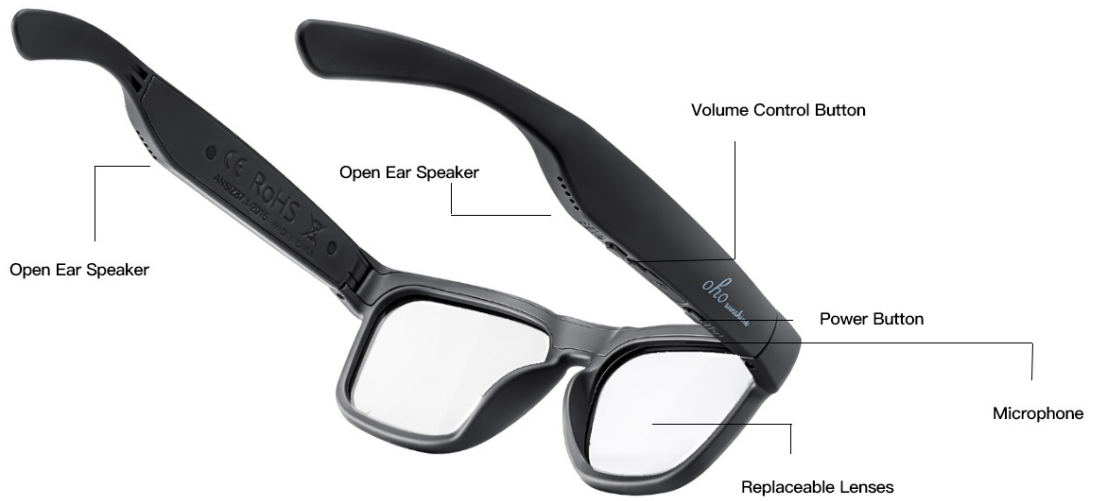


Image: Technical diagram of the OhO sunshine Smart Glasses frame showing labeled parts including volume control button, power button, open ear speakers, microphone, and replaceable lenses.

- **Power Button:** Located on the right temple, used for powering on/off and managing calls.
- **Volume Control Button:** Located on the right temple, used for adjusting volume and skipping tracks.
- **Open Ear Speakers:** Integrated into both temples, providing audio without blocking ambient sounds.
- **Microphone:** Built-in for hands-free calls and voice assistant commands.
- **Charging Port:** Micro USB port located under a protective flap on the right temple.
- **Replaceable Lenses:** Allows for easy swapping between different lens types (blue light blocking, sunglasses).

4. SETUP

4.1 Charging the Glasses

Before first use, fully charge your glasses. The battery provides up to 10 hours of playtime.

1. Locate the charging port under the protective flap on the right temple.
2. Connect the provided USB charging cable to the glasses and a compatible USB power source.
3. The indicator light will show charging status (refer to the full manual for specific light indicators).
4. Once fully charged, disconnect the cable and close the protective flap.

4.2 Bluetooth Pairing

To connect your glasses to a smartphone or other Bluetooth-enabled device:

1. Ensure the glasses are powered off.
2. Press and hold the Power Button on the right temple until you hear a voice prompt indicating "Power On" and then "Pairing Mode". The indicator light will flash.
3. On your smartphone, go to Bluetooth settings and enable Bluetooth.
4. Search for available devices and select "OhO sunshine" or "OhO A8 Pro" from the list.
5. Once connected, you will hear a voice prompt "Connected". The indicator light will stop flashing.
6. For advanced features like translation, download the "Ear Dance" app from your device's app store.

Your browser does not support the video tag.

Video: A demonstration of connecting the OhO sunshine Bluetooth Smart Glasses to a smartphone via Bluetooth, showing the pairing process and app interface.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Press and hold the Power Button for 3 seconds.
- **Power Off:** Press and hold the Power Button for 5 seconds.

5.2 Music Playback

- **Play/Pause:** Single press the Power Button.
- **Volume Up:** Press and hold the Volume Control Button.
- **Volume Down:** (No dedicated button, volume resets to lowest if held down from max, or control via phone).
- **Next Track:** Double press the Volume Control Button.
- **Previous Track:** Triple press the Volume Control Button.

5.3 Call Management

- **Answer Call:** Single press the Power Button.
- **End Call:** Single press the Power Button during a call.
- **Reject Call:** Press and hold the Power Button for 2 seconds during an incoming call.

Your browser does not support the video tag.

Video: A user demonstrating answering a phone call and activating voice control through the OhO sunshine Smart Glasses while driving, highlighting hands-free operation.

5.4 Voice Control (Siri/Google Assistant)

- **Activate Voice Assistant:** Double press the Power Button.
- Once activated, you can speak commands to your device through the glasses' microphone.

5.5 Lens Replacement

The lenses of your OhO sunshine Smart Glasses are interchangeable, allowing you to switch between different types (e.g., blue light blocking, polarized sunglasses). This process is designed to be straightforward.

1. Gently push the lens out from the front of the frame, starting from the top or outer edge.
2. Align the new lens with the frame, ensuring it fits into the groove.
3. Carefully press the new lens into place until it clicks securely.
4. Repeat for the other lens if necessary.

Your browser does not support the video tag.

Video: A detailed demonstration of how to easily change the lenses on the OhO sunshine Smart Audio Sunglasses, showing the removal and insertion of different lens types.

6. MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the lenses and frame. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the glasses in the hard shell protective case when not in use to prevent scratches and damage.
- **Water Resistance:** The glasses are water-resistant for light rain and sweat. Do not submerge them in water or expose them to heavy water spray.
- **Handling:** Handle with care to prevent damage to the frame, lenses, and electronic components.

7. TROUBLESHOOTING

Problem	Solution
Glasses do not power on.	Ensure the battery is charged. Connect to the charger and try again.
Cannot pair with device.	Ensure Bluetooth is enabled on your device and the glasses are in pairing mode. Move closer to your device. Forget previous pairings and try again.
No sound or low volume.	Check the volume level on both the glasses and your connected device. Ensure the glasses are properly connected via Bluetooth.
Voice assistant not responding.	Ensure the glasses are connected to your device and the voice assistant is enabled on your phone. Double-press the Power Button to activate.

8. SPECIFICATIONS

- **Brand:** OhO sunshine
- **Model:** A8 Pro
- **Connectivity:** Bluetooth
- **Battery Life:** Up to 10 hours playtime
- **Lens Type:** UV Protected, Blue Light Blocking, Polarized (interchangeable)
- **Frame Material:** TR90
- **Item Weight:** 36 Grams
- **Water Resistance:** Water resistant for light rain/sweat
- **Dimensions:** Front width: 145.78mm, Lens width: 56mm, Lens height: 40.7mm, Bridge width: 20mm, Arm length: 133mm, Front length: 150.41mm

Dimension

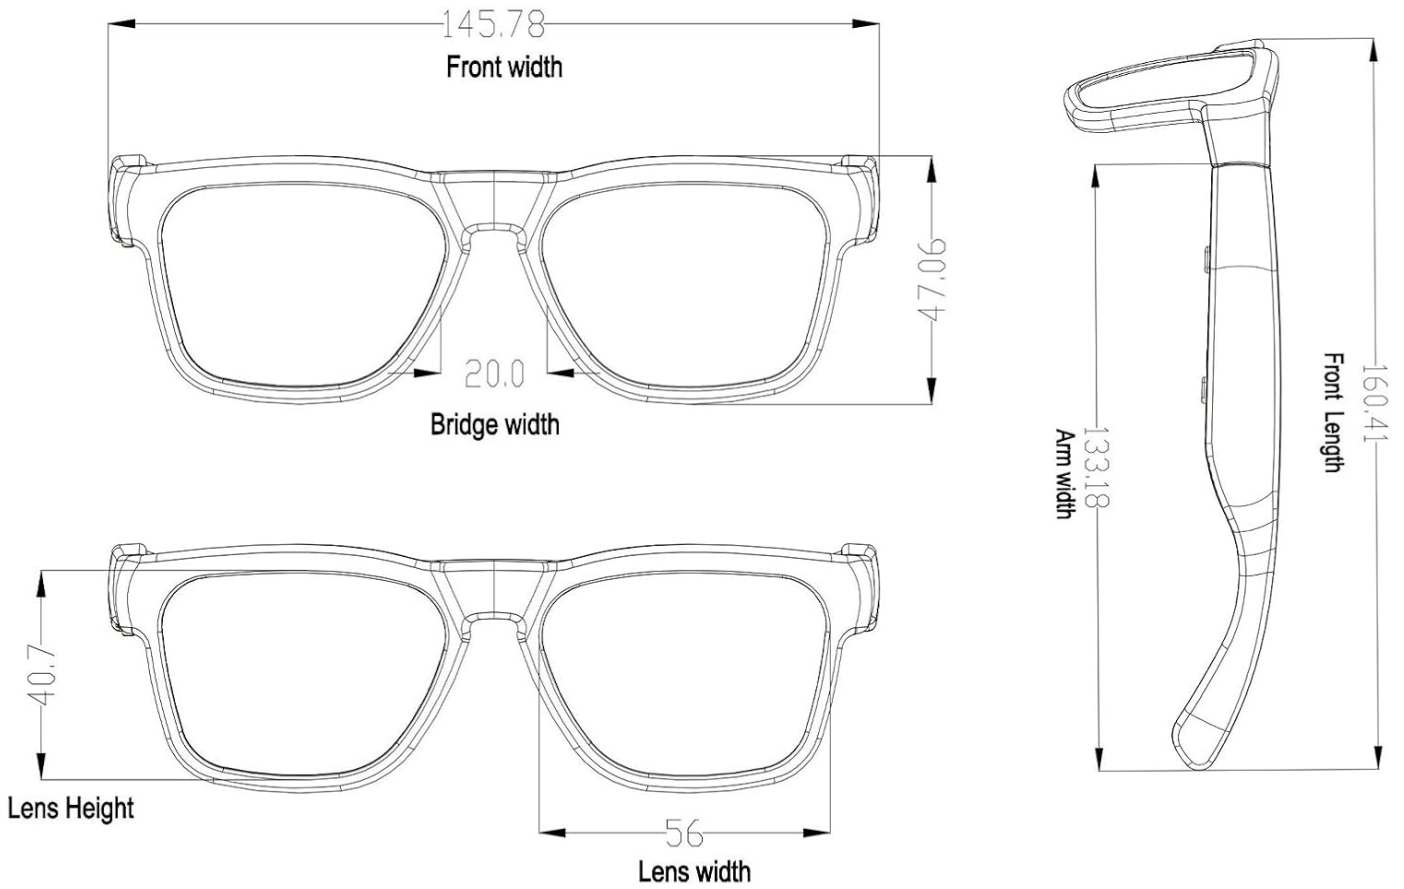


Image: Detailed diagram illustrating the dimensions of the OhO sunshine Smart Glasses, including front width, lens width, lens height, bridge width, and arm length.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official OhO sunshine website or contact their customer service directly. Keep your purchase receipt for any warranty claims.