

[Manuals.plus](#) /

› [Owl Labs](#) /

› Owl Labs Expansion Mic for Meeting Owl 3 / 4+ User Manual

Owl Labs MO3-EXP100

Owl Labs Expansion Mic User Manual

Model: MO3-EXP100 | Brand: Owl Labs

1. INTRODUCTION

The Owl Labs Expansion Mic is designed to extend the audio pick-up range of your Meeting Owl 3 or Meeting Owl 4+ by an additional 8 feet (2.5 meters) in the direction of the microphone. This ensures that quieter and more distant voices are clearly captured during meetings. It also features a convenient mute button for easy control during conversations. An optional mounting bracket is included for secure installation. This Expansion Mic is specifically engineered for optimal performance with the Meeting Owl 3 and Meeting Owl 4+ and is not compatible with older Meeting Owl models like the Meeting Owl Pro or original Meeting Owl.



Image: The Owl Labs Expansion Mic, a compact, grey, circular device with a black cable, designed to extend audio range.

2. WHAT'S IN THE BOX

Upon opening the packaging, you will find the following components:

- Expansion Mic
- Mounting Bracket
- Hardware Kit (including screws)
- Micro-HDMI cable
- Quick Start Guide

- Safety/regulatory/warranty slipsheet

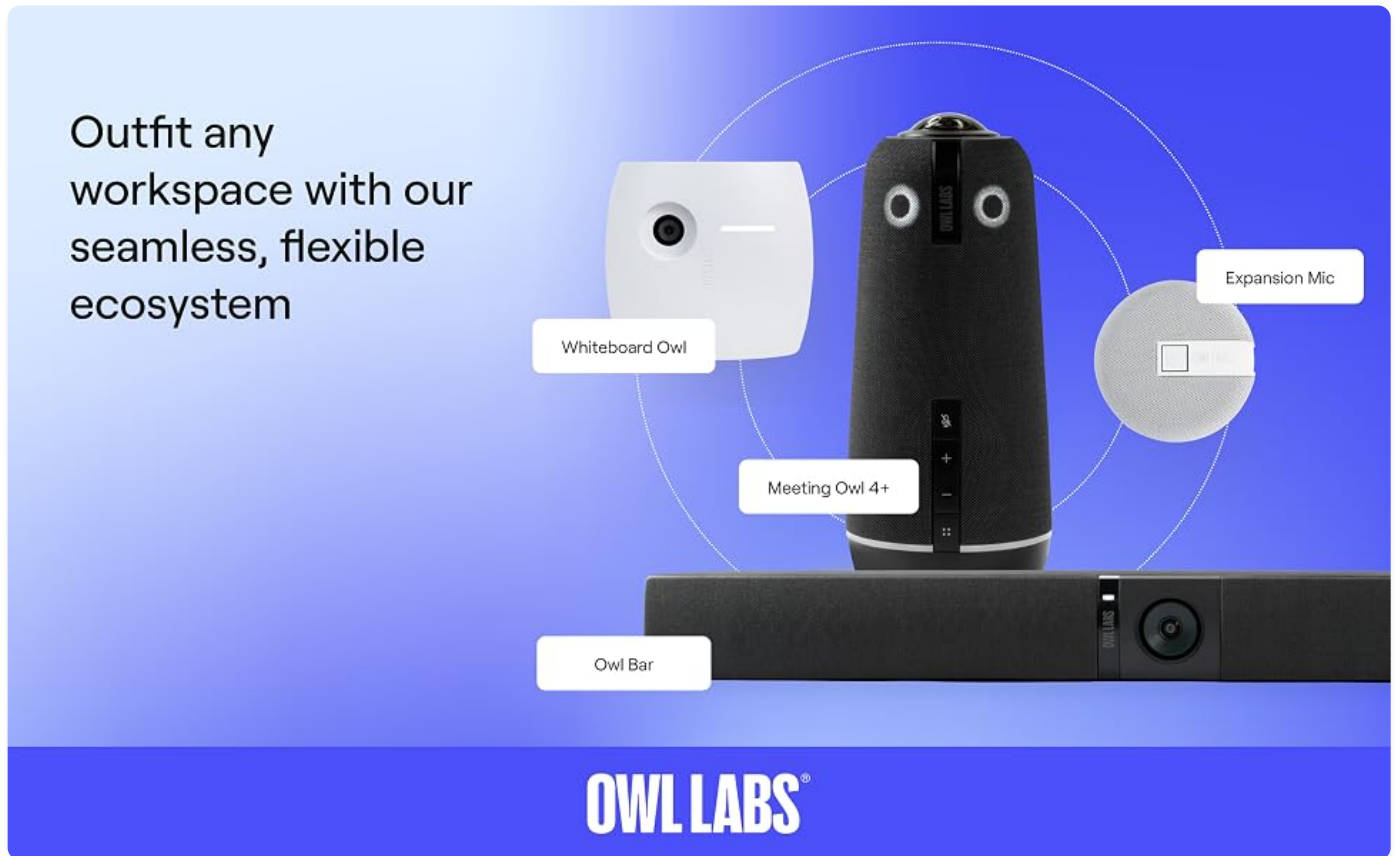


Image: A diagram illustrating the recommended placement of the Meeting Owl and the Expansion Mic for optimal audio coverage in a meeting room.

3. SETUP INSTRUCTIONS

Setting up your Owl Labs Expansion Mic is a straightforward process. Follow these steps for proper installation and connection:

1. **Unpack Components:** Carefully remove all items from the box and ensure all listed components are present.
2. **Prepare Meeting Owl:** Locate the Expansion Mic port cover on your Meeting Owl 3 or Meeting Owl 4+ and gently remove it.
3. **Connect Cable to Meeting Owl:** Plug one end of the provided Micro-HDMI cable into the Expansion Mic port on the Meeting Owl.
4. **Connect Cable to Expansion Mic:** Plug the other end of the Micro-HDMI cable into the port on the Expansion Mic. The Meeting Owl will automatically detect and integrate the Expansion Mic signal into your meeting.
5. **Placement:** Position the Expansion Mic facing away from the Meeting Owl, towards the area where participants are speaking. For optimal performance, the Expansion Mic should be placed at least 6 feet (1.8 meters) away from the Meeting Owl.
6. **Mounting (Optional):** If you wish to secure the Expansion Mic to your table, you have two options:
 - **Adhesive Strips:** Use the provided adhesive strips for a quick and secure attachment.
 - **Screws:** Utilize the included screws and mounting bracket for a more permanent installation.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing, connection, and placement of the Owl Labs Expansion Mic, showing how to set it up with your Meeting Owl.

4. OPERATING INSTRUCTIONS

The Expansion Mic seamlessly integrates with your Meeting Owl to enhance your meeting experience.

- **Extended Audio Range:** The primary function of the Expansion Mic is to extend the audio pick-up range of your Meeting Owl 3 or 4+ from 18 feet to 26 feet in the direction of the mic. This is crucial for capturing voices from participants who are further away or speak more quietly.
- **Mute Control:** The button located on the top of the Expansion Mic controls the mute function. Pressing this button will mute or unmute the microphone, providing convenient control for participants located near the Expansion Mic.
- **Automatic Integration:** Once connected, the Meeting Owl automatically recognizes and incorporates the audio signal from the Expansion Mic, requiring no additional configuration.

Catch clear audio from every corner

Ideal for larger tables

Extends the pickup range of the Meeting Owl 3 or 4+ by 8 feet in the direction of the mic, bringing the total pickup range to 26 feet.

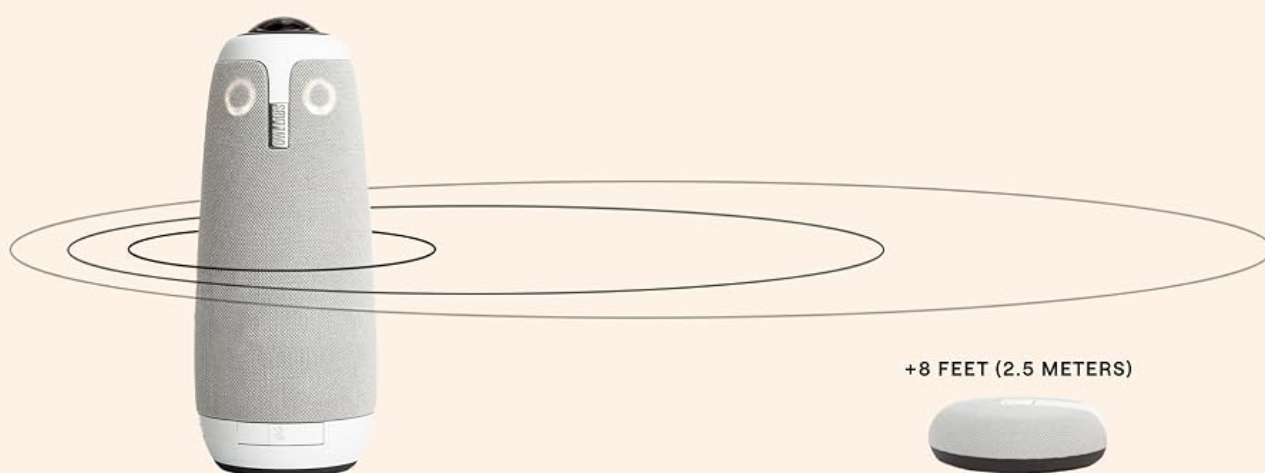


Image: A visual representation of how the Expansion Mic extends the audio pickup range, allowing clear audio capture from all corners of a larger meeting space.

Hear more than ever before

Ultra-sensitive mic allows the Meeting Owl 3 or 4+ to recognize voices that are quieter or farther away.



Image: An illustration demonstrating the ultra-sensitive microphone's ability to pick up voices from close by, a little further, and further away, ensuring all participants are heard.

5. MAINTENANCE

To ensure the longevity and optimal performance of your Owl Labs Expansion Mic, follow these simple maintenance guidelines:

- **Cleaning:** Gently wipe the exterior of the Expansion Mic with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or internal components.
- **Storage:** When not in use for extended periods, store the Expansion Mic in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid sharp bends or kinks in the Micro-HDMI cable. Store the cable neatly to prevent damage.

6. TROUBLESHOOTING

If you encounter issues with your Expansion Mic, consider the following common troubleshooting steps:

- **No Audio from Expansion Mic:**
 - Ensure the Micro-HDMI cable is securely connected to both the Expansion Mic and the Meeting Owl.
 - Verify that the Expansion Mic is not muted (check the mute button on top).
 - Confirm that your Meeting Owl is powered on and functioning correctly.
- **Compatibility Issues:**
 - The Owl Labs Expansion Mic is designed exclusively for the Meeting Owl 3 and Meeting Owl 4+. It is not compatible with the Meeting Owl Pro or the original Meeting Owl. Ensure you are using the correct Meeting Owl model.
- **Poor Audio Quality:**
 - Check the placement of the Expansion Mic. It should be at least 6 feet (1.8 meters) away from the Meeting Owl and positioned towards the primary speaking area.
 - Ensure there are no obstructions between the Expansion Mic and the speakers.

- Verify that the meeting room acoustics are suitable. Excessive echo or background noise can affect audio clarity.

For further assistance, please refer to the support section or contact Owl Labs customer service.

7. SPECIFICATIONS

Feature	Detail
Model Name	Meeting Owl 3 Expansion Mic
Item Model Number	MO3-EXP100
Brand	Owl Labs
Product Dimensions	3.43 x 3.43 x 1.12 inches
Item Weight	6.1 ounces (0.38 Pounds)
Color	Grey
Connectivity Technology	Expansion Mic to Meeting Owl (Micro-HDMI)
Microphone Form Factor	Tri-Capsule Array
Polar Pattern	Unidirectional
Audio Sensitivity	72 dB
Signal-to-Noise Ratio	72 dB
Noise Level	72 dB
Power Source	Corded Electric
Compatible Devices	Meeting Owl 3, Meeting Owl 4+
Recommended Uses	Video Conference
Global Trade Identification Number (GTIN)	00850022203060
UPC	850022203060

8. WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the safety/regulatory/warranty slipsheet included in your product packaging. For technical support, troubleshooting beyond this manual, or sales inquiries, please contact Owl Labs directly.

You can reach Owl Labs support via email at: sales@owllabs.com

Visit the official Owl Labs website for the latest information and resources: www.owllabs.com

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question