

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SereneLife](#) /

› [SereneLife 5.8 Gal Portable Camping Toilet SLCATL360 User Manual](#)

## SereneLife SLCATL360

# SereneLife 5.8 Gal Portable Camping Toilet SLCATL360 User Manual

Model: SLCATL360 | Brand: SereneLife

## INTRODUCTION

The SereneLife 5.8 Gallon Portable Camping Toilet (Model SLCATL360) provides a convenient and hygienic solution for personal sanitation in outdoor and remote settings. Designed for adults, this portable toilet offers comfort and ease of use, making it ideal for camping, RV trips, hiking, boating, and emergency situations. Its robust construction and thoughtful features ensure a reliable experience away from traditional facilities.

Key features include an adult-sized seat with a 330 lbs weight capacity, a double-sealed drain valve to prevent odors and leaks, and a detachable waste tank for easy emptying. The unit also comes with a carry bag and a hand sprayer for enhanced hygiene and portability.

## WHAT'S IN THE BOX

Verify that all components are present upon unboxing:

- Portable Toilet Unit
- Oxford Carrying Bag
- Toilet Hand Sprayer

# WHAT'S IN THE BOX

## PORTABLE TOILET



## CARRY BAG



*Image: The portable toilet unit, its Oxford carrying bag, and a visual representation of its dimensions.*

## SETUP

1. **Separate the Tanks:** Ensure the top (freshwater) tank and bottom (waste) tank are separated. Locate the side latches and release them to detach the upper section.
2. **Fill the Freshwater Tank:** Unscrew the cap on the freshwater tank (upper section). Carefully pour clean water into the tank. If using, add appropriate toilet chemicals as per their instructions. Securely replace the cap.
3. **Attach Hand Sprayer (Optional):** If included, connect the hand sprayer hose to the designated port on the freshwater tank.
4. **Reassemble the Toilet:** Align the freshwater tank with the waste tank and secure the side latches until they click into place. Ensure a tight seal to prevent leaks.

# LARGE CAPACITY AND DETACHABLE DESIGN



Corrosion-Resistant



Easy to Clean



Durable Construction

*Image: Illustration of the portable toilet's two-tank system, indicating the fresh water and waste holding capacities.*

Your browser does not support the video tag.

*Video: Demonstrates the setup, flushing mechanism, and waste disposal process of a portable toilet.*

## OPERATING INSTRUCTIONS

1. **Before Use:** Ensure the slide valve (located on the front of the waste tank) is in the closed position to create a seal.
2. **Flushing:** After use, pull the bellows-type pump handle (usually on the side of the freshwater tank) upwards and then press it down several times to flush water into the bowl. This action rinses the bowl and pushes waste into the holding tank.
3. **Open Slide Valve:** To allow waste to drop into the lower tank, pull the slide valve handle outwards.
4. **Close Slide Valve:** After flushing, push the slide valve handle back inwards to seal the waste tank and prevent odors.
5. **Monitor Waste Level:** The waste level indicator (often a small window on the front of the waste tank) will change

color (e.g., from green to red) as the tank fills, indicating when it's time to empty.

## CONVENIENT AND ERGONOMIC DESIGN



*Image: Detailed view of the portable toilet's flush system and the mechanism for detaching the waste tank.*

Your browser does not support the video tag.

*Video: A demonstration of the SereneLife 5.8 Gal Portable Camping Toilet (SLCATL360) in use, highlighting its flushing capabilities.*

## MAINTENANCE

### 1. Emptying the Waste Tank:

- Ensure the slide valve is closed.
- Release the side latches and separate the upper freshwater tank from the lower waste tank.
- Carry the waste tank to an approved disposal site (e.g., RV dump station, standard toilet).
- Rotate the pour spout outwards, unscrew the cap, and carefully empty the contents. The rotating spout helps ensure splash-free disposal.

- Rinse the waste tank thoroughly with water. You may add a small amount of cleaning solution or deodorizer.
  - Securely replace the cap and return the pour spout to its stored position.
2. **Cleaning the Bowl:** Use the included hand sprayer (if applicable) or a soft brush with mild soap and water to clean the toilet bowl after each use. Avoid abrasive cleaners that could damage the plastic.
  3. **General Cleaning:** Wipe down the exterior of the toilet with a damp cloth and mild detergent regularly.
  4. **Storage:** When not in use for extended periods, ensure both tanks are completely empty and clean. Store the toilet in a cool, dry place, preferably in its Oxford carrying bag.

Your browser does not support the video tag.

*Video: A short preview demonstrating the disassembly and emptying process of a portable toilet.*

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Odors or Leaks	Slide valve not fully closed; worn or damaged seals.	Ensure slide valve is completely closed. Inspect and clean seals; replace if damaged.
Ineffective Flushing	Low water level in freshwater tank; pump mechanism issue.	Refill freshwater tank. Ensure pump is fully extended and depressed during flushing.
Waste Level Indicator Not Working	Sensor obstruction or malfunction.	Ensure the waste tank is clean and free of debris that might obstruct the sensor.
Difficulty Separating Tanks	Latches not fully released; debris in connection points.	Ensure both side latches are completely disengaged. Check for and remove any obstructions.

## SPECIFICATIONS

- **Model Number:** SLCATL360
- **Brand:** SereneLife
- **Color:** White
- **Product Dimensions:** 16.5"D x 14.6"W x 17.1"H
- **Material:** High Density Polyethylene (HDPE)
- **Item Weight:** 14.55 Pounds
- **Installation Type:** Floor Mounted
- **Shape:** Rectangular
- **Seat Material Type:** Polypropylene
- **UPC:** 842893153506
- **Item Package Quantity:** 1
- **Included Components:** Oxford Carrying Bag, Portable Toilet, Toilet Hand Sprayer
- **Batteries Required:** No
- **Manufacturer:** Sound Around

## SAFETY INFORMATION




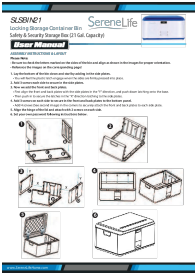
- Always place the portable toilet on a flat, stable surface to prevent tipping.
- Do not overfill the freshwater or waste tanks.
- Use only recommended toilet chemicals and cleaning agents. Avoid harsh chemicals that may damage the unit or seals.
- Ensure the slide valve is closed when transporting the toilet to prevent spills and odors.
- Dispose of waste at approved facilities only.
- Keep out of reach of children when not in use.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact SereneLife customer service directly. Keep your purchase receipt for warranty claims.

© 2025 SereneLife. All rights reserved.

Related Documents - SLCATL360


	<p><a href="#">SereneLife Pop-Up Tent Commercial Instant Shelter User Manual</a></p> <p>User manual for the SereneLife Pop-Up Tent Commercial Instant Shelter, detailing features, specifications, setup instructions, and safety precautions for models SLGZ10W, SLGZ10BA, SLGZ10BU, SLGZ15W, SLGZ15BL, SLGZ15BU, and SLGZ20W.</p>
	<p><a href="#">SereneLife SLPOP1030 10x30 ft Pop Up Tent Commercial Instant Shelter User Guide</a></p> <p>Comprehensive user guide for the SereneLife SLPOP1030 10x30 ft Commercial Instant Shelter. Features setup instructions, technical specifications, warranty information, and safety precautions for this waterproof polyester tent.</p>
	<p><a href="#">SereneLife SLCATL420 Gravity Flush Toilet User Guide</a></p> <p>Comprehensive user guide for the SereneLife SLCATL420 Gravity Flush Toilet, detailing features, installation, operation, maintenance, and technical specifications. Designed for RVs, boats, and other portable applications.</p>
	<p><a href="#">SereneLife SLSBIN21 Locking Storage Container Bin User Manual</a></p> <p>User manual for the SereneLife SLSBIN21 Safety &amp; Security Storage Box, a 21-gallon locking storage container. Includes assembly instructions and how to set a custom passcode.</p>





[SereneLife SLUVDISB50 Portable UV Light Germicidal Bag User Manual](#)

User manual for the SereneLife SLUVDISB50 portable UV light germicidal bag, detailing its features, specifications, usage instructions, safety guidelines, and warranty information for effective sterilization of various items.

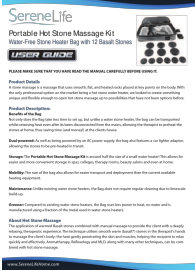

[SereneLife Portable Hot Stone Massage Kit User Guide](#)

User guide for the SereneLife Portable Hot Stone Massage Kit, featuring a water-free stone heater bag with 12 basalt stones. Learn how to use, its features, and technical specifications.