

[Manuals.plus](#) /

› [Moowhsh](#) /

› Moowhsh Smartwatch G35 User Manual

Moowhsh G35

Moowhsh Smartwatch G35 User Manual

Comprehensive guide for your Moowhsh Smartwatch G35.

1. INTRODUCTION

Welcome to the Moowhsh Smartwatch G35 user manual. This guide provides detailed instructions on how to set up, operate, and maintain your new smartwatch. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

The Moowhsh Smartwatch G35 is designed for women, featuring AMOLED display, Bluetooth calling capabilities, fitness tracking, and health monitoring functions. It is compatible with both Android phones and iPhones.

2. WHAT'S IN THE BOX

- Moowhsh Smartwatch G35 (with one band attached)
- Additional Watch Band
- Charging Cable
- User Manual (this document)



Image: Moowhsh Smartwatch G35 in pink with an additional metal band and charging cable.

3. SETUP

3.1 Initial Charging

Before first use, fully charge your smartwatch. Connect the magnetic charging cable to the charging points on the back of the watch and plug the USB end into a compatible power adapter (not included) or a computer USB port. A full charge takes approximately 2 hours.

Endurance That Won't Let You Down

A battery that goes above and beyond



Image: Close-up of the smartwatch connected to its magnetic charging cable.

3.2 App Installation and Pairing

To unlock the full features of your Moowhsh Smartwatch G35, you need to install the "FitCloudPro" app on your smartphone.

1. Turn on the Bluetooth function on your phone.
2. Open the Google Play Store (for Android) or App Store (for iPhone).
3. Search for "FitCloudPro" and download the app.
4. Open the "FitCloudPro" app, navigate to "Device", find "G35", and bind it.
5. To enable the answer/call function, open the drop-down menu of the watch and light up the "Audio mode" function icon. Then, open your phone's "Settings" and enter the "Bluetooth" interface. Find "G35 (LE)" and click to connect it. Once connected, you can use the watch to answer/make calls anytime.



Image: Visual guide showing the steps to connect the smartwatch to the FitCloudPro app and enable Bluetooth calling.

4. OPERATING YOUR SMARTWATCH

4.1 Basic Navigation

The Moowsh Smartwatch G35 features a 1.3-inch HD AMOLED touch screen. Swipe left, right, up, or down to navigate through different menus and functions. The physical buttons on the side can also be used for quick access to certain features or to return to the main screen.

Easy Health Management

Track your progress toward your health goals



24/7
Heart Rate



Blood
Oxygen



Sleep
Tracking

Image: Close-up of the smartwatch display highlighting its 1.3-inch HD AMOLED touch screen with 331 PPI pixel density and 360x360 resolution.

4.2 Making and Receiving Calls

Once paired via Bluetooth, you can make and receive calls directly from your watch. The watch features a built-in HIFI speaker and microphone.

- **To make a call:** Access the "Telephone" function on the watch, dial the number, or select from your frequent contacts.
- **To receive a call:** When a call comes in, the watch will ring. Tap the green icon to answer or the red icon to reject.

Make Calls On Watch

Wireless Bluetooth phone call
your all-purpose smart assistant



Crystal
Quality Mic



High-Fidelity
Speakers



Answer/
Make Call



Call
Records



Sync
Contacts



Image: Smartwatch displaying call interface with options for crystal quality mic, high-fidelity speakers, answer/make call, call records, and sync contacts.

Your browser does not support the video tag.

Video: Demonstrates the smartwatch's Bluetooth calling feature, showing how to answer calls and use the dial pad. This video highlights the convenience of making and receiving calls directly from the wrist.

4.3 Health Monitoring

The smartwatch is equipped with BIO3.0 + G-sensor smart chip and PCG optical monitoring technology for comprehensive health tracking.

- **Heart Rate Monitoring:** Provides 24/7 heart rate monitoring.
- **Blood Oxygen (SpO2):** Measures blood oxygen levels and provides abnormality warnings.
- **Sleep Monitoring:** Tracks sleep quality, including deep sleep, light sleep, and awake time.
- **Blood Pressure Monitoring:** Monitors blood pressure.

1.3" HD Touch Screen

The larger display enhances the entire experience



331 PPI Screen
Pixel Density



360*360
Resolution



60HZ Hight
Refresh Rate



Image: Smartwatch display showing health tracking features: 24/7 Heart Rate, Blood Oxygen (SpO2), and Sleep Tracking.

The Starting Line Is On Your Wrist

Fitness that revolves around you



Image: A person sleeping with the smartwatch on, showing the sleep tracking interface on the watch and a graph of sleep patterns (Awake, Light Sleep, Deep Sleep).

Your browser does not support the video tag.

Video: This video demonstrates the various health monitoring functions of the smartwatch, including heart rate, blood pressure, and blood oxygen tracking. It visually explains how these features contribute to overall health management.

4.4 Fitness Tracking

The smartwatch supports 19 sports modes and automatically records daily steps, distance, and calories burned.

- **Sports Modes:** Walking, Running, Climbing, Cycling, Yoga, Pingpong, Skipping, Tennis, Football, Elliptical, Hula Hoop, Golf, Long Jump, Sit-ups, Volleyball, Rugby, Baseball, Basketball, and more.
- **Activity Records:** Track your steps, distance, and calories burned throughout the day.

Better Sleep Starts Here

A watch that's watching out for you

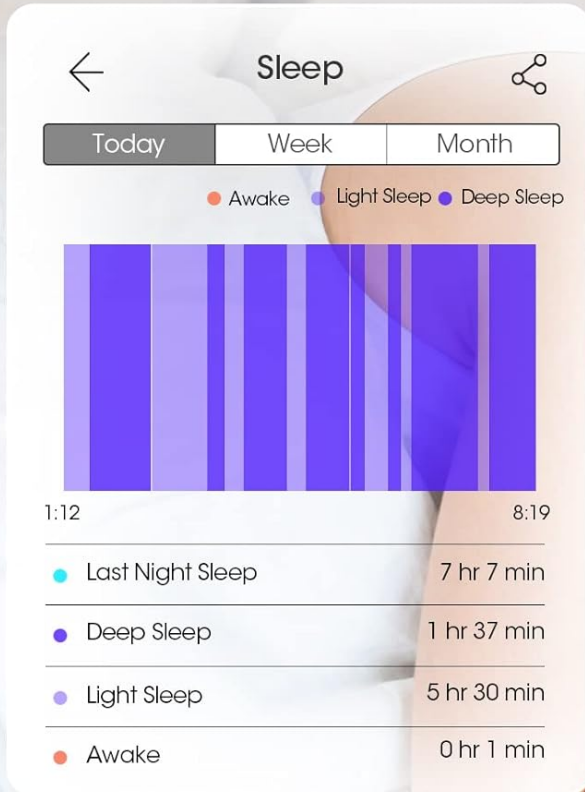


Image: A person stretching with the smartwatch on, showing various sports mode icons like walking, running, climbing, cycling, and more. It emphasizes the watch as a fitness partner.

Your browser does not support the video tag.

Video: This video showcases the smartwatch's ability to track various sports activities and monitor steps, calories, and distance. It highlights the watch's utility as a comprehensive fitness companion.

4.5 Smart Notifications and Music Control

Receive notifications for calls, SMS, WhatsApp, Instagram, and other apps directly on your wrist. You can also control music playback on your phone through the smartwatch.



Image: Smartwatch displaying a music control interface, with play/pause, skip forward/backward options, next to a smartphone playing music.



Image: A hand pointing to the smartwatch display showing various app notification icons like WhatsApp, Facebook, Instagram, and SMS.

5. MAINTENANCE

5.1 Cleaning

Regularly clean your smartwatch and bands to prevent skin irritation and maintain device hygiene. Use a soft, lint-free cloth. For stubborn spots, dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.

5.2 Water Resistance

The Moowhsh Smartwatch G35 is 5ATM waterproof, splash-proof, and dust-proof. This means it can withstand splashes, rain, and brief immersion in shallow water. However, it is not suitable for hot showers, saunas, or diving. Avoid prolonged exposure to water to ensure device longevity.



Image: Smartwatch being splashed with water, illustrating its 5ATM waterproof rating.

5.3 Battery Life

A full charge provides approximately 7 days of high-intensity use, 14 days of daily use, and up to 30 days of standby time. To maximize battery life, reduce screen brightness, disable unnecessary notifications, and limit continuous heart rate monitoring.



Specification

Two bands included. Fits for 22mm width band



Image: Smartwatch display showing "14 Days" battery life, with smaller text indicating 2 hours for full charge, 7 days for high intensity use, 14 days for daily use, and 30 days for standby.

6. TROUBLESHOOTING

Problem	Solution
Watch not turning on.	Ensure the watch is fully charged. Check the charging cable and adapter.
Unable to pair with phone.	Make sure Bluetooth is enabled on your phone and the watch. Restart both devices. Ensure the "FitCloudPro" app is installed and updated. Check if "G35 (LE)" is connected in your phone's Bluetooth settings for calling.
Inaccurate health data.	Ensure the watch is worn snugly on your wrist, not too tight or too loose. Keep the sensor clean. Avoid excessive movement during measurements.

Problem	Solution
Notifications not appearing.	Check app notification settings within the "FitCloudPro" app. Ensure the app has necessary permissions on your phone. Keep the app running in the background.
Short battery life.	Reduce screen brightness, disable continuous heart rate monitoring, and turn off unnecessary notifications.

7. SPECIFICATIONS

- **Model:** G35
- **Brand:** Moowhsh
- **Screen Size:** 1.3 Inches AMOLED
- **Resolution:** 360*360
- **Memory Storage Capacity:** 64 MB
- **Battery Capacity:** 300 mAh
- **Connectivity Technology:** Bluetooth
- **Operating System:** Android, iOS compatible
- **Water Resistance:** 5ATM (Splash-proof, Dust-proof)
- **Item Weight:** 7.76 ounces

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Moowhsh website or contact your retailer. Keep your purchase receipt as proof of purchase for any warranty claims.

You can also refer to the official User Manual (PDF) available at:

<https://manuals.plus/m/69f6ff61a31a35cc97c4cc2210c0eef8e467e60f736f1d0a48b110860f389812>