

[Manuals.plus](#) /

> [TEHOME](#) /

> TEHOME Farmhouse Matt Black Recessed Bathroom Medicine Cabinet with Mirror Rounded Rectangle Metal Framed Medicine Cabinet with Beveled Mirror 20x30" Matt Black 20x30"

TEHOME TE-00427

TEHOME Farmhouse Matt Black Recessed Bathroom Medicine Cabinet

Model: TE-00427

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your TEHOME Farmhouse Matt Black Recessed Bathroom Medicine Cabinet. Please read this manual thoroughly before installation and use to ensure safe and proper functioning of the product.

2. SAFETY INFORMATION

WARNING:

- Always ensure the cabinet is securely mounted to the wall.
- Do not overload the shelves. The weight limit for each shelf is 10 pounds.
- Be cautious of sharp edges and pinch points during installation and use.
- Keep small children away from the cabinet during installation.

3. PRODUCT FEATURES

- **Metal Framed Medicine Cabinet:** Premium metal door with matte black finish, framed with an elegantly beveled mirror. Door features strong magnetic hinges.
- **Tempered Adjustable Glass Shelves:** Includes 4 adjustable tempered-glass shelves, designed for enhanced durability and resistance to breakage.
- **Recessed Installation:** Designed for recessed mounting only, providing a flush finish with your wall.
- **Reversible Door:** The door is hinged on the left side only, but the entire unit can be flipped for reverse installation to open from the right.
- **Minimal Assembly:** The cabinet comes 95% assembled; only the glass shelves require placement.

4. PACKAGE CONTENTS

- 1 x TEHOME Recessed Bathroom Medicine Cabinet (20x30")
- 4 x Tempered Glass Shelves

- Installation Hardware (screws, anchors)
- Instruction Manual

5. SPECIFICATIONS

Feature	Detail
Brand	TEHOME
Model Number	TE-00427
Color	Matt Black
Product Dimensions (Overall)	20"W x 4.96"D x 30"H
Wall Cutout Dimensions	17.78"W x 25.58"H x 3.25"D
Mounting Type	Recessed Wall Mount
Frame Material	Metal
Shelf Material	Tempered Glass
Number of Shelves	4 (Adjustable)
Weight Limit (per shelf)	10 Pounds
Item Weight	20 Pounds
Assembly Required	Minimal (shelves only)

6. SETUP AND INSTALLATION

This medicine cabinet is designed for **recessed mounting only**. It cannot be surface mounted. Please ensure your wall is prepared with the correct cutout dimensions before proceeding.

6.1 Required Tools (Not Included)


- Measuring Tape
- Pencil
- Level
- Stud Finder
- Drywall Saw or Utility Knife
- Drill
- Screwdriver

6.2 Wall Cutout Dimensions

For proper recessed installation, a wall cutout of the following dimensions is required:

- Width:** 17.78 inches
- Height:** 25.58 inches
- Depth:** 3.25 inches


UNIT CAN ONLY BE RECESSED MOUNTED

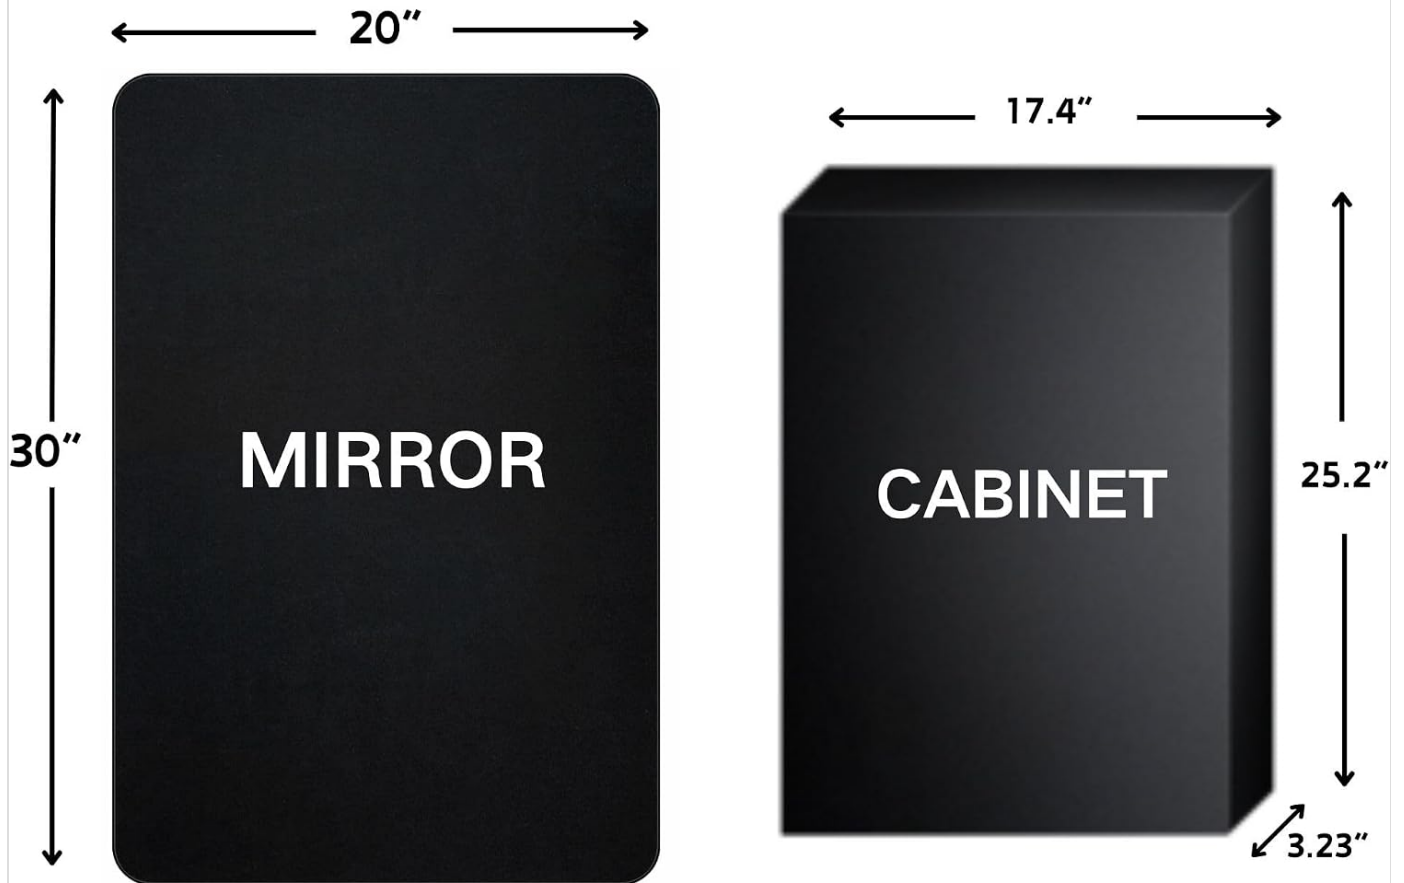


WHEN RECESSING THE UNIT THE WALL CUT SIZE WILL NEED TO BE WIDTH 17.78" HEIGHT 25.58" DEPTH 3.25".

Figure 1: Product and Recess Dimensions. Note the required wall cutout is 17.78"W x 25.58"H x 3.25"D.

Mounting Option

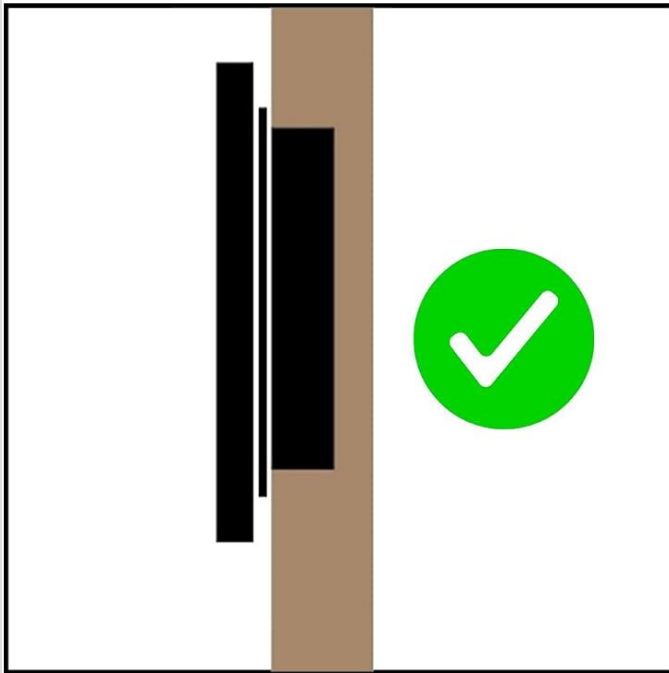

RECESS MOUNT

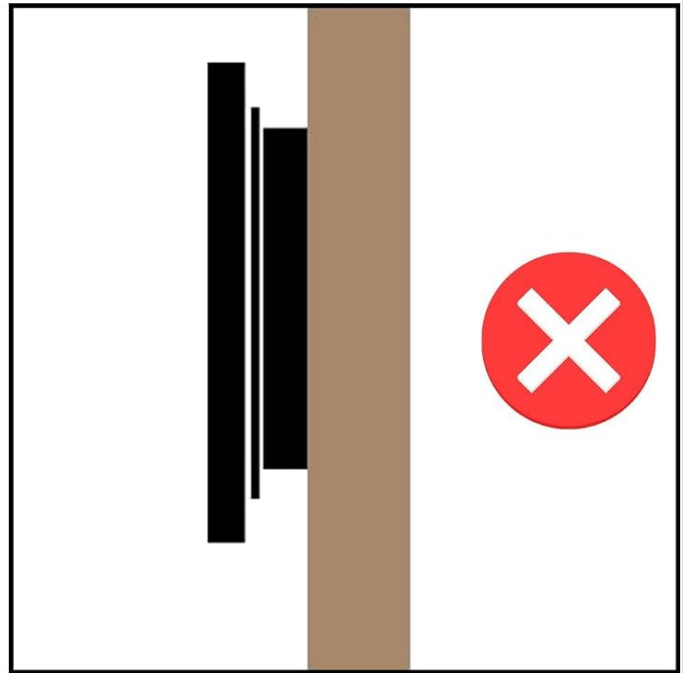

SURFACE MOUNT



SEE INSTALLATION GUIDE AND WALL CUT OUT SIZES

Figure 2: Mounting Option. This cabinet supports recessed mounting only.

6.3 Installation Steps


1. **Prepare Wall Opening:** Using a stud finder, locate studs in the desired installation area. Mark the wall cutout dimensions (17.78"W x 25.58"H x 3.25"D) on the wall. Carefully cut out the opening using a drywall saw or utility knife. Ensure the opening is clean and precise.
2. **Test Fit:** Gently insert the cabinet body into the wall opening to ensure a proper fit. If the fit is too tight, carefully trim the opening. If too loose, additional shims may be needed (not included).
3. **Secure Cabinet:** Once the fit is satisfactory, secure the cabinet to the wall studs using appropriate screws and anchors (included). Ensure the cabinet is level before fully tightening.
4. **Install Glass Shelves:** The cabinet includes 4 adjustable tempered-glass shelves. Locate the shelf clips inside the cabinet. Insert the clips into the desired slots, ensuring they are level. Carefully place the glass shelves onto the clips.





Figure 3: Cabinet Interior with Glass Shelves. The shelves can be adjusted to various heights.

Door could open either left OR right side

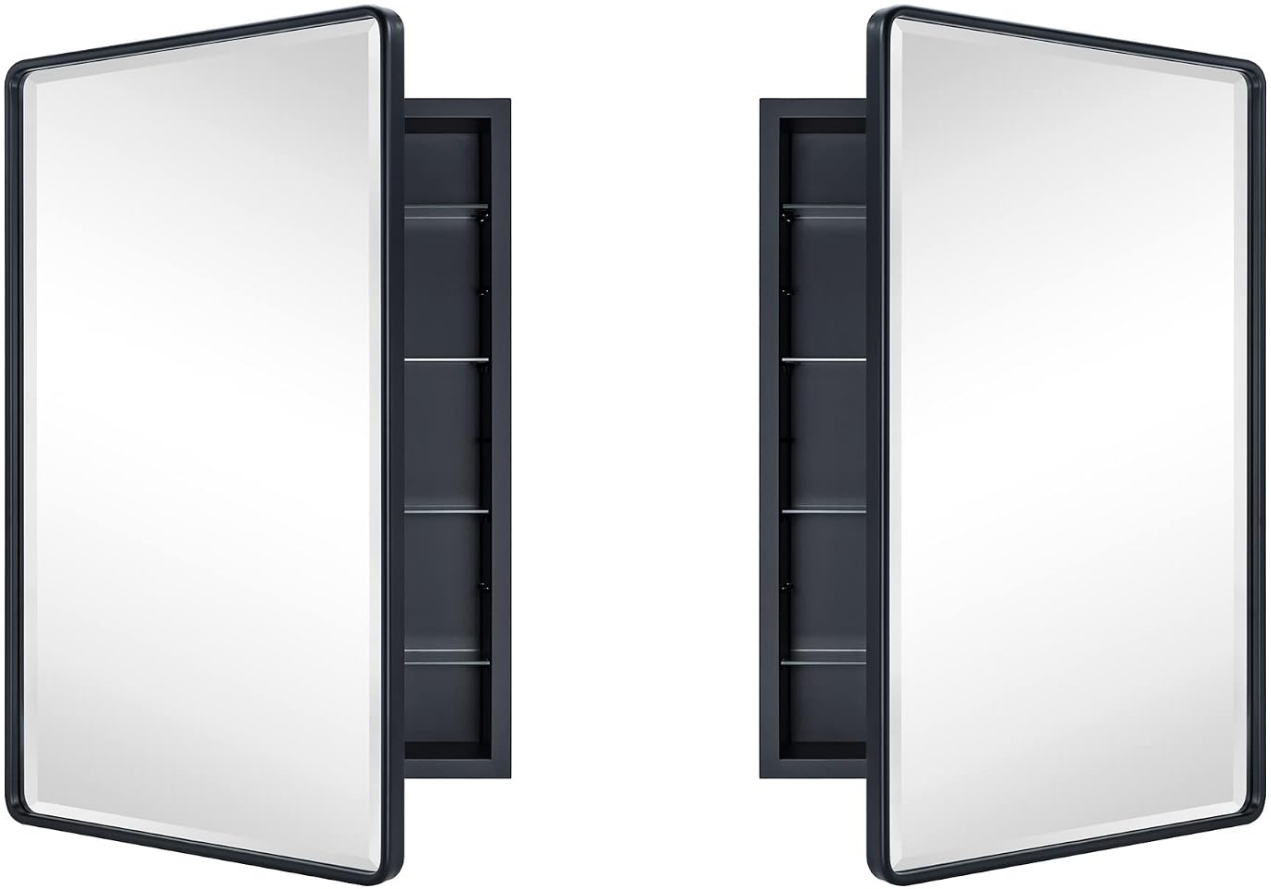

- Door is hinged on the left side only
- However, the entire unit can be flipped for reverse installation
- Including 4 adjustable tempered-glass shelves

Figure 4: Door Hinging. The unit can be flipped for right-side opening.





Figure 5: Fully Installed Cabinet (Closed).

7. OPERATING INSTRUCTIONS

Your TEHOME medicine cabinet is designed for simple operation.

- **Opening/Closing the Door:** Gently pull the mirror door to open. The strong magnetic hinges will hold it securely when closed. Ensure the door is fully closed to prevent accidental swinging.
- **Adjusting Shelves:** To adjust the height of the tempered glass shelves, carefully lift the shelf, remove the shelf clips

from their current slots, reposition them to the desired height, and then place the shelf back onto the clips. Ensure clips are securely seated and level before placing items on the shelf.

8. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and appearance of your medicine cabinet.

- **Mirror Cleaning:** Use a soft, lint-free cloth and a standard glass cleaner to wipe the mirror surface. Avoid abrasive cleaners or harsh chemicals that may damage the mirror or frame.
- **Frame Cleaning:** Wipe the matte black metal frame with a soft, damp cloth. For stubborn spots, a mild soap solution can be used, followed by drying with a clean, soft cloth. Do not use abrasive pads or chemical solvents.
- **Shelf Cleaning:** Tempered glass shelves can be cleaned with glass cleaner or a mild soap solution. Ensure they are dry before placing items back.
- **Hinge Check:** Periodically check the door hinges and magnetic closure for proper function. If the door feels loose, ensure mounting screws are tight.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Door swings open easily or does not stay closed.	Magnetic hinges not engaging fully; cabinet not level; mounting screws loose.	Ensure the cabinet is level. Check and tighten all mounting screws. Verify no obstructions prevent the door from closing completely.
Glass shelves are wobbly or uneven.	Shelf clips not properly seated or not level.	Remove the shelf and re-seat the clips, ensuring they are fully inserted into the slots and are level with each other.
Cabinet does not fit into wall opening.	Wall cutout dimensions are incorrect.	Carefully re-measure the wall opening and compare with the specified cutout dimensions (17.78"W x 25.58"H x 3.25"D). Trim the opening as necessary.

10. WARRANTY AND SUPPORT

TEHOME stands by the quality of its products. For specific warranty details or to inquire about extended protection plans, please refer to your purchase documentation or contact TEHOME customer support. For assistance, please visit the [TEHOME Store on Amazon](#) or contact their customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B84ZK35M>

More documents and user manuals: <https://manuals.plus/>