

DORTALA DO-HU10061-Q-CA

DORTALA Adjustable Bed Base Instruction Manual

Model: DO-HU10061-Q-CA (Queen Size)

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your DORTALA Adjustable Bed Base. Please read this manual thoroughly before use to ensure proper function and safety.

The DORTALA Adjustable Bed Base offers independent head and foot incline, a wireless remote control, dual USB charging ports, and under-bed LED lighting for enhanced comfort and convenience.

SAFETY INFORMATION

**WARNING: To prevent injury, always adhere to the following safety guidelines:**

- Do not exceed the maximum weight capacity of **750 lbs (340 kg)**. This includes the weight of the mattress and occupants.
- Be cautious of the retainer bar and moving parts to avoid pinch points during assembly and operation.
- Keep children and pets away from the bed base during operation to prevent entanglement or injury.
- Ensure all electrical connections are secure and follow local electrical codes.
- Do not attempt to modify the bed base or its components. Unauthorized modifications may void the warranty and pose safety risks.

PACKAGE CONTENTS

Before assembly, verify that all components are present:

- 1 x Adjustable Bed Frame
- 1 x Wireless Remote Control
- 1 x User Guide (This document)
- All necessary assembly hardware and tools (as specified in the included parts list)

SETUP AND ASSEMBLY

The DORTALA Adjustable Bed Base is designed for straightforward assembly. It typically takes approximately 5 minutes

to assemble with the detailed manual and required accessories provided.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a clean, flat surface.
2. **Attach Legs:** Securely attach the supporting legs to the bed frame. Ensure they are tightened to provide stability. The non-slip foot pads should be facing down.
3. **Install Retainer Bar:** Position and install the mattress retainer bar at the foot of the bed base. This bar prevents the mattress from sliding during adjustments.
4. **Connect Power:** Plug the power cord into a grounded electrical outlet.
5. **Pair Remote Control (if necessary):** Follow specific instructions in the included quick start guide for remote control pairing.
6. **Place Mattress:** Carefully place your mattress onto the assembled bed base. The bed base is compatible with memory foam, gel foam, hybrid, and similar mattress types.



Image 1: The DORTALA Adjustable Bed Base and its wireless remote control, ready for assembly.

## Great Sturdiness & Stability

Metal  
Construction



Anti-slip  
Foot Pads



## Retainer Bar

Effectively holding the mattress  
securely in place

Image 2: Close-up view illustrating the metal construction, anti-slip foot pads, and the mattress retainer bar for stability.

## OPERATING INSTRUCTIONS

Your adjustable bed base is operated using the included wireless remote control. The motor operates quietly, ensuring minimal disturbance.

### Wireless Remote Control Functions:

# Convenient Remote Control



Image 3: Diagram of the wireless remote control, highlighting buttons for Flat Position, Lift & Lower Head, Lift & Lower Foot, and LED light control.

- **Lift & Lower Head:** Use the designated buttons to adjust the head section incline from 0° to 55°.
- **Lift & Lower Foot:** Use the designated buttons to adjust the foot section incline from 0° to 40°.
- **Flat Position:** Press the "FLAT" button to return the bed base to a completely flat position.
- **LED Light:** Press the "LED" button to turn the under-bed LED lights on or off. These lights provide gentle ambient illumination.

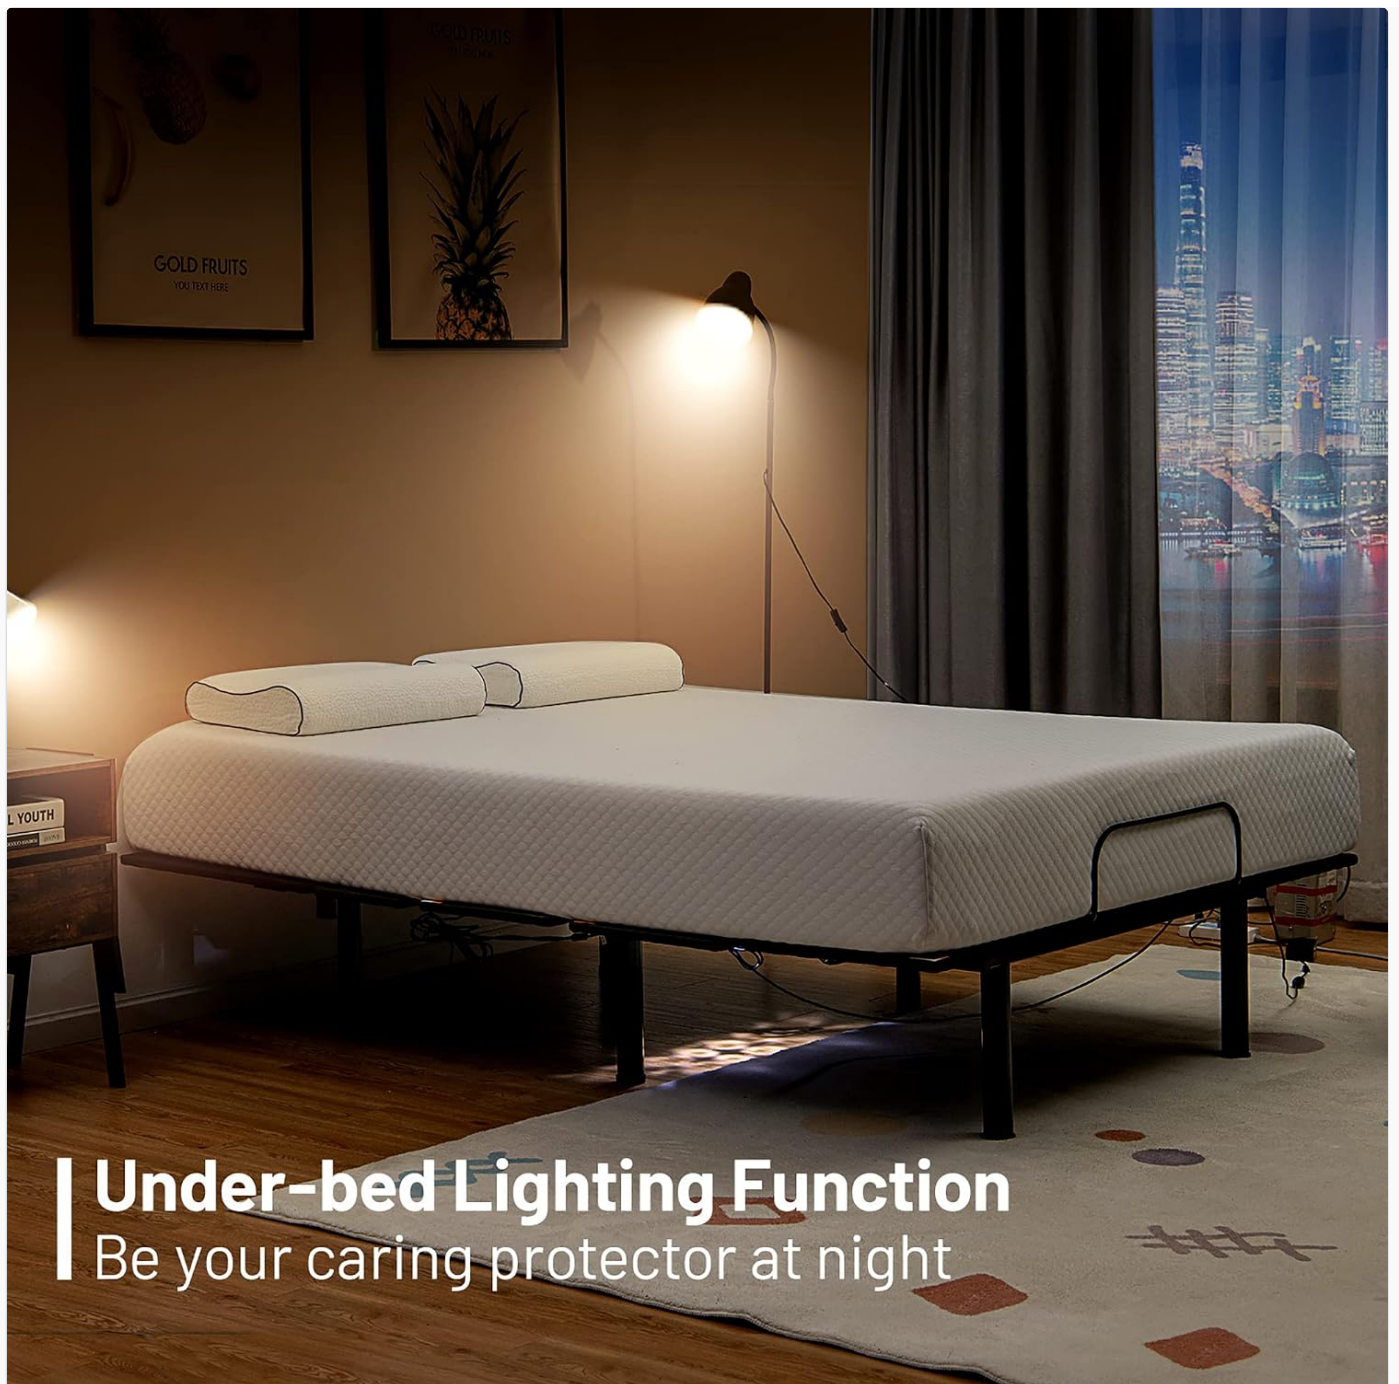


Image 4: The under-bed LED lighting function, providing soft illumination.

#### **Dual USB Charging Ports:**

# Dual USB Ports

Allowing you to charge your electronics at any time



USB Fan



PSP



Earbuds



E-reader



Phone & Pad



USB LED Light

Image 5: Close-up of the dual USB charging ports (5V=1.5A each) integrated into the bed base, suitable for charging various electronic devices.

The bed base includes dual USB charging ports (5V=1.5A each) for convenient charging of electronic devices such as phones, tablets, e-readers, or USB-powered accessories.

## Adjustable Positions:

# Adjustable Bed Base

Head: 0-55° Foot: 0-40°



- Take A Nap -



- Deep Sleep -



- Zero Gravity -



- Relax -



- Reading -



- Watching TV -

Image 6: Illustrations demonstrating various adjustable positions, including 'Take a Nap', 'Deep Sleep', 'Zero Gravity', 'Relax', 'Reading', and 'Watching TV', showcasing the head and foot incline capabilities.

The independent head and foot incline allows for various comfortable positions, such as:

- **Reading/Watching TV:** Elevate the head section for comfortable upright support.
- **Relaxation:** Adjust both head and foot sections to find a comfortable lounging position.
- **Anti-Snore Function:** Slightly raising the head (e.g., 15 degrees) can help reduce snoring and relieve congestion.

## Twin XL Synchronization:

If using two Twin XL bases to form a King size bed, the mutual learning function allows both bases to be controlled with a single remote control for synchronized adjustments.

## MAINTENANCE

- **Cleaning:** Wipe the bed base with a dry cloth to remove dust and debris. Avoid using harsh chemicals or abrasive

cleaners.

- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Retighten if necessary.
- **Motor Care:** The motor is designed for long-term, maintenance-free operation. Do not attempt to lubricate or disassemble the motor.

## TROUBLESHOOTING

If you encounter issues with your DORTALA Adjustable Bed Base, refer to the following common problems and solutions:


- **Bed Base Not Responding:**
  - Check if the power cord is securely plugged into a working electrical outlet.
  - Ensure the remote control batteries are not depleted. Replace if necessary.
  - Verify that the remote control is properly paired with the bed base. Refer to the pairing instructions in the quick start guide.
- **Motor Noise:**
  - The bed base motor operates quietly (less than 55dB). If unusual or excessive noise occurs, ensure no objects are obstructing the moving parts.
  - Check that all assembly bolts are tightened.
- **Mattress Sliding:**
  - Ensure the mattress retainer bar is correctly installed and secured at the foot of the bed base.

For issues not covered here, please contact DORTALA customer support.


## SPECIFICATIONS

# Practical Bed Frame

- ✓ Quiet Motor
- ✓ Multi-scene Use
- ✓ Recommended Mattress Size: 60" x 80"
- ✓ Overall Dimension in Flat State: 79" x 59" x 14.5"

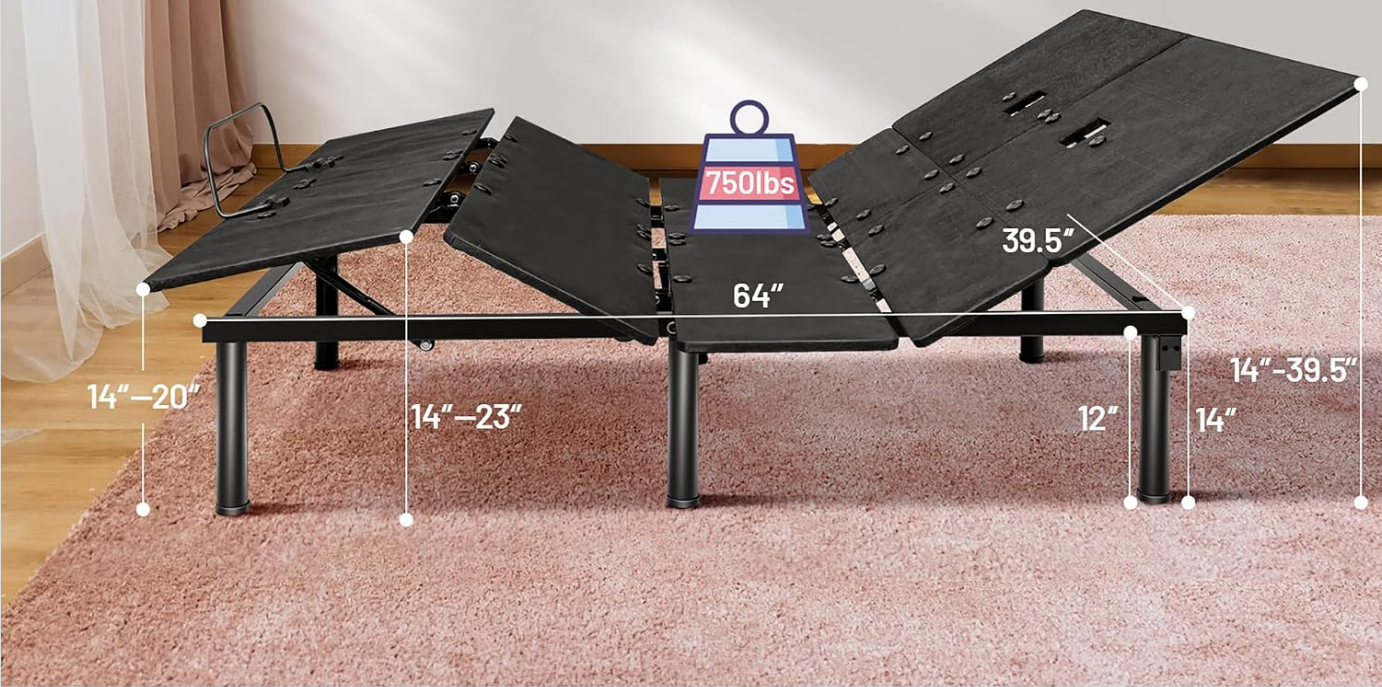

Memory Foam Mattress

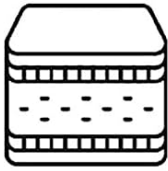

Gel Foam Mattress



Hybrid Mattress



Innerspring Mattress

Image 7: Visual representation of the bed base dimensions in flat state and its maximum weight capacity.

| Feature                        | Detail                                    |
|--------------------------------|-------------------------------------------|
| Model Number                   | DO-HU10061-Q-CA                           |
| Size                           | Queen                                     |
| Overall Dimension (Flat State) | 79" x 59" x 14.5" (200.5 x 150 x 36.5 cm) |
| Max Weight Capacity            | 750 lbs (340 kg)                          |
| Head Adjustment Range          | 0° to 55°                                 |
| Foot Adjustment Range          | 0° to 40°                                 |
| Noise Level                    | < 55dB                                    |
| Material                       | Plywood, Metal (Alloy Steel)              |

| Feature                    | Detail                                                              |
|----------------------------|---------------------------------------------------------------------|
| USB Ports                  | Dual, 5V=1.5A each                                                  |
| Special Features           | Adjustable, USB Port, LED Under-Bed Lights, Wireless Remote Control |
| Recommended Mattress Types | Memory foam, gel foam, hybrid, etc.                                 |
| Assembly Required          | Yes                                                                 |
| Product Care               | Wipe with Dry Cloth                                                 |

## WARRANTY INFORMATION

Specific warranty details for the DORTALA Adjustable Bed Base are typically provided at the point of purchase or included with the product packaging. Please refer to your purchase documentation or contact the seller/manufacturer directly for comprehensive warranty information.

## CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your DORTALA Adjustable Bed Base, please contact the seller or the DORTALA customer service department. Contact information can usually be found on the product packaging, the seller's website, or your purchase invoice.

© 2024 DORTALA. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0B8HQ4FVC>

More documents and user manuals: <https://manuals.plus/>