

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [BAIJAC](#) /

› BAIJAC Even Feed Walking Foot Instruction Manual for Janome NewHome L108 L109 L110 L344 L352 L353 L372

## BAIJAC L108 L109 L110 L344 L352 L353 L372

# BAIJAC Even Feed Walking Foot Instruction Manual

For Janome NewHome L108, L109, L110, L344, L352, L353, L372 Sewing Machines

## INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your BAIJAC Even Feed Walking Foot. This accessory is designed to enhance your sewing experience by ensuring consistent fabric feeding, especially with challenging materials like multiple layers, slippery fabrics, or quilting projects. Please read these instructions carefully before use.

## PRODUCT OVERVIEW

The BAIJAC Even Feed Walking Foot is a universal low metal shank accessory featuring a 7mm slot and an integrated quilting guide. It is engineered to move layers of fabric through the sewing machine at the same rate, preventing shifting and puckering.

### Key Features:

- Universal Low Metal Shank design for broad compatibility.
- 7mm Slot for various stitch widths.
- Integrated Quilting Guide for precise parallel stitching.
- Ensures even feeding of multiple fabric layers.

### Compatible Models:

This walking foot is a replacement part compatible with Janome NewHome sewing machine models L108, L109, L110, L344, L352, L353, and L372. It is also compatible with alternative part numbers 200311003, 214501005, 214508002, 395719-26, 395719-90, and 834416002.

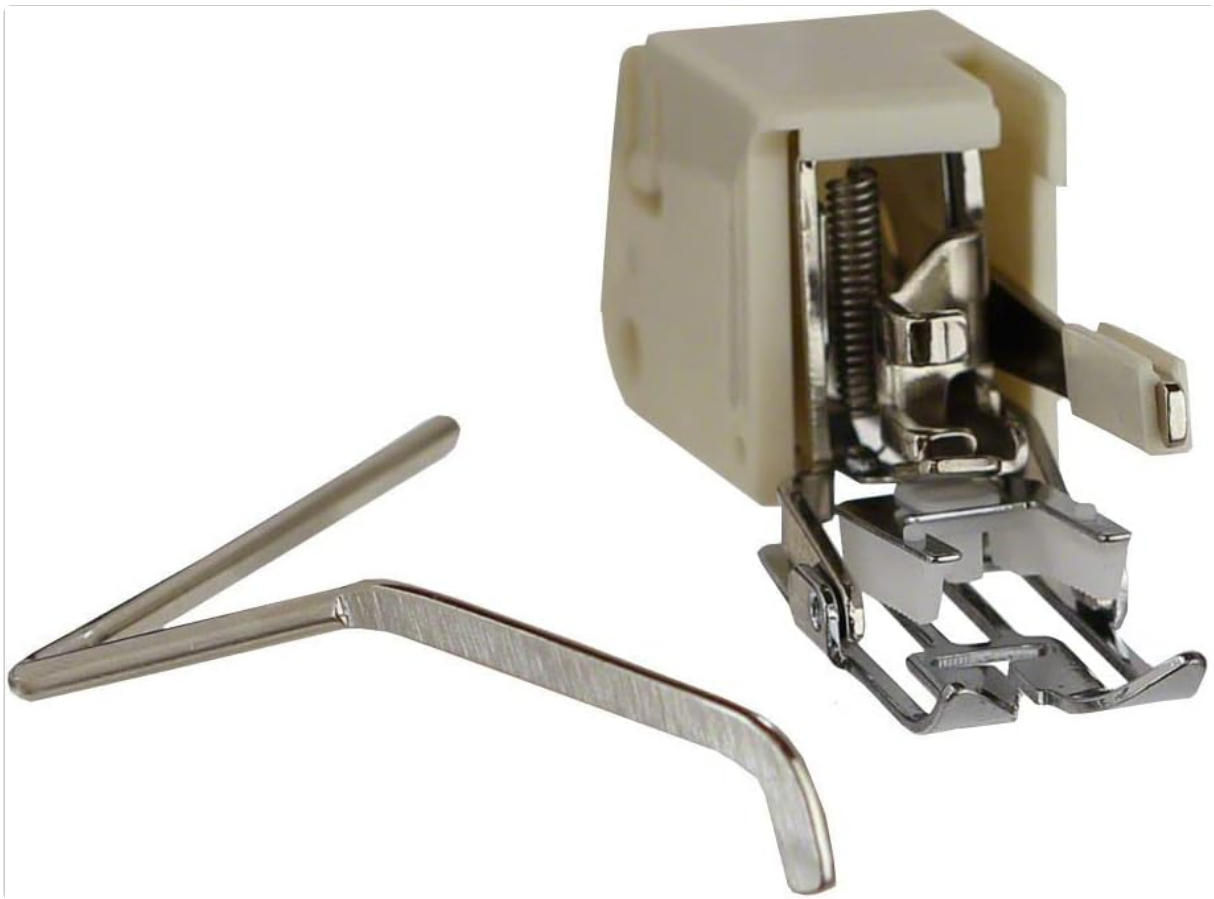


Figure 1: The BAIJAC Even Feed Walking Foot, showing its main body and the detachable quilting guide.

## SETUP AND INSTALLATION

1. **Power Off:** Ensure your sewing machine is turned off and unplugged from the power outlet for safety.
2. **Remove Current Presser Foot:** Raise the needle to its highest position. Loosen the screw that holds the current presser foot in place and remove it.
3. **Attach Walking Foot:** Position the walking foot so that the fork-shaped arm rests over the needle bar clamp screw. Align the foot with the presser foot bar.
4. **Secure the Foot:** Tighten the screw to firmly secure the walking foot to the presser foot bar. Ensure the fork arm is correctly positioned over the needle bar clamp.
5. **Attach Quilting Guide (Optional):** If using the quilting guide, slide it into the small hole at the back of the walking foot. Adjust its position for your desired seam allowance.

Always ensure the walking foot is securely attached before operating the machine to prevent damage to the foot or the machine.

## OPERATING INSTRUCTIONS

The even feed walking foot is particularly useful for projects requiring precise fabric handling. It works by using its own set of feed dogs to grip the top layer of fabric, moving it in sync with the machine's lower feed dogs.

1. **Select Stitch:** Choose your desired stitch type and length. A straight stitch is commonly used with the walking foot, especially for quilting.
2. **Place Fabric:** Position your fabric layers under the walking foot. Lower the presser foot lever.

3. **Begin Sewing:** Start sewing at a moderate speed. Observe how the fabric layers feed evenly through the machine.
4. **Using the Quilting Guide:** For parallel lines of stitching, adjust the quilting guide to the desired distance from your previous stitch line or fabric edge. The guide will help maintain consistent spacing.



*Figure 2: The walking foot actively feeding fabric through a sewing machine, demonstrating its function in maintaining even layers.*

### **Recommended Uses:**

- Quilting (especially machine quilting multiple layers).
- Sewing slippery fabrics like silk, satin, or chiffon.
- Working with thick materials or multiple layers of fabric (e.g., denim, fleece).
- Matching plaids or stripes to prevent shifting.

### **MAINTENANCE**

To ensure the longevity and optimal performance of your BAIJAC Even Feed Walking Foot, follow these simple maintenance guidelines:

- **Cleaning:** Periodically remove any lint or thread buildup from around the foot's moving parts using a small brush or tweezers.
- **Storage:** Store the walking foot in a dry, clean place when not in use to prevent dust accumulation and potential damage.
- **Inspection:** Regularly inspect the foot for any signs of wear or damage. If any parts appear bent or broken, discontinue use and consider replacement.

## TROUBLESHOOTING

| Problem                   | Possible Cause   | Solution  |
|---------------------------|--|---|
| Fabric not feeding evenly | Walking foot not properly installed; fork arm not over needle bar clamp screw. | Ensure the fork arm is correctly positioned over the needle bar clamp screw and the foot is securely tightened. |
| Skipped stitches          | Needle is bent or dull; incorrect needle size for fabric; tension issues.      | Replace the needle. Use the correct needle type and size for your fabric. Check machine tension settings.       |
| Foot not moving smoothly  | Lint or debris buildup; foot is damaged.                                       | Clean the foot thoroughly. Inspect for damage; replace if necessary.  |

## SPECIFICATIONS

- **Product Type:** Even Feed Walking Foot with Quilting Guide
- **Shank Type:** Low Metal Shank
- **Slot Width:** 7mm
- **Manufacturer:** BAIJAC
- **ASIN:** B0B8ZRRHHT
- **Compatible Models:** Janome NewHome L108, L109, L110, L344, L352, L353, L372
- **Alternative Part Numbers:** 200311003, 214501005, 214508002, 395719-26, 395719-90, 834416002

## WARRANTY AND SUPPORT

This BAIJAC product is designed for durability and performance. While specific warranty details are not provided in this manual, the product is guaranteed for fit and function. For any questions, technical assistance, or support regarding this product, please refer to your retailer or the manufacturer's official support channels.