

[Manuals+](#)

[Q & A](#) | [Deep Search](#) | [Upload](#)

Leitner LH570

Leitner LH570 2-in-1 Wireless Office Headset User Manual

MODEL: LH570 SINGLE-EAR PREMIUM PLUS

Introduction

The Leitner LH570 is a versatile 2-in-1 wireless office headset designed for seamless connectivity with both desk phones and computers. Utilizing DECT 6.0 Level A technology, it offers superior range and crystal-clear audio, ensuring reliable communication in various office environments. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your LH570 headset.



The Leitner LH570 wireless headset system, featuring the single-ear headset and its charging base station.

Setup

Before using your Leitner LH570 headset, please follow these steps to ensure proper setup and connectivity:

1. **Unpack Components:** Verify all components are present: the LH570 single-ear wireless headset, the base station, power adapter, and necessary connection cables (USB and telephone cable).
2. **Connect Power:** Plug the power adapter into the base station and then into a power outlet.
3. **Connect to Desk Phone:** For desk phone connectivity, connect the telephone cable from your desk phone's headset port to the corresponding port on the LH570 base station. Consult your phone's manual for specific headset port locations.
4. **Connect to Computer:** For computer connectivity, connect the USB cable from your computer's USB port to the USB port on the LH570 base station.
5. **Charge Headset:** Place the headset onto the base station's charging cradle. The headset will begin charging automatically. A full charge typically takes about 1 hour.
6. **Initial Pairing:** The headset and base station are typically pre-paired. If not, refer to the troubleshooting section for pairing instructions.

IS THIS HEADSET RIGHT FOR YOU?

✓ WORKS WITH



Office Desk
Phones



Computers



VoIP
Softphones

✗ DOES NOT WORK WITH



Cell Phones



Bluetooth -
only devices



Tablets

Fully DECT — Not Bluetooth. Ensures superior range and clarity.

The Leitner LH570 headset is compatible with office desk phones, computers, and VoIP softphones. It is not compatible with cell phones or Bluetooth-only devices.

Important Note: The Leitner LH570 is a DECT headset, not a Bluetooth headset. It is designed for superior range and clear audio with desk phones and computers, and is not compatible with cell phones or other Bluetooth devices.

Your browser does not support the video tag.

Watch this animation to understand the key features and connectivity options of the Leitner Premium Plus headset, including its DECT technology, noise-canceling microphone, and dual connectivity for computers and phones.

Operating Instructions

The Leitner LH570 headset is designed for intuitive operation, enhancing your productivity in the office or at home.

- **Dual Connectivity:** Easily switch between your desk phone and computer with the press of a button on the base station. This UniBase Technology allows you to merge landline and computer calls for conferencing.
- **Leitner FocusLight:** The headset features a unique FocusLight on the earcup to indicate your call status to others. This helps minimize interruptions:
 - **Flashing Blue:** Incoming Call
 - **Solid Blue:** Active Call
 - **Solid Purple:** On Mute



Leitner FocusLight

Flashing Blue =
Ringing



Solid Blue =
Active Call



Solid Purple =
On Mute



Avoid interruptions with
visible call status

The Leitner FocusLight visually indicates incoming calls (flashing blue), active calls (solid blue), and muted status (solid purple).

- **Audio Quality:** Benefit from CleanSound Technology for speech-optimized frequency focus, ensuring exceptional clarity for your callers. The Ultra Noise-Canceling Microphone filters out most background noise, making your voice crisp and clear, ideal for busy environments.
- **DECT UltraRange Mobility:** Enjoy freedom of movement with up to 350 feet of wireless range from the base station. This is significantly greater than standard Bluetooth ranges, allowing you to move around your office or home without losing call quality.
- **Comfort:** The UltraFlex Headband is designed to mold to your liking, retaining its form for a perfect fit, ensuring comfort during extended use.
- **Compatibility:** The LH570 is compatible with 99% of office phones and 100% of softphones and computers, including popular platforms like Microsoft Teams, Zoom, RingCentral, Polycom, Yealink, Cisco, Avaya, and Mitel.

Maintenance


To ensure the longevity and optimal performance of your Leitner LH570 headset, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe down the headset and base station regularly. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters openings. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, always place the headset on its charging cradle to keep it charged and ready. Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** While the headset has a long battery life, avoid completely draining the battery frequently. Regular charging helps maintain battery health.

Troubleshooting

If you encounter issues with your Leitner LH570 headset, try the following solutions:

- **No Audio/Connection Issues:**
 - Ensure all cables (power, USB, telephone) are securely connected to the base station and your devices.
 - Verify the headset is properly seated on the charging cradle and fully charged.
 - Confirm the correct input source (phone or computer) is selected on the base station.
 - For computer use, check your operating system's sound settings to ensure the LH570 is selected as the default input/output device.
- **Headset Not Pairing:** If the headset loses connection or fails to pair with the base station, perform a reset:
 1. Remove the power cord, USB cord, and headset from the base.
 2. Remove the battery from the headset for 30 seconds, then slide it back in.
 3. Plug the power cord back into the base station.
 4. Hold the telephone button on the base until the power light flashes. Release and wait for the flashing to stop.

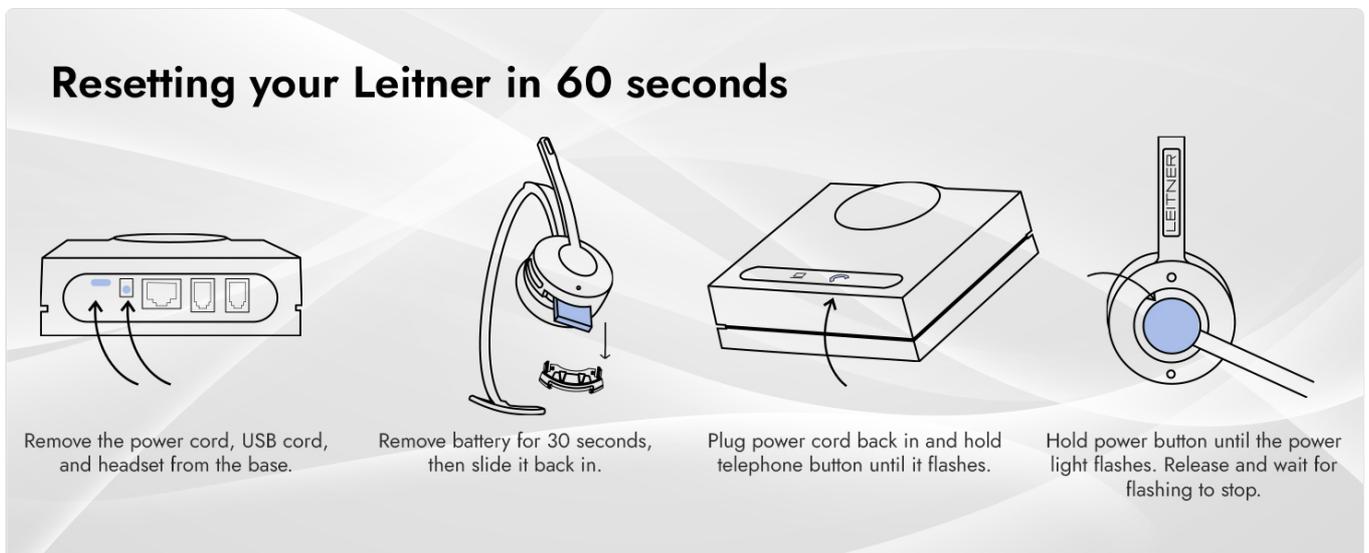

Visual guide for resetting your Leitner headset in 60 seconds, including disconnecting cables, removing/reinserting the battery, and pressing the telephone button on the base.

- **Poor Audio Quality:**
 - Ensure the microphone boom is positioned correctly, about two fingers' width from your mouth.
 - Check for any physical obstructions or interference sources near the base station or headset.
 - If using with a desk phone, ensure the compatibility switch on the base station is set correctly for your phone model.

Specifications

| Feature | Detail |
|-------------------------|-----------------------------|
| Model Name | LH570 Premium Plus |
| Connectivity Technology | Wireless DECT 6.0 Level A |
| Wireless Range | Up to 350 FT |
| Headphones Jack | USB |
| Noise Control | Sound Isolation |
| Included Components | Single-Ear Wireless Headset |
| Material | UltraFlex Moldable Material |
| Charging Time | 1 Hour |
| Battery Life | 8 Hours |
| Audio Driver Type | Dynamic Driver |
| Item Weight | 1.59 pounds |
| Color | Black |
| Ear Placement | On Ear |
| Form Factor | On Ear |
| Impedance | 32 Ohm |
| UPC | 810067130424 |

Warranty and Support

The Leitner LH570 Premium Plus Headset comes with an industry-leading **5-Year Full Replacement Warranty**, guaranteed by Leitner Headsets. This warranty covers defects in materials and workmanship under normal use. For any questions, technical assistance, or warranty claims, please contact Leitner Headsets directly. Their US-based headset experts are available to provide unlimited support.

You can typically find contact information on the official Leitner Headsets website or through the retailer where you purchased the product.



[\[pdf\]](#) User Manual Instructions Frequently Asked Questions Troubleshooting Guide Accessories

User Manual IPN Headsets LH570BS 2ALB3LH570BS lh570bs

LH570/575 1 2 CONTENTS Understanding your... Headset controls 4 Charging base 5 Indicator lights 6 Audio signals 7 How to... Set up your headset 8 Make a call 11 Answer a call 12 Use UniBase Technology 13 Control your volume 14 Activate auto-on feature 15 Turn on call con...

lang:en score:26 filesize: 2.47 M page_count: 24 document date: 2022-08-30

| LEITNER DECT/GAP/USB US Technical Specifications | |
|--|---|
| Approvals | FCC certified, EN60950-1, EN301489-1, EN301489-6, EN50222, EN50224, EN61000-3-2, EN61000-3-3, EN61000-3-11, EN60335-2009 for headset, EN50385 for base |
| Battery Type | Li-ion polymer (rechargeable) |
| Bluetooth | Version 4.1 |
| Bluetooth Range | 30 feet |
| Charging temperature | 32°F to 104°F (0°C to 40°C) |
| Charging time | 1 hour |
| Compatibility | DECT/GAP V03P/USB (Windows 7,8,10,11 & Mac OS X) compatible |
| Conference call | 2 parties |
| Dimensions | 110mm(L) x 110mm(W) x 33mm(H) |
| Microphone | Background noise cancelling microphone |
| Hook function | Yes |
| Operating frequency | From 1920 to 1920 MHz |
| Operating range | 32F to 104F (0C to 40C) |
| Operation temperature | 32F to 104F (0C to 40C) |
| Pairing passkey or pin | By registering the LH570 to a DECT Phone, the PIN code of the base unit should be 1111 or 0000 |
| Power Saving | Switching Power Mode Supply Dynamic Power Adjustment (strength of the DECT signal is automatically adjusted by the base, dependent on the proximity of the headset to the base) |
| Protection (Acoustic shock) | Yes (2-85) |
| Rain shower proof | No |
| Security | DECT 6.0 (Deep A enhanced security) |
| Speaker | High Performance wideband speaker |
| Stand by time | 104 hours |
| Storage temperature | 32F to 104F (0C to 40C) |
| Talk time | 9 hours |
| Weight | 63 grams LH570 |
| Weight (without battery) | 59 grams LH570 |
| Weight battery | 4 grams |
| Wearing style | Head band |

[\[pdf\]](#) Specifications Dimension Guide Warranty

Will Bright Specification Sheet Amazon Leitner LH670 Wireless Office Headset with Mic DECT for Cell Phone Computer and Phones Single Ear Premium Plus Products 51YiYoM6QcL m media amazon images | ||

LEITNER DECT/GAP/USB US Technical Specifications Approvals Battery Type Bluetooth Bluetooth Range ... Performance wideband speaker : 104 hours : 32F to 104F 0C to 40C : 9 hours : 5 years : 63 grams **LH570** : 59 grams **LH570** : 4 grams : Head band ...

lang:en score:25 filesize: 63.35 K page_count: 1 document date: 2023-04-13




[\[pdf\]](#) User Manual Quick Start Guide Guide

Leitner Headsets QSG 2022 Final v6 LH570 575 Quick Start Guide Premium Lifetime Headset Help Support LH500 c440e3af a79b 40cd b0b5 ab1e7665cf0c v 1674576968 cdn shopify s files 1 0553 3171 7282 |||

Plug the green cord into the green jack on the back of your headset base Plug the other end of the green cord into the headset jack of your phone If you don t have a headset button on your desk phone, unplug the curly cord from the base of the desk phone and plug it into the blue jack of the headset...

lang:en score:22 filesize: 1.17 M page_count: 1 document date: 2023-01-24

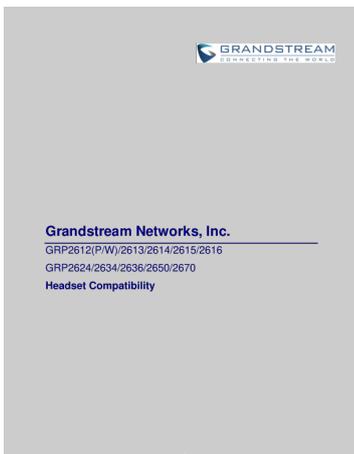

[\[pdf\]](#)

Mohamed Zakaria Boujadi Grandstream GRP26xx headset compatibility list GRP2615 High end Carrier grade IP Phone VoIP Supply grandstream grp26xx voipsupply mw link id 52583 |||

Grandstream Networks, Inc. GRP2612 P/W /2613/2614/2615/2616 GRP2624/2634/2636/2650/2670 Headset Comp ... 4/2634/2636/2650/2670 Headset Compatibility Page 3 Leitner LH270 LH275 LH280 LH370 LH375 LH380 **LH570** LH575 LH670 LH675 VBET EHS10 Table 3: Bluetooth headsets Note: Vendor 1. Supported on GRP2...

lang:en score:19 filesize: 138.69 K page_count: 6 document date: 2023-11-14

