

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KFD](#) /
- › [KFD 26V AC DC Adapter \(Model Q36\) Instruction Manual](#)

KFD Q36

KFD 26V AC DC Adapter (Model Q36) Instruction Manual

For VYBE Premium Vibration Massager Device Model 8806 and Compatible Devices

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your KFD 26V AC DC Adapter, Model Q36. This power supply is designed to provide stable 26V DC power to compatible devices, primarily various massage guns and vibration massagers. Please read this manual thoroughly before use and retain it for future reference.



Image 1.1: KFD 26V AC DC Adapter shown with a compatible message gun and interchangeable heads.

2. SAFETY INFORMATION

Your KFD 26V AC DC Adapter is designed with multiple safety features to ensure reliable operation and protection for your devices. Adhere to the following safety guidelines:

- **Over Voltage Output Protection (OVP):** Prevents damage to your device from excessive voltage.
- **Over Current Output Protection (OCP):** Safeguards against damage from excessive current draw.
- **Short Circuit Output Protection (SCP):** Automatically shuts down power in case of a short circuit.
- The adapter is constructed with fire-retardant materials and features efficient heat dissipation.
- Ensure the adapter is used in a well-ventilated area.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Do not attempt to disassemble or repair the adapter. Contact support if service is required.
- This product is CE, FCC, and RoHS certified, indicating compliance with health, safety, and environmental protection standards.

High efficiency chip solution

Multiple protection for more security



Materialien
für den
Brandschutz



Overload
Prevention



OverVoltage
Prevention




Overcurrent
Prevention



Intelligent
current matching
current

Image 2.1: Illustration of the adapter's internal chip solution with multiple protection mechanisms.

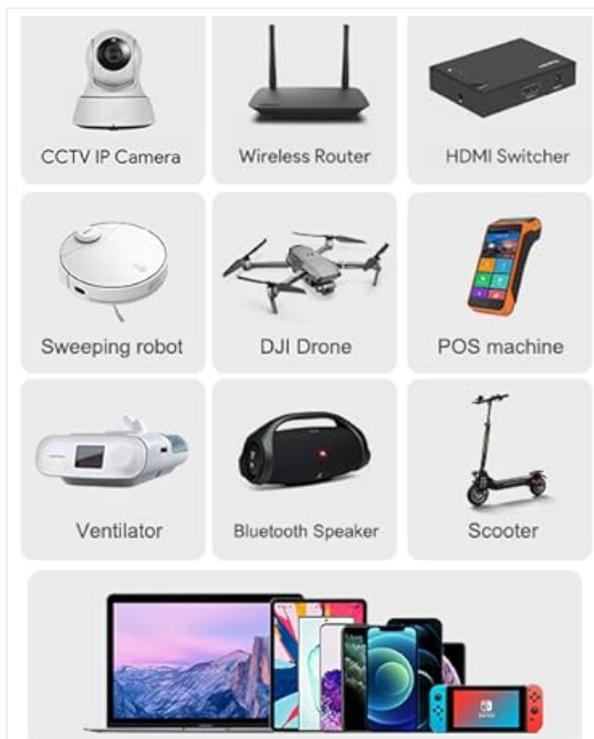

3. PACKAGE CONTENTS

Verify that all items are present in the package:


- 1 x KFD 26V AC DC Adapter Power Supply for VYBE Premium Vibration Massager Device Model 8806 Charger
- 1 x User Manual (this document)

4. SPECIFICATIONS

Feature	Specification
Model Number	Q36
Input Voltage	100-240V ~ 50/60Hz
Output Voltage	26V DC (Compatible with 24V/25V)
Output Current	1 Amps
Wattage	30 watts
Connector Type	Barrel Connector
Package Dimensions	5.04 x 3.66 x 1.54 inches
Item Weight	5.6 ounces
Certifications	CE, FCC, RoHS
Special Feature	Short Circuit Protection




Image 4.1: The KFD AC DC Adaptor showing its model number, input, and output specifications.

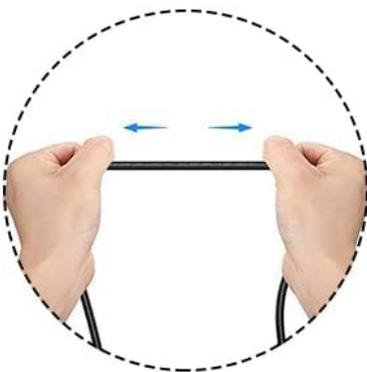

Tough PVC Jacket



Long Bend Lifespan

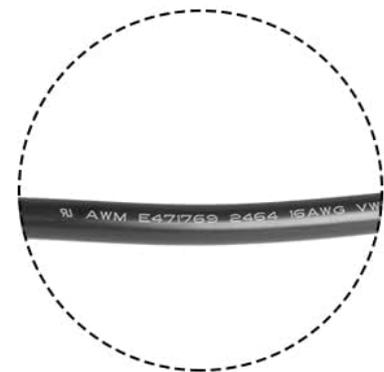

UL Certification:E471769

Image 4.2: Detail of the adapter's durable cable construction and UL certification.

5. SETUP

Follow these steps to set up your KFD 26V AC DC Adapter:

1. **Verify Compatibility:** Ensure your device requires a 26V DC input and has a compatible barrel connector. Refer to your device's manual for power requirements.
2. **Connect to Device:** Insert the barrel connector of the KFD adapter into the DC input port of your massage device.
3. **Connect to Power Outlet:** Plug the AC prongs of the adapter into a standard 100-240V wall outlet.
4. **Power On:** Once connected, your device should begin charging or be ready for operation, depending on its design.

6. OPERATING

The KFD 26V AC DC Adapter operates automatically once connected to a power source and a compatible device. It provides a continuous 26V DC output for charging or powering your equipment.

- Always ensure a secure connection between the adapter, the wall outlet, and your device.
- Monitor your device's charging indicator (if available) to confirm proper power delivery.

- Disconnect the adapter from the wall outlet when not in use for extended periods.

7. COMPATIBILITY

This KFD 26V AC DC Adapter is compatible with a range of devices requiring 26V DC input. Known compatible models include:

- VYBE Premium Vibration Massage Device Model 8806
- VYBE Premium Percussion Muscle Deep Massager Tissue Massage Gun
- VYBE X Professional Powerful Percussion Massager Handheld Deep Muscle Massage Gun
- Hyperice Hypervolt #53000 001-00, 53000-001-00 Cordless Vibration Massage Device
- Booster Pro 2, Pro2 X, X2, P2 Muscle Massager
- JUFIT Fascia Massage Gun
- Cotsoco Massage Gun 5 Speeds Cordless Handheld Deep Tissue & Muscle
- Simsukian SK03T-2400100Z
- Feeke Kaiyu Massage Gun
- VIWIK Lpysfw Massage Gun
- Replacement P/N for SK03T1-2600100W2, SK03T-2400100Z, HU10561-16022B, #53000 001-00
- Also fits for taotronics, opove m3 pro, toloco, legiral, phoenix massage gun chargers (verify voltage requirements)

COMPATIBLE



Image 7.1: The KFD adapter highlighted as compatible with a VYBE massage gun.

8. INCOMPATIBILITY

This adapter is **NOT** compatible with the following models or voltage versions:

- VYBE Pro
- Hyperice Go
- Vyper
- 16.8V version devices
- 18V version devices

Using this adapter with incompatible devices may cause damage to the device or the adapter itself. Always verify the voltage requirements of your device before connecting.

9. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your KFD AC DC Adapter:

- **Cleaning:** Wipe the adapter with a dry, soft cloth. Do not use liquid cleaners or solvents.

- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or crimping the cable excessively. Do not place heavy objects on the cable.
- **Inspection:** Periodically inspect the adapter and cable for any signs of damage, such as frayed wires or cracks. Discontinue use if damage is found.

10. TROUBLESHOOTING

If you encounter issues with your KFD 26V AC DC Adapter, refer to the following common troubleshooting steps:

- **No Power Output:**
 - Ensure the adapter is securely plugged into a working wall outlet.
 - Verify the device is correctly connected to the adapter.
 - Test the wall outlet with another appliance to confirm it has power.
- **Device Not Charging/Powering On:**
 - Confirm that your device requires 26V DC input. Using an incorrect voltage adapter can prevent operation.
 - Check the device's charging port for any obstructions or damage.
 - Ensure the device's battery is not completely depleted or faulty.
- **Adapter Overheating:**
 - Disconnect the adapter immediately.
 - Ensure the adapter is in a well-ventilated area and not covered.
 - If overheating persists, discontinue use and contact customer support.

If these steps do not resolve the issue, please contact KFD customer support for further assistance.

11. WARRANTY AND SUPPORT

KFD stands behind the quality of its products. Your KFD 26V AC DC Adapter comes with the following:

- **Warranty:** 36 Months Warranty from the date of purchase.
- **Free Exchange:** 30 Days Free Exchange for any manufacturing defects.

For warranty claims, technical support, or any questions regarding your product, please contact KFD customer service through the retailer's platform or the official KFD website. Please have your purchase details and product model number (Q36) ready when contacting support.



Image 11.1: KFD warranty and customer support information.