

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [NVAHVA](#) /

› [NVAHVA A68 Translation Earbuds User Manual](#)

NVAHVA A68

NVAHVA A68 Translation Earbuds User Manual

Model: A68

1. INTRODUCTION

The NVAHVA A68 Translation Earbuds are designed to provide a seamless audio experience with advanced real-time translation capabilities. These earbuds feature an invisible, lightweight design for comfort, especially for side sleepers, and support various translation modes, meeting recording, and call translation. This manual will guide you through the setup, operation, and maintenance of your device.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 2 x Earbuds
- 1 x Charging Case
- 1 x Type-C Charging Cable
- 3 x Pairs of Eartips (S/M/L)
- 1 x User Manual
- 1 x App Code Card

ULTRA-COMPACT SMART COMPANION

Music + Call + Translate + Sleep



Hi-Fi Audio &
Clear Calls



AI-Powered Live
Translation



Comfortable
Sleep Aid



Image: NVAHVA A68 Earbuds, charging case, and accessories.

3. PRODUCT OVERVIEW

The NVAHVA A68 earbuds are designed for versatility, offering high-fidelity audio, AI-powered translation, and a comfortable fit for extended wear, including during sleep.

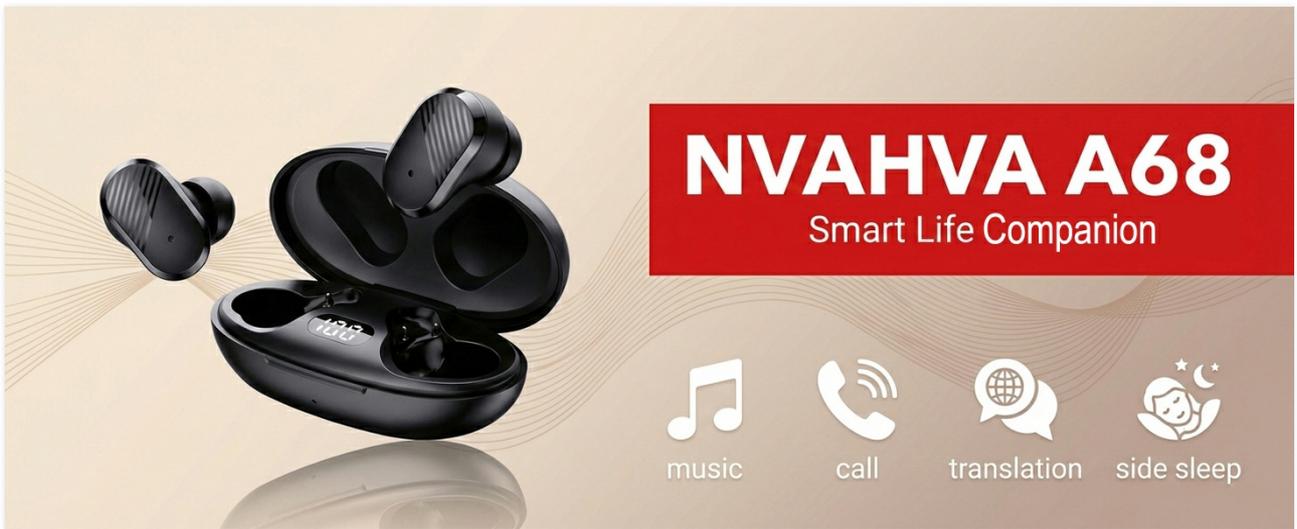


Image: Overview of the NVAHVA A68 as an ultra-compact smart companion.



Image: The lightweight and compact design of the earbuds and charging case.

Comfort for Side Sleepers to play sleep aids white noise



Image: Earbuds designed for comfort, even for side sleepers.

Your browser does not support the video tag.

Video: An overview of the NVAHVA A68 Invisible Wireless Earbuds, showcasing their small size and features.

4. SETUP GUIDE

4.1 Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case. Connect the provided Type-C charging cable to the charging case and a USB power source. The digital display on the case will indicate the charging status. A full charge takes approximately 2 hours. The earbuds provide 4-6 hours of continuous use, with the charging case extending total usage to 20-24 hours.

4.2 App Download and Installation

To utilize the full translation features, download the companion application:

1. Open a QR code scanning function on your smartphone (e.g., your phone's browser or a dedicated QR scanner app).
2. Scan the QR code found on the included App Code Card or in the physical user manual. This will direct you to the app

download page.

3. Select the appropriate download link for your mobile phone system (Android or Apple).
4. Follow the on-screen prompts to download and install the application. You may need to grant permission for installation from external sources.
5. Once installed, open the 'AI Cool' app.

Your browser does not support the video tag.

Video: Step-by-step guide on downloading and installing the NVAHVA AI Translation Earbuds application.

4.3 Bluetooth Connection

To connect your earbuds to your smartphone:

1. Ensure the earbuds are charged and removed from the charging case to enter pairing mode.
2. On your smartphone, go to 'Settings' and enable 'Bluetooth'.
3. In the Bluetooth device list, select the NVAHVA A68 (or similar name like 'AIWA' or 'TWS') to pair.
4. Open the 'AI Cool' app. On the home screen, click 'Add Device'.
5. You may be prompted to enter a binding code. This code is typically found on the cover of the AI Cool user guide. If not available, contact customer support. For built-in devices, a binding code may not be required.
6. Once connected, you can begin using the app's features.

5. OPERATING INSTRUCTIONS

5.1 Basic Touch Controls

The earbuds feature touch-sensitive controls for various functions:

- **Play/Pause:** Touch once
- **Answer/Hang up Call:** Touch once
- **Activate Voice Assistant:** Hold button for approximately 2 seconds
- **Reject Call:** Hold button for approximately 2 seconds
- **Next/Previous Track:** Knock L/R earbud 3 times
- **Volume Up/Down:** Knock L/R earbud twice

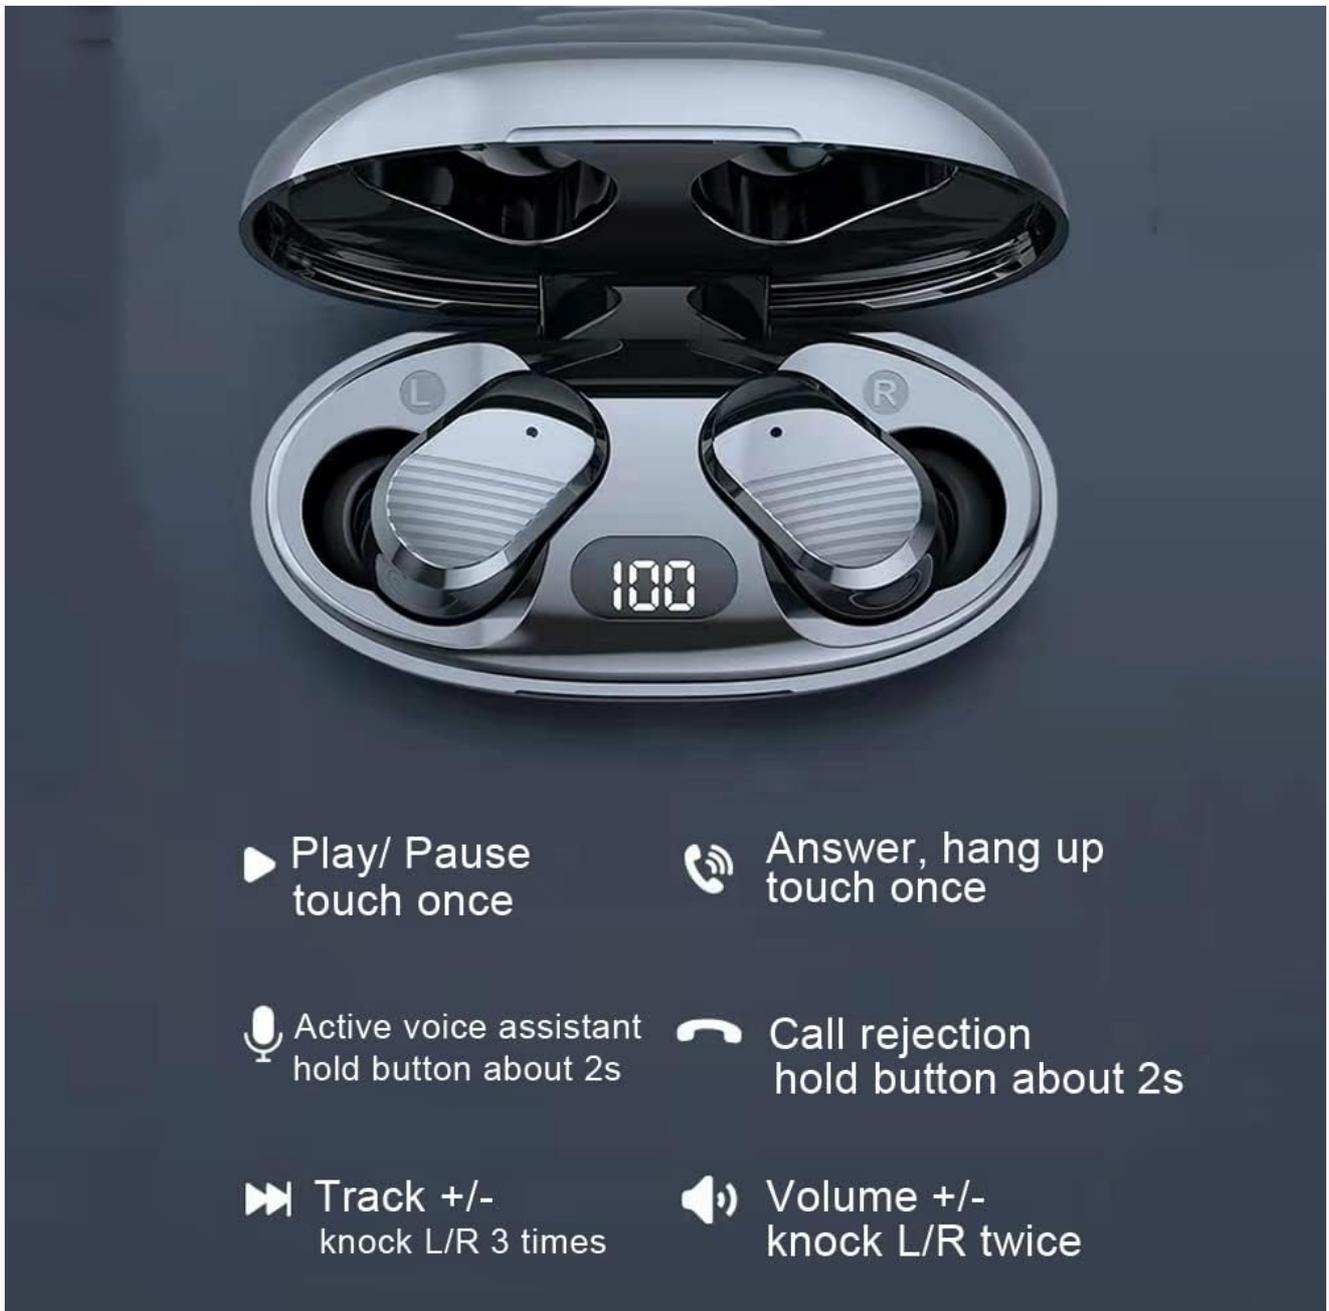


Image: NVAHVA A68 Earbuds touch control functions.

5.2 Translation Modes

The AI Cool app offers several translation modes:

- **Simul Mode (Face-to-Face):** For natural conversations where both parties wear an earbud and speak simultaneously. The earbuds provide real-time interpretation.





Face to Face Simul Mode: Both wearing earbuds, real-time translation, free communication



Image: Face-to-face simultaneous translation mode.

- **Speaker Mode (Earbud + Mobile):** One person wears an earbud, and the other speaks into the smartphone. The app translates and plays the audio through the earbud, facilitating quick interactions.



Business Cooperation

A68 provides real-time translation, ensuring smooth communication and discussion across different languages in international meetings.

Image: Earbud + Mobile mode for two-way conversation.

- **Listen Mode (Two Earphone Mode):** Both individuals wear earbuds, and the device recognizes and translates short sentences, enabling smooth and natural conversations.




Learning Assistant

A68 offers precise language translation, enhancing understanding and boosting learning outcomes, in classrooms or professional settings.

Image: Two Earphone Mode for free talk translation.

5.3 AI Meeting Assistant

The built-in Meeting Recorder feature provides real-time transcription and AI summarizing, ideal for international conferences and academic settings.

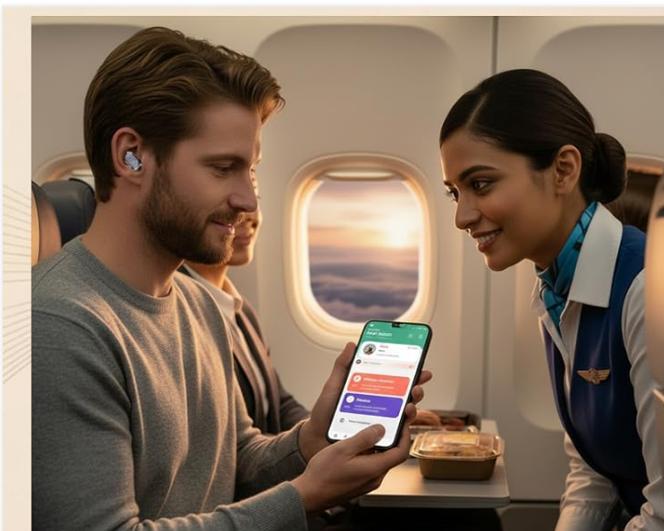

Offline Translator

In urgent situations like no wifi at airplane, A68 offers expert language translation at offline status, helping you communicate clearly.

Image: Meeting Recorder function for transcription and summarizing.

5.4 Call Translation

The earbuds support audio and video call translation on third-party applications like WhatsApp and Zoom, facilitating communication for remote teams and international connections. Note that this feature may require additional charges.



Image: Audio and video call translation in action.

5.5 Offline Translation

For situations without internet access, Offline Translation packs are available for a one-time purchase (\$9.99 lifetime buyout). These packs ensure translation functionality in remote areas or during travel. Supported languages include Chinese, English, German, Japanese, Korean, Hindi, Thai, Spanish, French, and Russian.

Secure Offline Translation, No Wifi Needed

\$9.99 Lifetime Free



Image: Using offline translation during air travel.

6. MAINTENANCE

To ensure the longevity and optimal performance of your NVAHVA A68 earbuds:

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Eartips:** Clean the eartips with a damp cloth and mild soap if necessary. Ensure they are completely dry before reattaching.
- **Storage:** Store the earbuds in their charging case when not in use to protect them from dust and damage. Keep them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Resistance:** The earbuds are water-resistant. However, they are not waterproof. Avoid submerging them in water or exposing them to heavy rain. Dry them thoroughly if they get wet.

7. TROUBLESHOOTING

If you encounter issues with your NVAHVA A68 earbuds, refer to the following common solutions:

Issue	Possible Solution
Earbuds not pairing/connecting to phone	<p>Ensure Bluetooth is enabled on your phone.</p> <p>Make sure earbuds are charged and out of the case.</p> <p>Forget the device in your phone's Bluetooth settings and try pairing again.</p> <p>Restart your phone and the earbuds.</p>
No sound or low volume	<p>Check phone's volume and earbud volume.</p> <p>Ensure earbuds are properly seated in your ears.</p> <p>Clean any debris from the earbud speakers.</p> <p>Reconnect the earbuds to your device.</p>
Translation not working or incorrect	<p>Ensure the AI Cool app is open and connected to the earbuds.</p> <p>Check your internet connection for real-time translation.</p> <p>Verify that the correct source and target languages are selected in the app.</p> <p>For offline translation, ensure the necessary language packs are downloaded and activated.</p>
App voice prompts are in a foreign language	<p>Check the language settings within the AI Cool app to change the prompt language to English.</p> <p>Refer to the app's specific settings menu for voice prompt language options.</p>
Earbuds falling out or uncomfortable	<p>Try different sizes of eartips provided in the package to find the best fit.</p> <p>Ensure the earbuds are inserted correctly into your ear canal.</p>

8. SPECIFICATIONS

Feature	Detail
Model Name	A68
Brand	NVAHVA
Connectivity Technology	Wireless (Bluetooth 5.3)
Bluetooth Range	10 Meters
Noise Control	Sound Isolation
Headphones Jack	USB-C (for charging case)
Battery Life (Earbuds)	5 Hours (continuous AI translation/music)
Total Battery Life (with Case)	20-24 Hours
Charging Time	2 Hours
Control Method	Touch, Voice
Material	Acrylonitrile Butadiene Styrene (ABS)

Feature	Detail
Item Weight (Earbuds)	34 Grams (total for both earbuds and case)
Water Resistance Level	Water Resistant
Audio Driver Type	Dynamic Driver
Audio Driver Size	10 Millimeters
Impedance	32 Ohms
Earpiece Shape	Bud
Special Features	Lightweight, Noise Isolation, Surround Sound, Sweatproof, Real-time Translation

9. SAFETY INFORMATION

Please read and follow these safety guidelines to prevent injury or damage to your device:

- Do not expose earbuds or charging case to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping, hitting, or disassembling the device.
- Keep out of reach of children and pets.
- Do not use the device while driving or in situations where you need to be aware of your surroundings.
- Prolonged exposure to loud sounds may cause hearing damage. Adjust volume to a moderate level.
- Use only the provided charging cable and a certified power adapter.

10. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you require technical assistance or have questions not covered in this manual, please contact the seller or manufacturer directly for support.