

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MediAcous](#) /
- › [MediAcous LED Floor Lamp \(Model ME-FL01\) Instruction Manual](#)

MediAcous ME-FL01

MediAcous LED Floor Lamp (Model ME-FL01)

Instruction Manual

INTRODUCTION

Thank you for purchasing the MediAcous LED Floor Lamp, Model ME-FL01. This manual provides essential information for the safe and efficient use of your new floor lamp. Please read these instructions carefully before assembly and operation, and retain them for future reference.



Figure 1: MediAcous LED Floor Lamp (Model ME-FL01) with remote control.

PACKAGE CONTENTS

Verify that all components are present in the package:

- 1x LED Floor Lamp (with integrated bulbs)
- 1x Remote Control
- 2x AAA Batteries (for remote control)
- 1x Power Adapter
- 1x User Manual



Figure 2: Lamp components for assembly.

SETUP INSTRUCTIONS

The MediAcous LED Floor Lamp is designed for simple assembly, typically taking less than 5 minutes without the need for additional tools.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble the Pole:** Connect the pole sections by screwing them clockwise until secure. Ensure the power cord runs freely through the pole.
3. **Attach the Base:** Securely screw the assembled pole into the lamp base.
4. **Attach the Lamp Head:** Connect the gooseneck section to the top of the pole, then attach the LED lamp head to the gooseneck.
5. **Insert Remote Batteries:** Open the battery compartment on the remote control and insert the two AAA batteries, observing correct polarity.
6. **Connect Power:** Plug the power adapter into the lamp's power input, then plug the adapter into a standard wall outlet.

OPERATING INSTRUCTIONS

Power On/Off

- **Touch Control:** Press the power button on the lamp's pole to turn the lamp on or off.
- **Remote Control:** Press the power button (**U**) on the remote control to turn the lamp on or off.

Brightness and Color Temperature Adjustment

The lamp offers 5 levels of brightness (20%-100%) and 5 color temperatures (2700K-5700K). Both stepless dimming and specific level adjustments are available.

- **Brightness:** Use the brightness adjustment buttons (+/-) on the remote or the dedicated brightness touch button on the lamp pole to cycle through or steplessly adjust brightness.
- **Color Temperature:** Use the color adjustment buttons (+/-) on the remote or the dedicated color temperature touch button on the lamp pole to cycle through or steplessly adjust color temperatures.

5 Brightness and Temperature

Stepless Dimmable and Click-on Adjustment

Brightness Level



20%

100%

Color Temperature



2700K

5700K

Figure 3: Brightness and color temperature options.

Flexible Gooseneck

The lamp features a 360° adjustable gooseneck, allowing you to direct the light precisely where needed. Gently bend and pivot the lamp head to achieve the desired lighting angle.

Adjustable Gooseneck

Pivot the lamp easily as you need



Figure 4: Demonstrating the adjustable gooseneck.

Remote and Touch Control

The lamp can be controlled via the integrated touch panel on the pole or the included remote control. The remote control operates within a range of 49.2 ft (15 m).

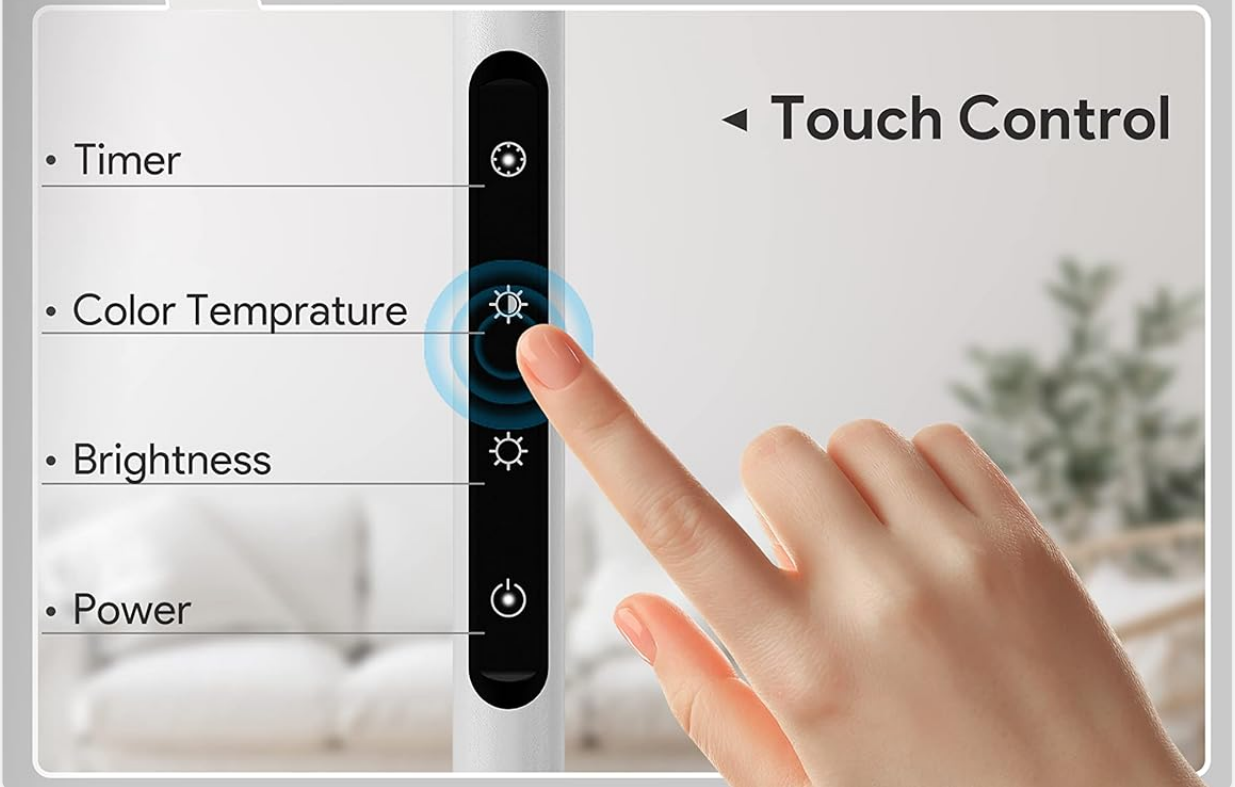


Figure 5: Remote and touch control options.

Remote Control Functions:



Figure 6: Remote control button layout.

- **Power (U):** Turns the lamp on/off.
- **Brightness Adjustment (+/-):** Increases or decreases light intensity.
- **Color Adjustment (+/-):** Changes color temperature (e.g., warm white to cool white).
- **Preset Modes:** Dedicated buttons for various lighting scenes (e.g., Reading Mode (4000K), Office Mode (5500K), Leisure Mode (3000K), Nursing Mode (3000K), Entertainment Mode (4000K)).
- **Night Light:** Activates a low-intensity light setting.
- **1-Hour Timer:** Sets the lamp to turn off automatically after one hour.

Touch Control Functions:



Figure 7: Touch control panel on the lamp pole.

- **Power:** Turns the lamp on/off.
- **Brightness:** Adjusts light intensity.
- **Color Temperature:** Changes light color.
- **Timer:** Activates the 1-hour timer.

Special Features

- **1-Hour Timer:** The integrated timer function can be activated to automatically turn off the lamp after one hour, promoting eye rest.
- **Memory Function:** When the lamp is turned off via a wall switch or smart plug, it will remember the last used brightness and color temperature settings upon being turned back on.
- **Wall Switch/Smart Plug Compatibility:** The lamp is designed to work seamlessly with external wall

switches or smart plugs, retaining settings due to the memory function.

- **Eye-Caring Light:** The LED light source is designed to be soft and flicker-free, reducing eye strain.

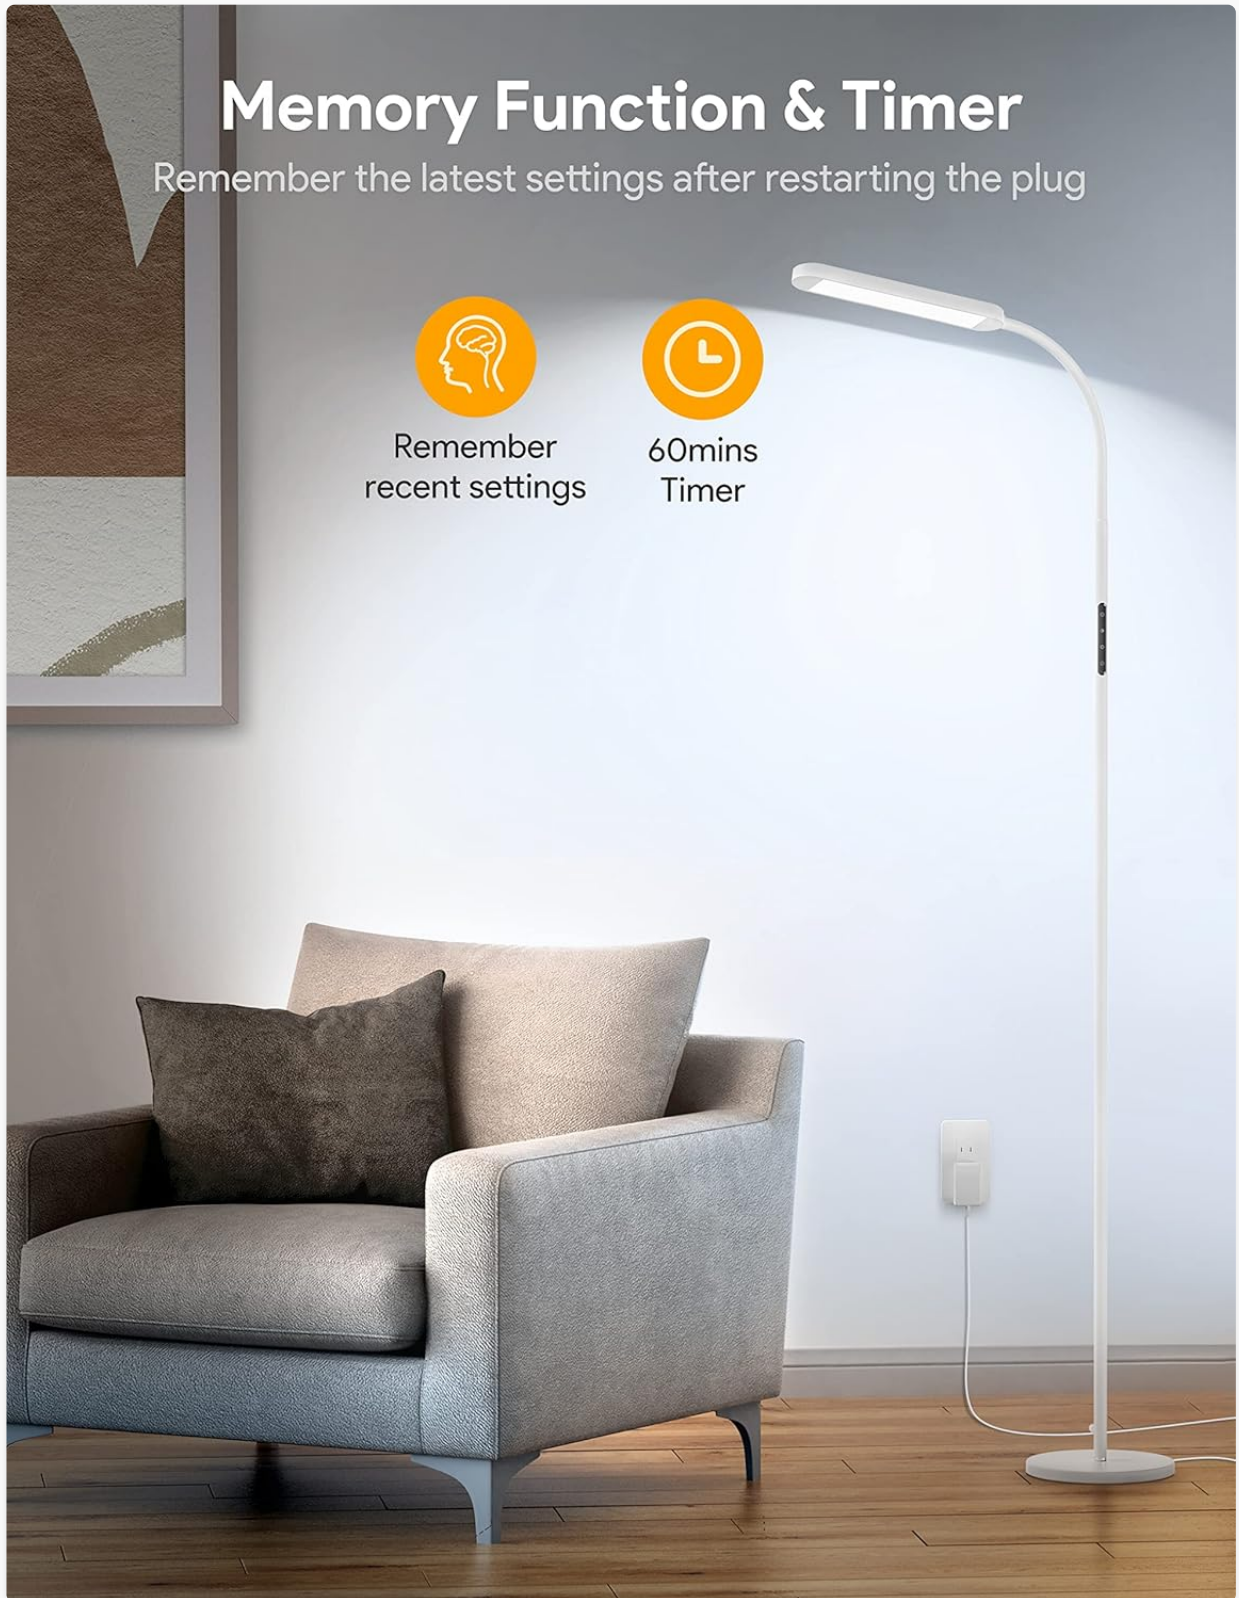


Figure 8: Memory function and 1-hour timer in use.

Eye Caring

Glare-free light protects your eyes



Figure 9: Eye-caring light for reading.

MAINTENANCE

Cleaning and Care

- Always unplug the lamp from the power outlet before cleaning.
- Use a soft, dry cloth to wipe down the lamp's surfaces.
- Do not use abrasive cleaners, solvents, or polishing agents, as these may damage the finish.

- Avoid getting moisture into any electrical components.

TROUBLESHOOTING

If you encounter any issues with your MediAcous LED Floor Lamp, please refer to the following common solutions:

- **Lamp does not turn on:**
 - Ensure the power adapter is securely plugged into both the lamp and a working wall outlet.
 - Check if the wall outlet is functional by plugging in another device.
 - Verify that the remote control batteries are correctly inserted and not depleted.
- **Remote control is not responding:**
 - Ensure there are no obstructions between the remote and the lamp.
 - Replace the AAA batteries in the remote control.
- **Light flickers or changes unexpectedly:**
 - Unplug the lamp, wait for 30 seconds, and then plug it back in to reset.
 - Ensure the power connection is stable.

If the problem persists after attempting these solutions, please contact MediAcous customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	MediAcous
Model Number	ME-FL01
Product Dimensions	7.87"D x 7.87"W x 67.72"H
Item Weight	2.3 Kilograms (5.06 pounds)
Light Source Type	LED
Wattage	12 watts
Voltage	230 Volts (AC)
Brightness Levels	5 (20%-100%), Stepless Dimmable
Color Temperatures	5 (2700K-5700K), Stepless Adjustable
Control Method	Remote Control, Touch Button Control

Feature	Detail
Remote Control Range	Up to 49.2 ft (15 m)
Special Features	1-Hour Timer, Memory Function, Flexible Gooseneck, Eye-Caring Light, Wall Switch/Smart Plug Compatible
Included Components	Floor lamp with bulbs, Remote, 2x AAA Batteries, Adapter, User manual
Material	LED bulbs, Metal, Plastic
Indoor/Outdoor Usage	Indoor
Water Resistance Level	Not Water Resistant
Installation Type	Freestanding

Energy Information

- **EU Energy Label:** For detailed energy information, please visit the [EPREL database](#).
- **Product Information Sheet:** A comprehensive product information sheet is available [here](#).



Figure 10: EU Energy Label.

WARRANTY AND SUPPORT

MediAcous is committed to providing high-quality products. For any warranty inquiries, technical support, or

assistance with your product, please contact our customer service team.

Customer Support:

- **Website:** Visit the [MediAcous Store on Amazon](#) for more information and contact options.
- **Email:** [Insert Customer Support Email Here, if available]
- **Phone:** [Insert Customer Support Phone Number Here, if available]

Please have your model number (ME-FL01) and purchase date ready when contacting support.