



[Manuals.plus](#) /

> [tunuo](#) /

> tunuo LED Medicine Cabinet Mirror 60x36 Inch Instruction Manual

tunuo TH21

tunuo LED Medicine Cabinet Mirror Instruction Manual

Model: TH21 | Brand: tunuo

1. INTRODUCTION

Thank you for choosing the tunuo LED Medicine Cabinet Mirror. This manual provides essential information for the safe installation, operation, and maintenance of your new cabinet. Please read these instructions thoroughly before beginning installation or use, and retain them for future reference.

2. SAFETY INFORMATION

Important Safety Instructions:

- Always follow the provided user instructions for installation and operation.
- Be cautious when handling electrical components. Installation should be performed by a qualified professional to ensure proper wiring and safety.
- Do not exceed the weight capacity of the cabinet (40 Kilograms) to prevent structural damage or injury.
- Ensure the power supply is disconnected before any installation, maintenance, or cleaning procedures.
- This product is designed for indoor use in bathroom environments. Avoid exposure to excessive moisture or direct water spray.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- LED Medicine Cabinet Mirror (Model TH21)
- Shelves (2 included)
- Mounting Hardware (for surface mounting)
- User Instructions

4. SETUP AND INSTALLATION

The tunuo LED Medicine Cabinet Mirror is designed for surface wall mounting and requires hardwiring. Professional installation is recommended.

4.1 Pre-Installation Checks

- Ensure the wall surface is structurally sound and capable of supporting the cabinet's weight (approximately 107.6 pounds).
- Confirm that the measured opening for the cabinet is at least 1/2 inch larger than the cabinet dimensions to allow for proper door operation.
- Verify that the electrical wiring is present and accessible for hardwiring the unit.

4.2 Mounting Instructions

1. Carefully unpack the cabinet and inspect for any damage.
2. Identify the desired mounting location on the wall.
3. Install the provided mounting strip (hook) securely to the wall using appropriate fasteners for your wall type. Ensure it is level and can support the cabinet's weight.
4. With assistance, carefully lift the cabinet and hang it onto the installed mounting hook.
5. Connect the electrical wiring to the cabinet's hardwire connection. This step must be performed by a qualified electrician.
6. Once mounted and wired, install the shelves inside the cabinet as desired.



Image 4.1: Easy Installation Process. This image illustrates the simple process of hanging the cabinet onto a pre-installed wall hook for surface mounting. The hardwired connection point is also indicated.



Image 4.2: Product Dimensions. This image provides a visual representation of the cabinet's dimensions: 60 inches wide, 36 inches high, and 5.5 inches deep, crucial for planning installation space.

4.3 Video Guide: Product Overview and Features

Video 4.1: tunuo 60 Inch Medicine Cabinet Overview. This video provides a general overview of the tunuo 60-inch medicine cabinet, demonstrating its features such as large storage capacity, integrated outlet and USB port, and touch controls for LED lighting and defogger. It also shows the wall switch compatibility and memory function.

5. OPERATING INSTRUCTIONS

Your tunuo LED Medicine Cabinet Mirror features intuitive touch controls and smart functions for enhanced convenience.

5.1 LED Lighting Control

The mirror features three touch buttons on its surface for controlling the LED lights and defogger.

- **Power On/Off:** Short press the **middle power button** to turn the LED lights on or off.
- **Brightness Adjustment (Dimmer):** Long press the **middle power button** to adjust the brightness from 10% to 100% after the lights are on.

- **Color Temperature Change:** Short press the **right power button** to cycle through three color temperatures: 3000K (warm light), 4500K (neutral light), and 6000K (cold white light).
- **Memory Function:** The LED lighting system includes a memory function. When turned off and on (either via the touch button or a wall switch), the lights will automatically return to the last adjusted mode (brightness and color temperature).
- **Wall Switch Compatibility:** The cabinet supports control via an external wall switch. Turning the wall switch on/off will control the LED lights, and the memory function will retain the last setting.



Front and Interior Mirrors More Modern Design

Image 5.1: 3 Color Lightings Adjustment. This image demonstrates the three available color temperatures for the LED lighting: cold light, warm light, and neutral light, controlled by a short press on the right touch button.



Large Storage Space

Image 5.2: Dimmable Lighting. This image shows the LED lights' dimmable range, from 10% to 100% brightness, controlled by a long press on the middle touch button.

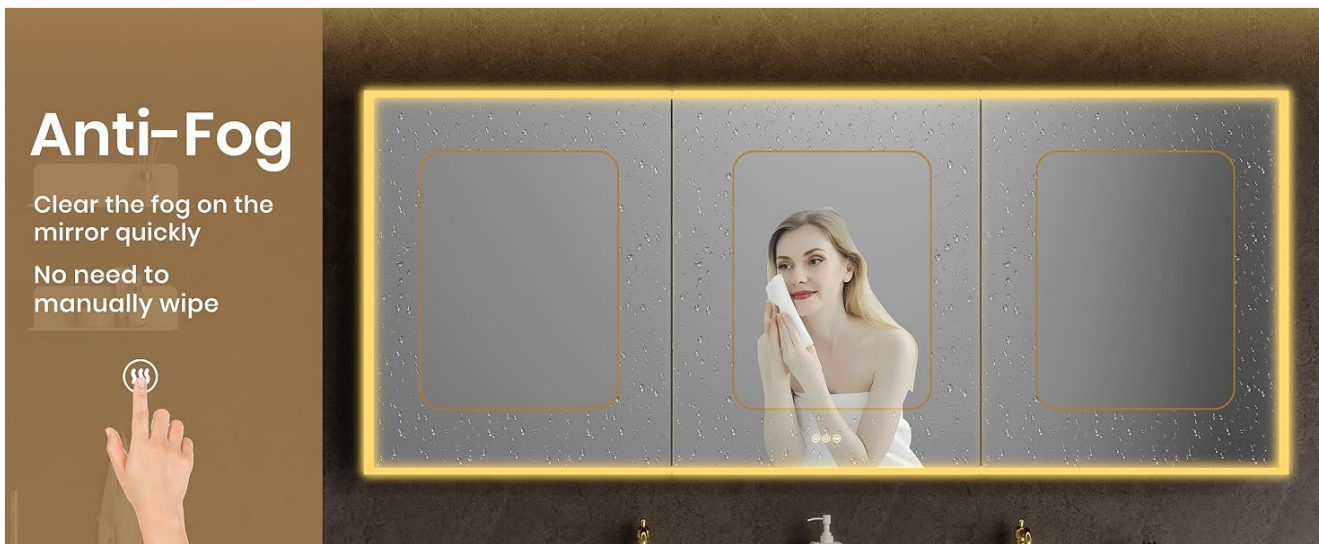


Image 5.3: 3 Color Temperature Options. This image visually differentiates the three color temperature settings: 6000K (cold white), 4500K (neutral), and 3000K (warm), highlighting the versatility of the lighting.

5.2 Anti-Fog Function

The cabinet mirror includes an anti-fog feature to maintain clear visibility in humid conditions.

- **Activate Defogger:** Short press the **left touch button** to activate the anti-fog function. The defogger will quickly clear steam from the mirror surface.
- The anti-fog function is energy-saving and operates independently of the main LED lights.

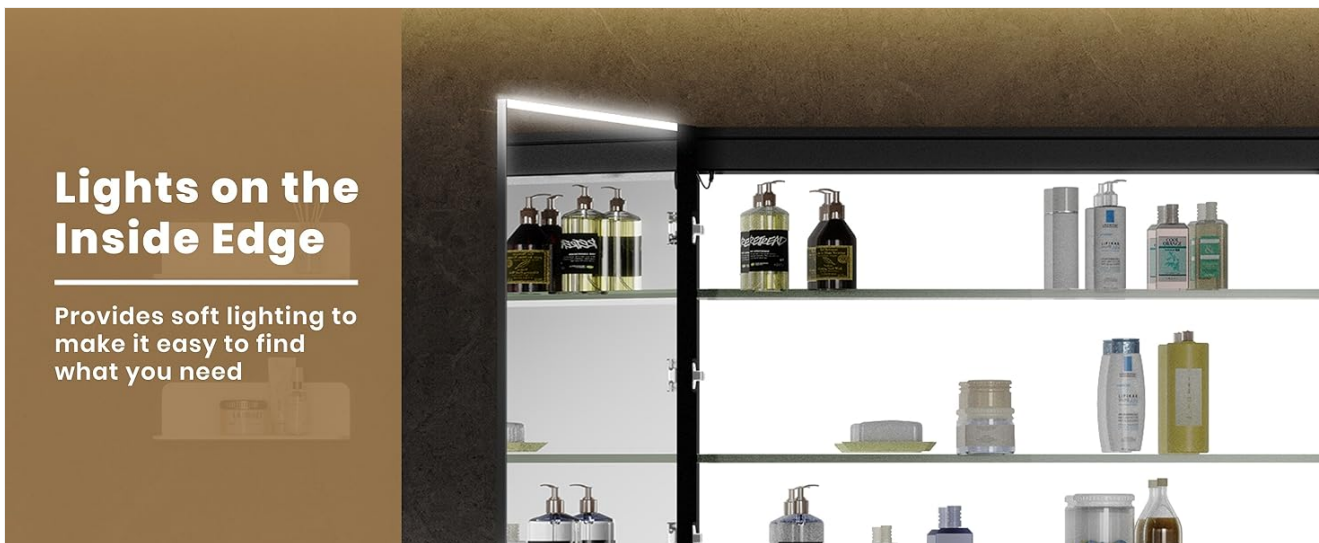


Image 5.4: Anti-Fog Feature. This image illustrates the effectiveness of the anti-fog function, showing a clear mirror area while the surrounding mirror surface is fogged, indicating rapid steam clearance.

5.3 Internal Outlets and Storage

The cabinet is equipped with internal power options and ample storage space.

- **Built-in Outlet and USB Port:** A standard electrical outlet and a USB port are located inside the cabinet, providing convenient charging for electric toothbrushes, shavers, or other small electronic devices.
- **Double-sided Light Design:** The doors feature double-sided light sources, illuminating the interior of the cabinet when opened, making it easier to locate items.
- **Large Storage Capacity:** With two adjustable shelves, the cabinet offers significant space for toiletries and other bathroom essentials.



Image 5.5: Internal Outlet & USB Port. This image highlights the convenient internal electrical outlet and USB port, ideal for charging small bathroom appliances, along with the organized storage space.



Image 5.6: Large Storage Space. This image displays the spacious interior of the medicine cabinet with its multiple shelves, demonstrating its capacity to store a variety of bathroom items.



Image 5.7: Lights on the Inside Edge. This close-up image shows the LED lighting integrated along the inside edges of the cabinet doors, providing soft illumination for easy visibility of contents.

6. MAINTENANCE

Regular cleaning and proper care will ensure the longevity and optimal performance of your medicine cabinet.

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Do not spray cleaner directly onto the mirror surface; apply it to the cloth first.
- **Cleaning the Cabinet:** Wipe the aluminum frame and interior surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Electrical Components:** Ensure the power is off before cleaning near any electrical components, outlets, or USB ports. Keep these areas dry.
- **Hinges:** The strong mute cushioning damping hinges are designed for durability. Periodically check for smooth operation and clean any dust accumulation.

7. TROUBLESHOOTING

If you encounter any issues with your tunuo LED Medicine Cabinet Mirror, refer to the following common troubleshooting steps:

- **LED Lights Not Turning On:**
 - Check if the main power supply to the cabinet is active.
 - Ensure the wall switch (if connected) is in the 'on' position.
 - Verify that the touch power button is being pressed correctly.
- **Anti-Fog Function Not Working:**
 - Confirm the defogger touch button is activated.
 - Allow a few minutes for the defogger to heat up and clear the mirror.
- **Outlets/USB Port Not Providing Power:**
 - Check the main power supply to the cabinet.
 - Ensure the device being charged is properly connected and functional.
- **Doors Not Aligning Properly:**
 - Inspect the hinges for any loose screws or obstructions.

- Adjust the hinges if necessary (refer to a professional if unsure).

If these steps do not resolve the issue, please contact tunuo customer support for further assistance.

8. SPECIFICATIONS

Feature	Specification
Brand	tunuo
Model Name	Medicine cabinets (TH21)
Product Dimensions	5.59"D x 60"W x 36"H
Size	60x36 Inch
Material	Aluminum (Frame), Glass (Back)
Color	Black
Mounting Type	Wall Mount (Surface mounted)
Special Features	3 Color Temperature, Anti-Fog, LED Inside and Outside, Wall Switch, Dimmer (10%-100%)
Number of Shelves	2
Weight Limit	40 Kilograms
Item Weight	107.6 Pounds
Included Components	Shelves
Assembly Required	Yes
Power Source	Hardwired

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact tunuo customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.