

HUION Inspiroy 2 Medium

HUION Inspiroy 2 Medium Drawing Tablet User Manual

Model: Inspiroy 2 Medium

Brand: HUION

INTRODUCTION

This manual provides comprehensive instructions for setting up, operating, and maintaining your HUION Inspiroy 2 Medium Drawing Tablet. Please read this guide thoroughly to ensure proper usage and to maximize your creative experience.



New Stylus - PW110

The new generation of PenTech 3.0

Image: The HUION Inspiroy 2 Medium Drawing Tablet, showcasing its sleek design and compact form factor.

WHAT'S IN THE BOX

Upon opening your HUION Inspiroy 2 Medium package, you should find the following items:

- Digital Pen (PW110)
- USB-C Cable
- USB-C Adapter
- Pen Holder PH04 with 10 Standard Nibs
- Quick Start Guide



Image: A visual representation of all items included in the HUION Inspiroy 2 Medium package, including the tablet, pen, cables, pen holder, and quick start guide.

Unboxing Video

Your browser does not support the video tag.

Video: This video demonstrates the unboxing process of the Inspiroy 2 Medium Pen Tablet, showing each component as it is removed from the packaging.

SETUP GUIDE

1. Connection

Connect the Inspiroy 2 Medium Drawing Tablet to your computer or compatible Android device using the provided USB-C cable. Ensure a secure connection for optimal performance.

Your browser does not support the video tag.

Video: This video illustrates the connection process of the Huion Pen Tablet to a computer using the USB-C cable.

2. Driver Installation

For full functionality and customization, download and install the latest driver from the official HUION website. Select your product model and operating system to get the correct driver.

1. Visit the official HUION website: www.huion.com
2. Navigate to the 'Support' section and then 'Download'.
3. Select your product model (Inspiroy 2 Medium), operating system (Windows, macOS, Linux, Android), and category (Driver).
4. Download and run the installer. Follow the on-screen instructions to complete the installation.

3. Mobile Connectivity

The Inspiroy 2 Medium is compatible with Android smartphones and tablets (OS version 6.0 or later). Use the provided USB-C adapter to connect the tablet to your mobile device.

Your browser does not support the video tag.

Video: This video demonstrates how to connect the Inspiroy 2 drawing tablet to a smartphone using a USB-C cable and adapter.

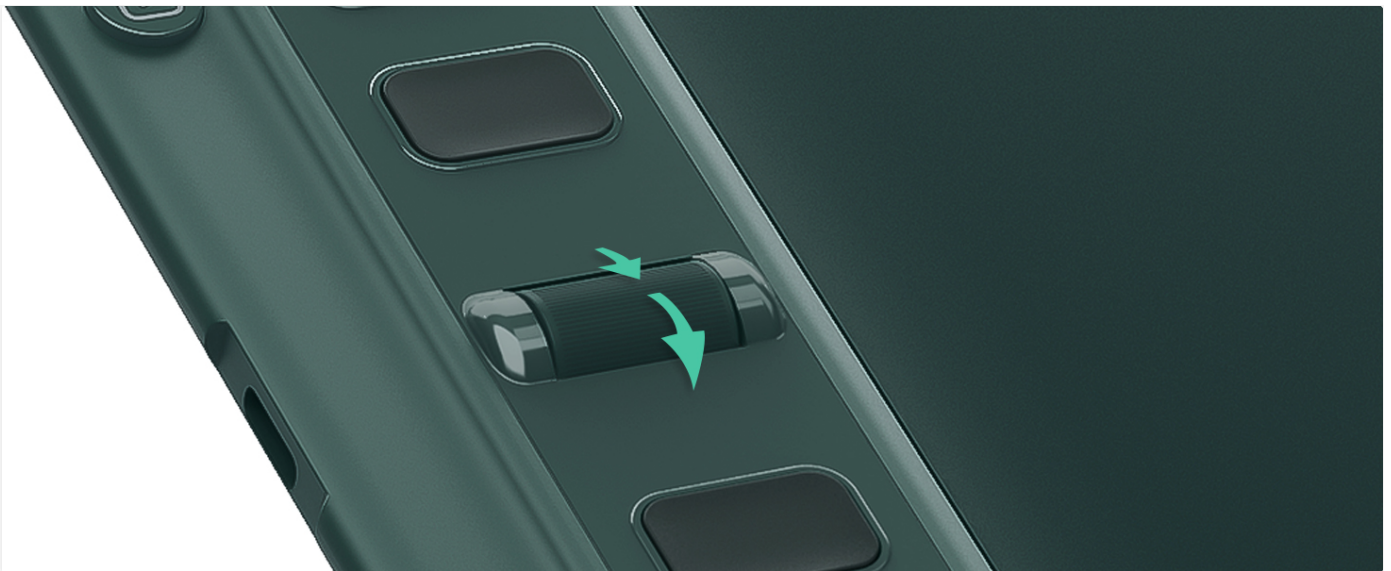


Image: A user drawing on the Inspiroy 2 Medium tablet while connected to a smartphone, illustrating its mobile compatibility.

OPERATING INSTRUCTIONS

Digital Pen (PW110)

The Inspiroy 2 Medium comes with the advanced PenTech 3.0 digital stylus (PW110). This battery-free pen offers exceptional precision and control, mimicking the feel of a traditional pen.

- **Battery-Free Design:** No need for charging, ensuring uninterrupted workflow.
- **Ergonomic Grip:** Features a slimmer body and soft silicone grip for enhanced comfort during long drawing sessions.
- **Programmable Side Buttons:** Two customizable buttons on the pen allow for quick access to frequently used functions.

Award-Winning Designs



Red Dot Design Award



iF Design Award



Good Design Award

Image: Detailed view of the PW110 Digital Pen, highlighting its slimmer body, extended silicone grip, repositioned side buttons, and PenTech 3.0 technology.

Programmable Keys and Scroll Wheel

The tablet features 8 programmable press keys and a unique scroll wheel to streamline your workflow. These can be

customized for different applications.

- **8 Press Keys:** Assign shortcuts for common actions like undo, redo, zoom, or brush selection.
- **Scroll Wheel:** Use the scroll wheel for quick adjustments such as zooming in/out, changing brush size, or scrolling through documents.
- **Group Keys:** The tablet includes 3 Group Keys, allowing you to assign multiple sets of shortcuts to the 8 press keys, effectively expanding your customization options.



Image: Close-up of the Inspiroy 2 Medium tablet's side panel, showing the 8 programmable press keys, 3 group keys, and the scroll wheel for efficient workflow customization.

New Digital Pen - PW110

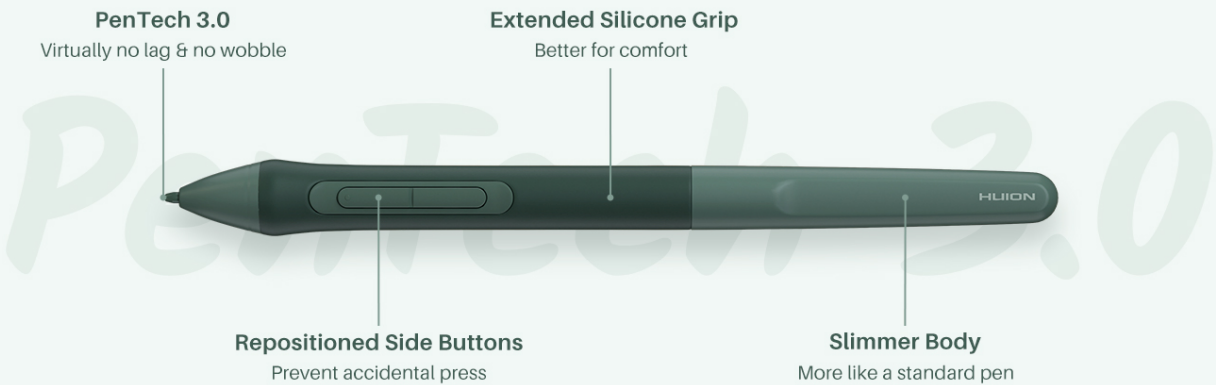


Image: A diagram illustrating how one press key can be assigned three different functions using the group keys, with examples for various creative tasks.

Setting Up Press Keys and Scroller

Customize the functions of the pen's side buttons, the tablet's press keys, and the scroll wheel through the HUION driver software. This allows for personalized shortcuts and enhanced efficiency.

Your browser does not support the video tag.

Video: This video provides a step-by-step guide on how to set up and customize the press keys and scroll wheel functions within the Huion driver for the Inspiroy 2 tablet.

Working Area and Rotation

The tablet's working area can be adjusted and rotated by 180 degrees to accommodate both right-handed and left-handed users, providing flexibility and comfort.



Image: A diagram showing the dimensions of the Inspiroy 2 Medium tablet and its active working area in both PC and Phone modes, along with its USB-C port and material composition.

Pressure Sensitivity Adjustment

Adjust the pressure sensitivity of the digital pen through the driver software to match your drawing style and preference. This allows for fine control over line thickness and opacity.

COMPATIBILITY

The Inspiroy 2 Medium Drawing Tablet offers broad operating system compatibility, making it versatile for various creative setups.

- **Operating Systems:** Compatible with Mac (macOS 10.12 or later), PC (Windows 7 or later), Linux (Ubuntu), ChromeOS 88 or later, and certain Android devices (OS version 6.0 or later).



Image: An illustration showing the Inspiroy 2 Medium tablet connected to various devices, including a laptop, tablet, and smartphone, with icons representing Windows, macOS, Linux, Android, and ChromeOS.

SPECIFICATIONS

Feature	Detail
Product Dimensions	12.01 x 7.09 x 0.35 inches
Item Weight	1.1 pounds
Item Model Number	Inspiroy 2 Medium
Brand	HUION
Connectivity Technology	USB
Pressure Sensitivity	8192 Levels
Operating System Compatibility	Android 6.0 or later, ChromeOS 88 or later, HarmonyOS 2.0 or later/Linux (Ubuntu 20.04 LTS), Windows 7 or later, macOS 10.12 or later
Special Features	60° Tilt Support, Advanced PenTech 3.0, Programmable Press Keys

MAINTENANCE

To ensure the longevity and optimal performance of your Inspiroy 2 Medium Drawing Tablet, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to gently wipe the tablet surface and pen. Avoid using harsh chemicals or abrasive materials.
- **Pen Nibs:** Regularly check the pen nib for wear. Replace worn-out nibs using the included nib remover and spare nibs found in the pen holder.
- **Storage:** Store the tablet and pen in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid bending or twisting the USB-C cable excessively to prevent damage.

TROUBLESHOOTING

If you encounter any issues with your Inspiroy 2 Medium Drawing Tablet, refer to the following common solutions:

- **No Pen Response:**
 - Ensure the tablet is correctly connected to your computer/device.
 - Verify that the driver is installed correctly and is up-to-date.
 - Restart your computer and the tablet.
 - Check if the pen nib is properly inserted or needs replacement.
- **Driver Not Recognizing Tablet:**
 - Uninstall any previous tablet drivers (from other brands or older HUION versions) before installing the Inspiroy 2 driver.
 - Try connecting the tablet to a different USB port.
 - Temporarily disable your antivirus software during driver installation.
- **Inconsistent Pressure Sensitivity:**

- Adjust the pressure sensitivity settings in the HUION driver.
- Ensure your drawing software supports pressure sensitivity and that it is enabled.

- **Programmable Keys Not Working:**

- Check the key assignments in the HUION driver to ensure they are configured correctly.
- Make sure the driver is running in the background.

For further assistance, please visit the official HUION support website or contact customer service.

WARRANTY AND SUPPORT

Your HUION Inspiroy 2 Medium Drawing Tablet is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, driver updates, FAQs, and additional resources, please visit the official HUION support page:

[HUION Support Website](#)

© 2026 HUION. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.