

[Manuals.plus](#) /

› [KWW](#) /

› KWW LED Lighted Bathroom Medicine Cabinet (Model KWWMC01, 19.5x28 inch) - User Manual

KWW KWWMC01

KWW LED Lighted Bathroom Medicine Cabinet

MODEL: KWWMC01 (19.5 x 28 INCH)

1. PRODUCT OVERVIEW

This manual provides instructions for the KWW LED Lighted Bathroom Medicine Cabinet, Model KWWMC01. This wall-mounted cabinet integrates a mirror with advanced features including dimmable LED lighting with three color temperatures, an anti-fog function, and internal electrical outlets with USB ports for convenient charging. It is designed to offer both storage and enhanced functionality in a bathroom environment.



Image 1.1: Front view of the KWW LED Lighted Bathroom Medicine Cabinet.

2. SAFETY INFORMATION

- **Electrical Safety:** Ensure the power supply is disconnected before installation or maintenance. All electrical connections should be performed by a qualified electrician if hardwiring is chosen.
- **Handling:** The mirror cabinet contains glass components. Handle with care to prevent breakage and injury.
- **Installation:** Securely mount the cabinet to a sturdy wall structure. Do not rely solely on drywall anchors without proper reinforcement.
- **Environment:** This product is designed for bathroom use and is IP44 waterproof rated, but avoid direct water spray onto electrical components.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation.

- KWW LED Lighted Bathroom Medicine Cabinet
- Mounting Hardware (screws, anchors)
- Installation Cardboard Template
- Glass Shelves (2)
- User Manual

4. SETUP AND INSTALLATION

4.1 Pre-Installation

- **Inspect:** Carefully unbox and inspect the cabinet for any damage. Contact customer support immediately if any issues are found.
- **Tools Required:** Drill, level, measuring tape, screwdriver, pencil.
- **Location:** Choose a suitable wall location, ensuring adequate clearance for door opening and access to electrical outlets if using the plug.

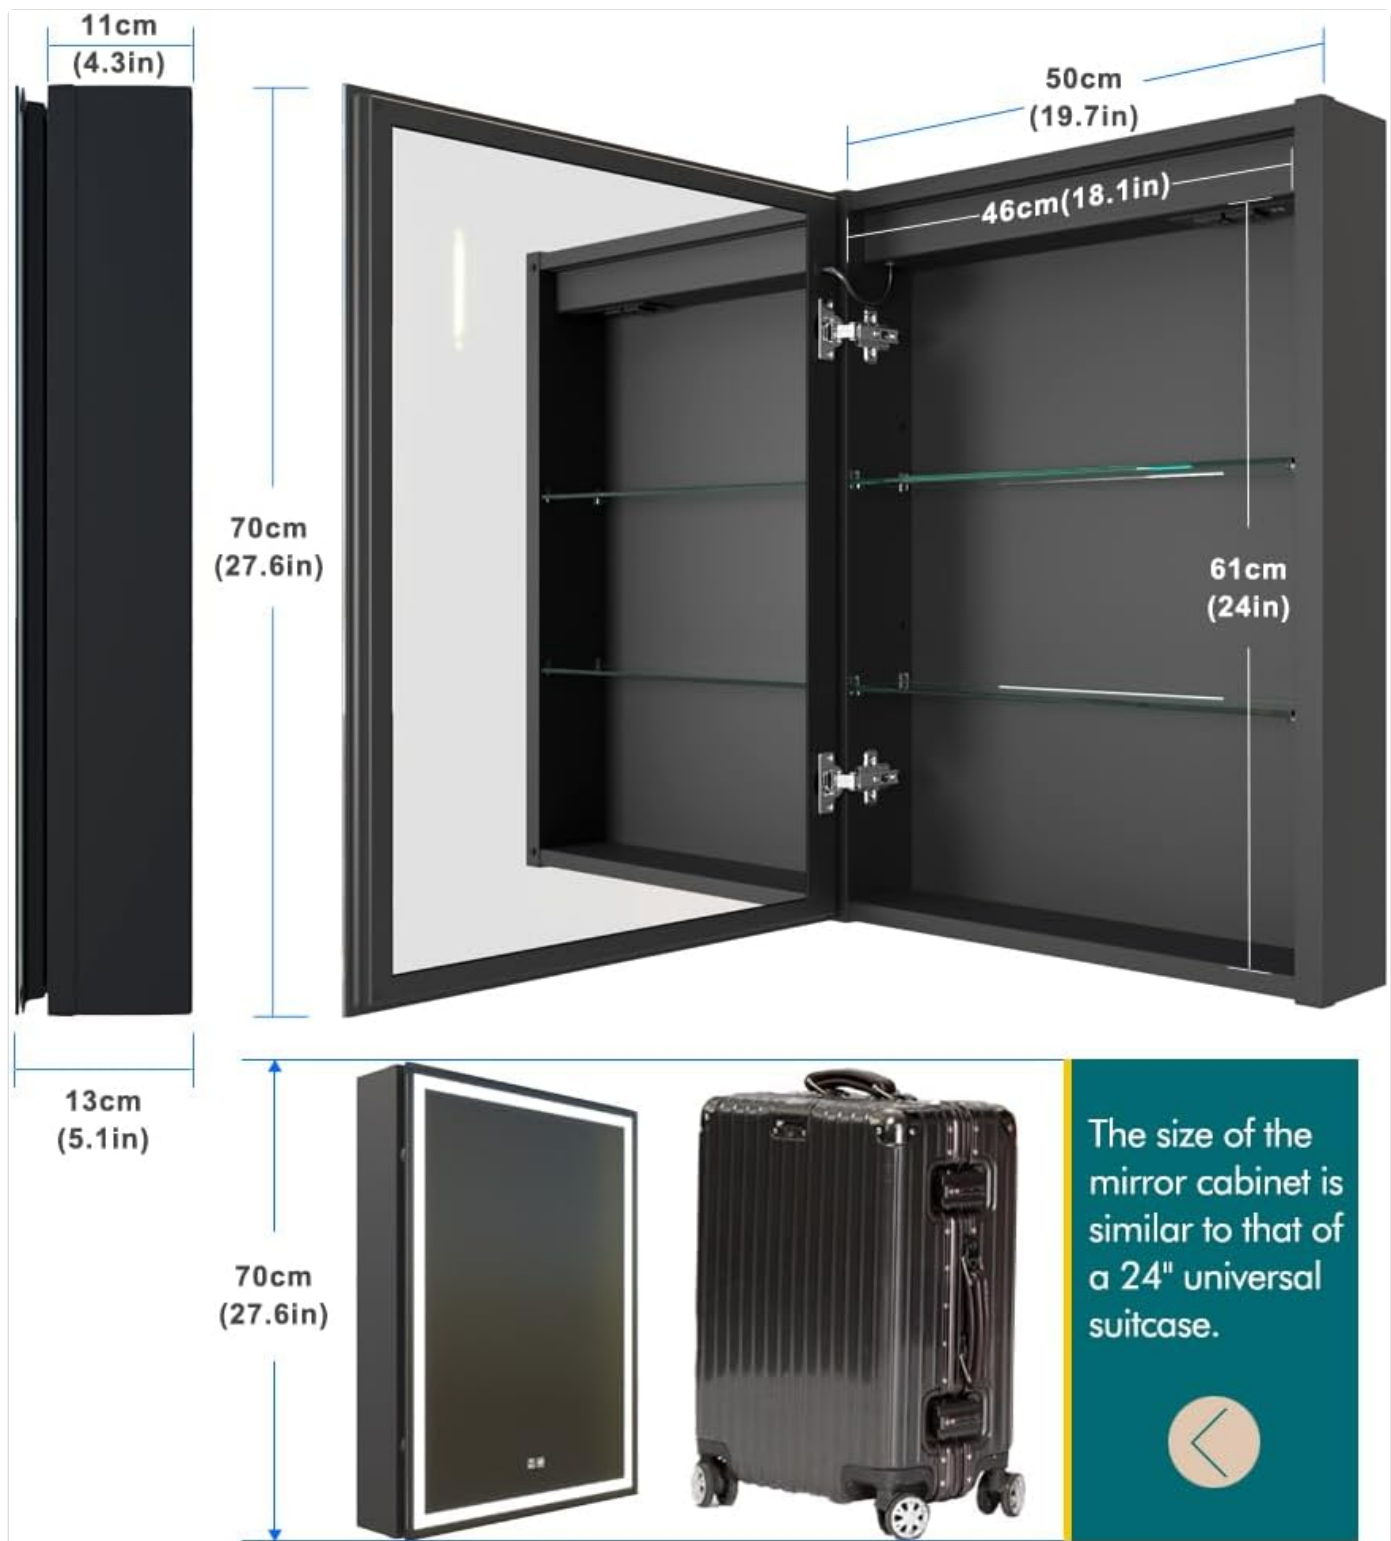


Image 4.1: Product dimensions and internal layout. The cabinet measures approximately 19.7 inches wide, 27.6 inches high, and 4.3 inches deep.

4.2 Wall Mounting

1. **Positioning:** Use the provided installation cardboard template to mark the desired mounting holes on the wall. Ensure the template is level.
2. **Drilling:** Drill pilot holes at the marked locations. Insert wall anchors if necessary, depending on your wall material.
3. **Secure Mounting Bar:** Attach the mounting bar (if separate) or the cabinet directly to the wall using the appropriate screws. Ensure it is firmly secured.
4. **Hang Cabinet:** Carefully lift and hang the cabinet onto the mounting hardware.
5. **Final Securement:** Tighten any additional screws to fully secure the cabinet to the wall.



Image 4.2: Installation process using the provided cardboard template for accurate positioning.

4.3 Electrical Connection

The cabinet can be connected via a standard wall outlet plug or hardwired. A reserved wire groove is available for hardwiring.

- **Plug-in:** Simply plug the cabinet's power cord into a nearby electrical outlet.
- **Hardwiring:** For a concealed installation, consult a qualified electrician to hardwire the cabinet directly to your home's electrical system. Ensure the power is off at the circuit breaker before attempting any hardwiring.

4.4 Shelf and Door Adjustment


- **Adjustable Shelves:** The two glass shelves can be adjusted to different heights to accommodate various item sizes. Carefully lift and reposition the shelf supports to the desired level.
- **Door Adjustment:** The cabinet features 105° wide-open soft-close hinges. If the cabinet door requires alignment, adjust the hinge screws as shown in the diagram below.



Image 4.3: Adjusting the cabinet door hinges for vertical and horizontal alignment.



105° wide open
soft close hinges

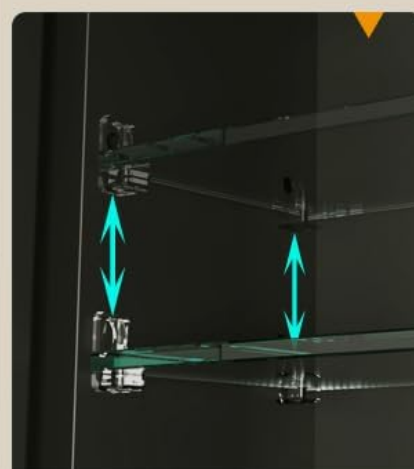

Adjustable shelves
to meet different needs

Image 4.4: Interior of the cabinet with adjustable glass shelves and 105° wide-open soft-close hinges.

5. OPERATING INSTRUCTIONS

5.1 Lighting Control

The mirror features touch controls for lighting adjustments.

- **Power On/Off:** Tap the power icon on the mirror surface to turn the lights on or off.
- **Color Temperature Adjustment:** Double-click the light icon to cycle through three color temperatures: 3000K (warm light), 4000K (natural light), and 6500K (white light).
- **Brightness Dimming:** Long-press the light icon to adjust the brightness from 10% to 100%. Release when the desired brightness is reached.
- **Memory Function:** The cabinet will remember your last lighting settings (color temperature and brightness) when powered off and on again.



Image 5.1: Touch controls for adjusting light color temperature (3000K, 4000K, 6500K) and brightness (10%-100%).

5.2 Defogger Function

The integrated defogger prevents condensation on the mirror surface.

- **Activation:** Tap the defogger icon on the mirror surface to activate or deactivate the defogging function.
- **Operation:** The defogger works in conjunction with the mirror's lighting.



Image 5.2: The anti-fog feature ensures a clear mirror surface, even in steamy bathroom conditions.

5.3 Internal Sockets and USB Ports

The cabinet includes internal electrical sockets and USB ports for charging devices.

- **Usage:** Open the cabinet door to access the internal outlets. Plug in electric shavers, toothbrushes, or other small electronic devices.
- **USB Charging:** Use the USB ports to charge compatible devices.

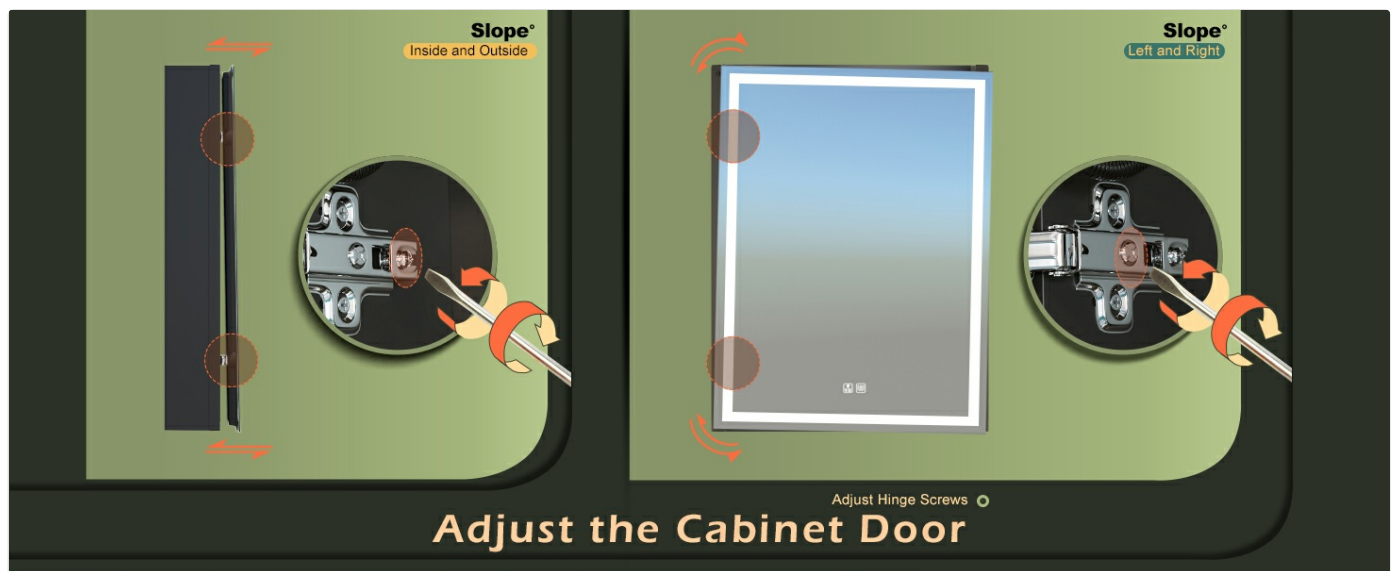


Image 5.3: Internal electrical sockets and USB ports for convenient charging of personal devices.

6. MAINTENANCE

6.1 Cleaning

- **Mirror Surface:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray cleaner onto the cloth, not directly onto the mirror, to avoid liquid seeping into electrical components.
- **Cabinet Exterior:** Wipe with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Interior:** Remove glass shelves and clean with mild soap and water. Dry thoroughly before replacing.

6.2 General Care

- Regularly check all mounting hardware to ensure the cabinet remains securely attached to the wall.
- Avoid placing excessively heavy items on the glass shelves.

7. TROUBLESHOOTING

- **Lights Not Working:**
 - Check if the cabinet is properly plugged in or hardwired.
 - Ensure the power switch (if applicable) is on.
 - Verify the circuit breaker has not tripped.
- **Defogger Not Activating:**
 - Ensure the defogger function is turned on via the touch control.
 - Confirm the main lights are operational, as the defogger works in conjunction with them.
- **Internal Sockets/USBs Not Working:**
 - Check the main power connection to the cabinet.
 - Ensure the cabinet's internal power system is active (usually linked to the main power).
- **Glass Partition Uneven:**
 - If a glass partition appears uneven, contact customer support for assistance. A small accessory may be available to correct this.
- **Damaged Cabinet Upon Arrival:**
 - If the cabinet or mirror is broken upon receipt, contact the seller immediately for resolution.

8. SPECIFICATIONS

Feature	Specification
Brand	KWW
Model Name	KWWMC01
Product Dimensions (W x H x D)	20" x 28" x 5" (approx. 19.5" x 28" x 4.3" for cabinet body)
Item Weight	26.4 pounds
Mounting Type	Wall Mount
Light Features	Dimmable (10%-100%), 3 Color Temperatures (3000K, 4000K, 6500K), Memory Function, Bottom Light
Special Features	Anti-fog, Internal Sockets & USBs, Adjustable Glass Shelves, Soft-Close Hinges, Anti-collision Pads
Storage Volume	7.14 Gallons
Material	Glass (mirror, shelves), Aluminum (frame/plate)
Waterproof Rating	IP44
UPC	754168950140

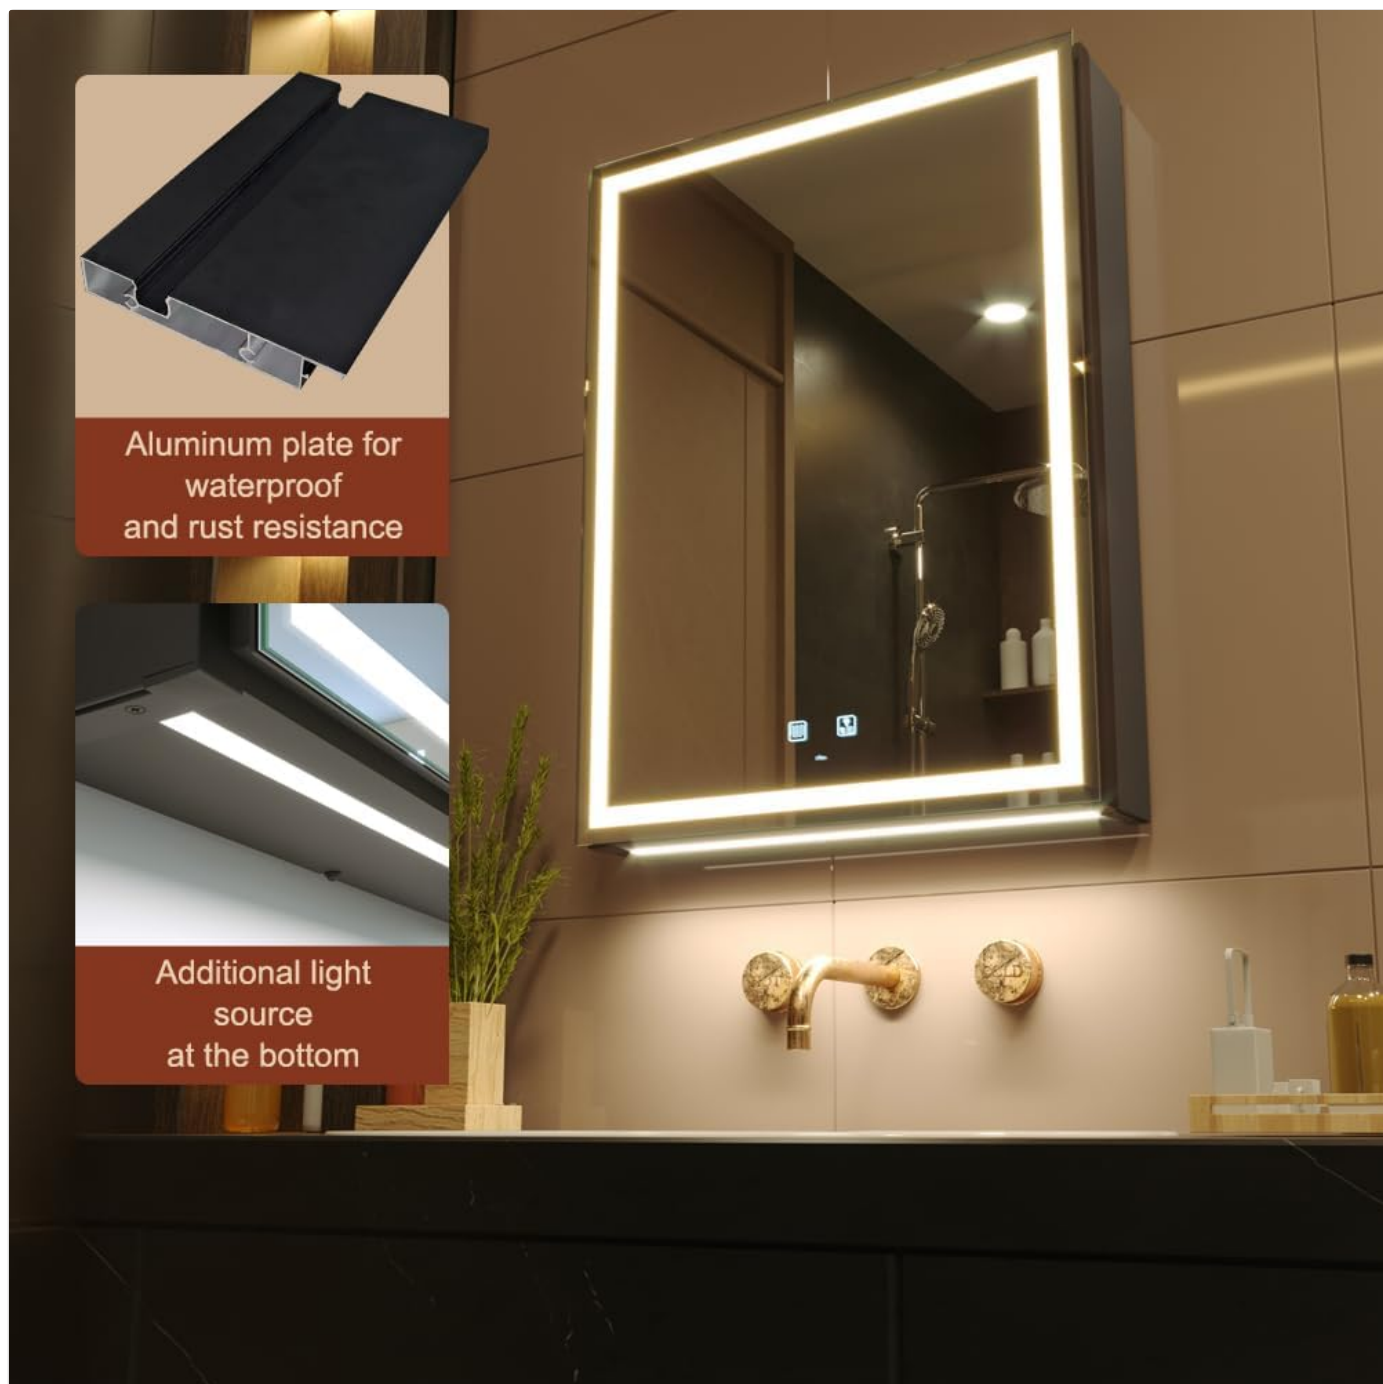


Image 8.1: Detail of the aluminum plate construction for durability and the additional bottom light.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This KWW LED Lighted Bathroom Medicine Cabinet comes with a **1-year warranty**. This warranty covers manufacturing defects and free replacement of parts for one year from the date of purchase.

9.2 Return Policy

Customers are eligible for a **30-day free return** from the date of purchase.

9.3 Customer Support

For any questions, concerns, or assistance regarding your KWW product, please contact our **24/7 Email Assistant**. Refer to your purchase documentation for specific contact details or visit the KWW store on Amazon.

Contact Seller: If you encounter any issues, such as a broken mirror cabinet or uneven glass partitions, please contact

the seller directly for prompt resolution.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question