



Manuals.plus /

› QWORK /

› QWORK WD10229 Foldable Digital Floor Scale User Manual

QWORK WD10229

QWORK WD10229 Foldable Digital Floor Scale User Manual

Model: WD10229

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your QWORK WD10229 Foldable Digital Floor Scale. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Ensure the scale is placed on a stable, level surface.
- Do not exceed the maximum weight capacity of 660 lbs (300 kg).
- Avoid dropping or subjecting the scale to severe shocks.
- Keep the scale away from water and extreme temperatures.
- Use only the provided power adapter.
- Do not attempt to disassemble or repair the scale yourself. Contact qualified personnel for service.

PACKAGE CONTENTS

Verify that all items are present in the package:

- QWORK WD10229 Digital Floor Scale Platform
- Digital Display Unit with Keypad
- Connecting Pole/Stand
- Power Adapter
- User Manual (this document)

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging.

- Platform Placement:** Place the scale platform on a firm, level surface. Ensure all four adjustable non-slip feet are in contact with the ground and the platform is stable.



Image: Front view of the QWORK WD10229 Digital Floor Scale, showing the platform and display unit.

- Assemble Display Stand:** Attach the connecting pole to the scale platform and secure it. Then, mount the digital display unit onto the top of the pole. Ensure all connections are firm.



Image: The scale platform separated from its frame, illustrating the internal structure and connection points for assembly.



Image: Close-up views of the scale's internal wiring connector, load cell, adjustment knob for the display stand, and power switch.

4. **Power Connection:** Connect the power adapter to the display unit and plug it into a suitable power outlet. The scale can also operate on its internal rechargeable battery.



Image: The QWORK WD10229 Digital Floor Scale with its display unit, platform, and the included power adapter.

5. **Initial Power On:** Turn on the scale using the power switch, usually located on the display unit or near the power input. The display will perform a self-test and then show "0.00".

OPERATING INSTRUCTIONS

Basic Weighing

1. **Power On:** Ensure the scale is powered on and displays "0.00".
2. **Place Item:** Carefully place the item to be weighed onto the center of the scale platform.



Image: The digital floor scale in use, showing packages and a crate of produce being weighed on the platform.

3. **Read Weight:** The weight will be displayed on the digital screen. Wait for the reading to stabilize.
4. **Remove Item:** Remove the item from the platform. The display should return to "0.00" or a negative value if tare was used.

Unit Conversion (KG/LB)

The scale supports weighing in both kilograms (KG) and pounds (LB).

1. **Locate Unit Button:** On the display unit, press the "UNIT" or "KG/LB" button to switch between units.

Unit Conversion



Image: Close-up of the scale's digital display, illustrating the unit conversion function between kilograms (KG) and pounds (LB).

2. **Verify Unit:** The active unit (KG or LB) will be indicated on the display.

Tare Function

The tare function allows you to subtract the weight of a container, so only the contents are weighed.

1. **Place Empty Container:** Place the empty container onto the scale platform.
2. **Press TARE:** Wait for the weight to stabilize, then press the "TARE" button on the display unit. The display will reset to "0.00".
3. **Add Contents:** Place the items to be weighed into the container. The display will show only the net weight of the contents.
4. **Remove Container:** After weighing, remove both the container and its contents. The display will show a negative value equal to the container's weight. Press "TARE" again to clear the tare and

return to "0.00".

Zero Function

If the display does not show "0.00" when the platform is empty, use the Zero function.

1. **Empty Platform:** Ensure nothing is on the scale platform.
2. **Press ZERO:** Press the "ZERO" button on the display unit. The display should reset to "0.00".

MAINTENANCE

- **Cleaning:** Wipe the scale platform and display unit with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** When not in use, store the scale in a dry, clean environment. The scale is foldable for convenient storage.



Image: The folding mechanism of the QWORK WD10229 Digital Floor Scale, showing how the display stand can be lowered for compact storage.

- **Battery Charging:** If the scale is battery-powered, ensure it is charged regularly to maintain optimal performance.

TROUBLESHOOTING

- **Display shows "Lo" or "Battery Low":** The internal battery is low. Connect the scale to the power adapter for charging.
- **Display shows "O_Ld" or "Err":** The scale is overloaded. Remove the item immediately to prevent damage. Ensure the weight does not exceed 660 lbs (300 kg).
- **Inaccurate Readings:**
 - Ensure the scale is on a stable, level surface.
 - Check that nothing is touching the platform or interfering with its movement.
 - Perform a Zero operation before weighing.
 - Avoid strong vibrations or air currents during weighing.
- **No Display:**
 - Check if the power adapter is securely connected and the power outlet is functional.
 - Ensure the power switch is in the "ON" position.
 - If using battery power, ensure the battery is charged.

SPECIFICATIONS

Feature	Detail
Brand	QWORK
Model Number	WD10229
Weight Capacity	Minimum: 0.050 lb, Maximum: 660 lb (300 kg)

19.8" x 15.75" (500mm x 400mm)

Platform
Dimensions

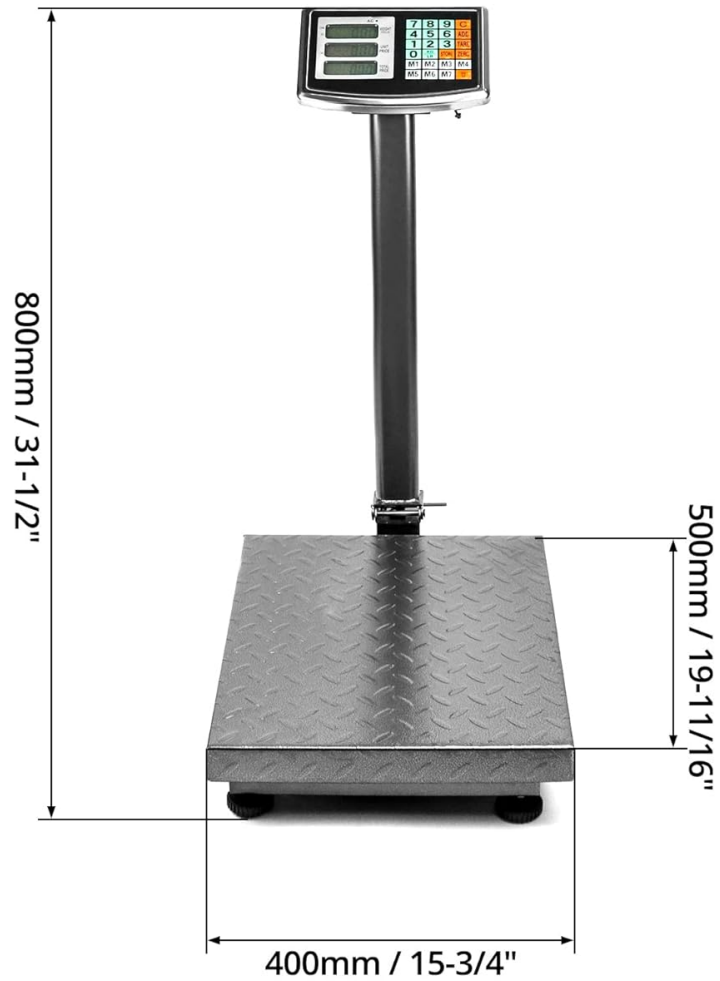


Image: Diagram illustrating the dimensions of the QWORK WD10229 Digital Floor Scale platform and overall height.

Display Type	LCD/LED with Backlit Display
Material	Alloy Steel
Form Factor	Foldable
Item Weight	9.44 Kilograms
Recommended Uses	Packages, Envelopes, Warehouse, Shipping, Postal

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official QWORK website. Keep your purchase receipt as proof of purchase.

