



[Manuals.plus](#) /

› [AquaCare](#) /

› AquaCare Magneton High-Pressure 8-Mode Handheld Shower Head User Manual

AquaCare 5254

AquaCare Magneton High-Pressure 8-Mode Handheld Shower Head

User Instruction Manual

INTRODUCTION

Thank you for choosing the AquaCare Magneton High-Pressure 8-Mode Handheld Shower Head. This manual provides detailed instructions for the installation, operation, and maintenance of your new shower system. Please read this manual thoroughly before installation and retain it for future reference.



Image: The AquaCare Magneton High-Pressure 8-Mode Handheld Shower Head in Matte Black.

SAFETY INFORMATION

Please observe the following safety precautions to ensure safe operation and prevent damage to the product or injury:

- Ensure water supply is turned off before beginning installation.
- Do not overtighten connections, as this may damage components.
- Use only the provided components for installation.
- Keep small parts away from children.
- If you encounter any difficulties or leaks, turn off the water supply and consult the troubleshooting section or contact customer support.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Matte Black Magnetic Handheld Shower Head
- Angle-adjustable Magnetic Docking Overhead Bracket
- Magnetic Docking Low-reach Wall Bracket
- 6 Ft Stainless Steel Shower Hose
- Teflon Tape
- Washers
- Installation Guide (this manual)
- Warranty Information



Image: The AquaCare Magneton shower head, hose, and magnetic bracket, along with the product packaging.

SETUP AND INSTALLATION

The AquaCare Magneton shower head is designed for easy, tool-free installation. Follow these steps:

1. **Prepare the Shower Area:** Turn off the main water supply to your shower. Remove your existing shower head and clean any debris from the shower arm threads.
2. **Apply Teflon Tape:** Wrap the included Teflon tape clockwise around the threads of your shower arm 3-4 times.
3. **Install Overhead Bracket:** Screw the angle-adjustable magnetic docking overhead bracket onto the shower arm by hand. Ensure it is hand-tight and facing the desired direction. Do not use tools to overtighten.
4. **Connect Shower Hose:** Attach one end of the 6 ft stainless steel shower hose to the handheld shower head and the other end to the overhead bracket. Ensure washers are properly seated in the connections. Hand-tighten both ends.
5. **Install Low-Reach Wall Bracket (Optional):**
 - Clean and dry the desired surface (tile, tub, or shower door) for the low-reach wall bracket.
 - Peel off the protective backing from the silicone adhesive on the back of the bracket.
 - Press the bracket firmly onto the surface for at least 30 seconds. Allow 24 hours for the adhesive to cure before use.
 - Alternatively, use the included screws and anchors for a permanent installation if preferred.
6. **Dock the Handheld Shower Head:** Place the back of the handheld shower head against either magnetic bracket. The Socket-lock Guidance System will automatically align and secure it.
7. **Test for Leaks:** Turn on the main water supply and check all connections for leaks. If leaks occur, tighten slightly or re-apply Teflon tape.



**Instant Reach
& Greater
Mobility!**

BONUS!
**Magnetic
Wall
Bracket**

Mount instantly
on Tile, Tub or
Shower Doors

Socket Design guides
connecting magnets
to align automatically.
Mounts instantly & securely
without surface damage
using silicone adhesive back.

72" Stainless Steel
Extra-long Hose

Image: Illustration of the magnetic docking system, showing the handheld shower head easily attaching to the wall bracket.



Image: Close-up of the AquaCare Magneton shower head demonstrating the magnetic docking feature with arrows indicating magnetic attraction.



Image: The AquaCare Magneton handheld shower head shown with two magnetic docking brackets, one for overhead and one for lower reach.

OPERATING INSTRUCTIONS

Your AquaCare Magneton shower head features 8 luxury flow settings for a customized shower experience. To change settings, rotate the dial on the shower head face.

- **Power Rain:** A strong, invigorating full-body spray.
- **Pulsating Massage:** Concentrated pulses for muscle relief.
- **Hydro-Mist:** A fine, gentle mist.
- **Dual Jet:** Two focused streams for targeted rinsing.
- **ON/OFF Pause Mode:** Temporarily reduces water flow to a trickle, useful for lathering or shaving without changing temperature settings.
- **Mixed Settings:** Combinations of the above for varied experiences.



Image: Diagram illustrating the 8 different spray settings available on the AquaCare Magneton shower head.



Image: The AquaCare Magneton shower head demonstrating two different flow settings simultaneously.



Image: The AquaCare Magneton shower head producing a gentle mist spray, highlighting its water-saving feature.

Your browser does not support the video tag.

Video: Official product video demonstrating the AquaCare Magneton 8-mode magnetic handheld shower head features and operation.

MAINTENANCE

The AquaCare Magneton shower head features Stay-Clean nozzles designed to resist grime and degradation, ensuring consistent performance. Regular cleaning will help maintain its appearance and functionality.


- **Nozzle Cleaning:** The Stay-Clean nozzles are made from a revolutionary material that works to prevent mineral buildup and clogging. For optimal performance, periodically rub the nozzles with your finger or a soft brush to dislodge any deposits.
- **Surface Cleaning:** Clean the matte black finish with a soft cloth and mild soap and water. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.
- **Hose Maintenance:** Periodically check the stainless steel hose for any kinks or damage. Ensure it hangs freely to prevent wear.

Revolutionary Stay-Clean Anti-Clog Nozzles!



Special Stay-Clean material
keeps nozzles cleaner
for better shower hygiene

24/7 Lifetime Surface Protection

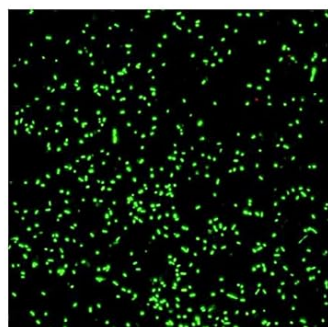

*Unprotected Surface
after 24 hours.*



*Same Surface with
Stay-Clean Protection*



AquaCare®

Designed in USA Patent Pending

Image: Visual representation of the Stay-Clean Anti-Clog Nozzles, showing a comparison between an unprotected surface and a surface with Stay-Clean protection after 24 hours.

TROUBLESHOOTING

If you experience issues with your AquaCare Magneton shower head, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Low Water Pressure	Mineral buildup in nozzles or flow restrictor.	Rub the Stay-Clean nozzles to clear deposits. Check if the flow restrictor is partially blocked (consult local plumbing codes before removing).
Leaks at Connections	Loose connections or improperly seated washers.	Ensure all connections are hand-tight. Verify washers are correctly placed and not damaged. Re-apply Teflon tape if necessary.

Problem	Possible Cause	Solution
Shower Head Not Docking Securely	Debris on magnetic surfaces or improper alignment.	Clean the magnetic surfaces on both the shower head and the bracket. Ensure the shower head is placed directly against the bracket for the Socket-lock Guidance System to engage.
Water Spraying Unevenly	Blocked nozzles.	Rub the Stay-Clean nozzles to clear any blockages.

If these solutions do not resolve the issue, please contact AquaCare customer service for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	AquaCare
Model Number	5254
Style	With Extra Wall Bracket
Shape	Round
Material	Matte Black Plated Premium ABS, Stainless Steel Shower Hose
Finish Type	Matte Black
Installation Type	Wall Mounted (Tool-Free)
Flow Rate	2.5 Gallons Per Minute (GPM)
Number of Settings	8
Hose Length	6 Feet (72 inches)
Item Dimensions (L x W)	10"L x 5"W (5" Face Diameter)
Special Features	Easy to Install, Tools Free Installation, Fits Any Standard Shower Arm, Stay-Clean Nozzles, Magnetic Socket-lock Guidance System, Angle-Adjustable Overhead Bracket, Low-reach Wall Bracket

WARRANTY AND CUSTOMER SUPPORT

AquaCare provides a Lifetime Warranty directly from the manufacturer for the Magneton High-Pressure 8-Mode Handheld Shower Head. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or any questions regarding your product, please contact AquaCare customer service. Our American Customer Service team is available to assist you.

Please refer to the contact information provided with your product packaging or visit the official AquaCare website for current support details.

