

## FORLIM SD-002A-W

# FORLIM SD-002A-W Boot Dryer User Manual

Model: SD-002A-W

## 1. PRODUCT OVERVIEW

The FORLIM SD-002A-W Boot Dryer is designed to efficiently dry and warm various types of footwear and gloves, ensuring comfort and hygiene. Its innovative design features adjustable components and intelligent controls for versatile use.

- **Creative Telescopic Bendable Design:** Features innovative telescopic and bendable dry ports that can reach deep inside high boots. The 180° foldable dry rack accommodates footwear and gloves of all sizes and shapes.
- **Fast and Efficient Forced Air Heating:** Operates silently, gently warming air up to 105°F-140°F (40.5°C-60°C) to dry footwear in 1-2 hours. Indoor use is recommended for optimal performance.
- **Intelligent Timer:** Includes a 2-hour automatic shutoff timer to customize drying cycles and reduce power consumption.
- **Wide Application:** Suitable for drying shoes, boots, gloves, ski boots, sneakers, athletic and hunting footwear, as well as other outdoor gear.

# 360° Hot Air Drying



Image: The FORLIM Boot Dryer in operation, drying a pair of boots with warm air circulating through the ports.

## 2. SAFETY INSTRUCTIONS

---

Please read and follow all safety instructions before using the FORLIM Boot Dryer to prevent injury or damage to the product.

- **DO NOT** immerse the dryer in water or any other liquid.
- **DO NOT** insert any objects into any openings.
- **DO NOT** use near flammable substances.
- **DO NOT** place "soaked" or "dripping wet" items on the dryer. Ensure items are damp, not saturated.
- **DO NOT** leave the dryer unattended for long periods of time.
- Recommended use by responsible adults.
- Ensure the air outlet duct is bent when in use, especially for long boots or short booties, to ensure proper ventilation. Leaving the air outlet unobstructed at the bottom of the machine is crucial to prevent damage.

## 3. SETUP

---

The FORLIM Boot Dryer is designed for easy setup and storage.

1. Remove the dryer from its packaging.
2. Place the dryer on a stable, flat surface.
3. Unfold the main drying arms upwards until they click into place.
4. Extend the telescopic dry ports to the desired height.
5. Bend the dry ports to direct airflow into the toe box of your footwear or into gloves.
6. Plug the power cord into a standard 110V AC outlet.

## Telescopic + bendable dry ports

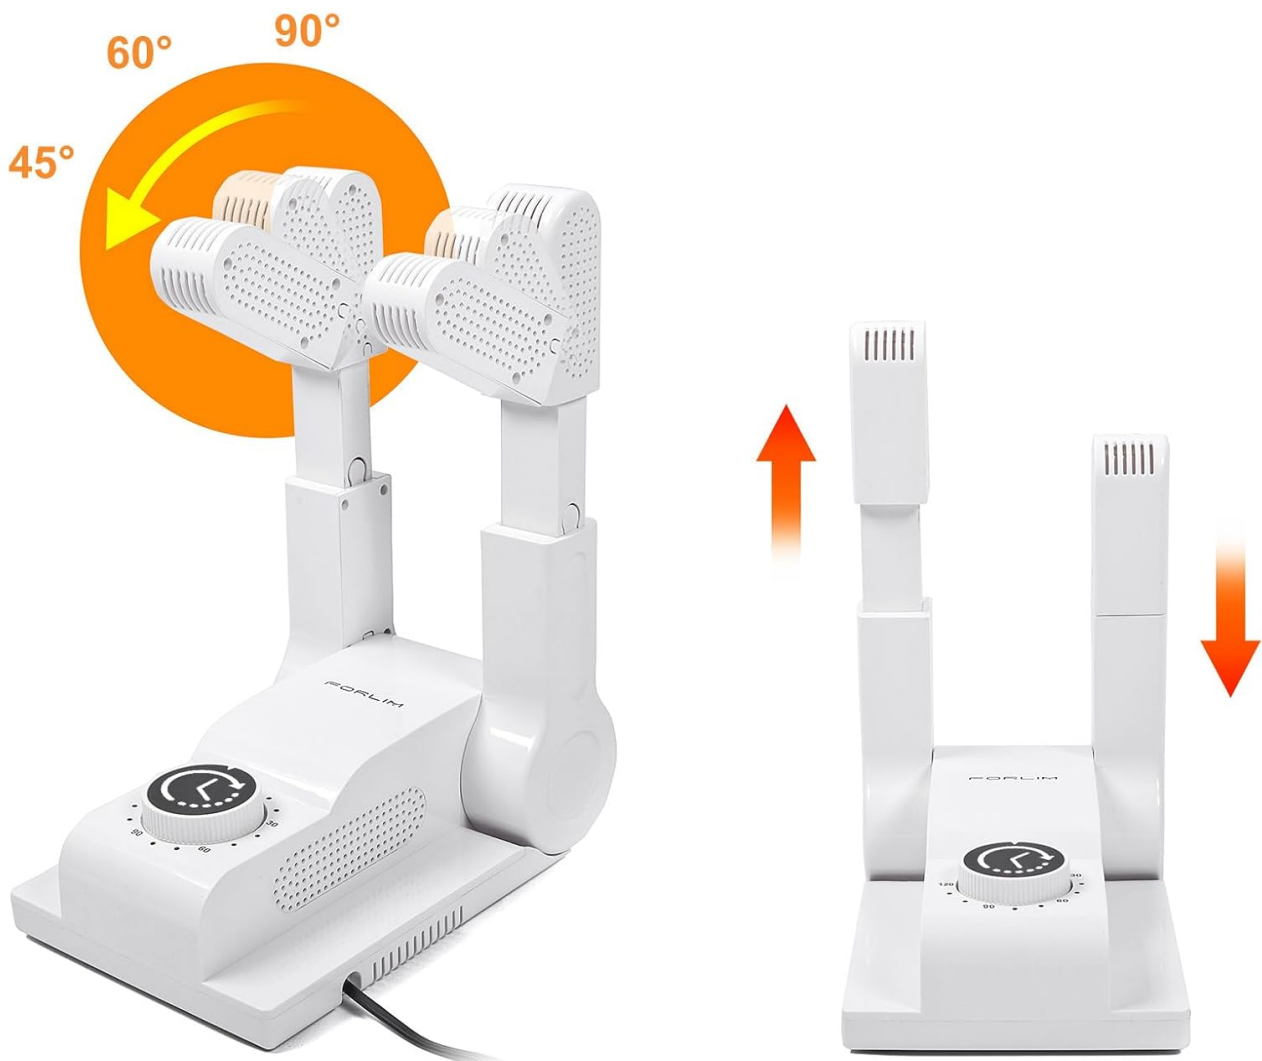


Image: Close-up view of the FORLIM Boot Dryer demonstrating the telescopic and bendable dry ports, highlighting their flexibility.

### 4. OPERATING INSTRUCTIONS

Follow these steps to operate your FORLIM Boot Dryer:

1. Ensure the dryer is properly set up and plugged in.
2. Place your footwear or gloves onto the dry ports. Adjust the ports to ensure maximum airflow into the items.
3. Turn the timer dial to select the desired drying duration (up to 120 minutes). The dryer will automatically

shut off once the timer expires.

- The dryer operates with forced air heating, providing a consistent temperature between 105°F-140°F (40.5°C-60°C).
- For models with ozone function (if applicable), press the OZONE ON/OFF button to activate the deodorizing feature.
- Once drying is complete, remove your items and unplug the dryer.

# 30-120 MINS Auto-off Timer



Image: The control panel of the FORLIM Boot Dryer, showing the timer dial with settings from 30 to 120 minutes for automatic shut-off.

Your browser does not support the video tag.

Video: This video demonstrates the unboxing and basic operation of the FORLIM Boot Dryer, including unfolding the arms and placing footwear.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your FORLIM Boot Dryer, follow these maintenance guidelines:

- Cleaning:** Unplug the dryer before cleaning. Wipe the exterior with a soft, damp cloth. Do not use

abrasive cleaners or solvents.

- **Storage:** When not in use, fold the dry ports and arms back into the compact position for easy storage. Store in a dry, cool place away from direct sunlight.
- **Inspection:** Periodically check the power cord for any signs of damage. If damage is found, discontinue use and contact customer service.



Image: The FORLIM Boot Dryer shown in its compact, folded state, ideal for storage or travel.

## 6. TROUBLESHOOTING

If you encounter any issues with your FORLIM Boot Dryer, refer to the following common problems and solutions:

- **Dryer not turning on:** Ensure the power cord is securely plugged into a working outlet. Check if the timer is set correctly.
- **No heat or insufficient drying:** Verify that the dry ports are fully extended and bent to direct airflow into the items. Ensure the air outlet at the bottom is not obstructed.
- **Unusual noise:** Check for any foreign objects that might have fallen into the air vents. If the noise persists, discontinue use and contact customer service.

- **Ozone function not working:** Ensure the OZONE ON/OFF button is pressed and the indicator light is on (if applicable to your model).

For issues not listed here, please contact FORLIM customer service.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	SD-002A-W
Item Weight	2.33 pounds
Product Dimensions	11.57 x 7.2 x 3.66 inches
Color	Auto-off Timer (White)
Material	Plastic
Voltage	110 Volts (AC)
Included Components	Color Box *1, Shoe Dryer*1, User's Manual*1

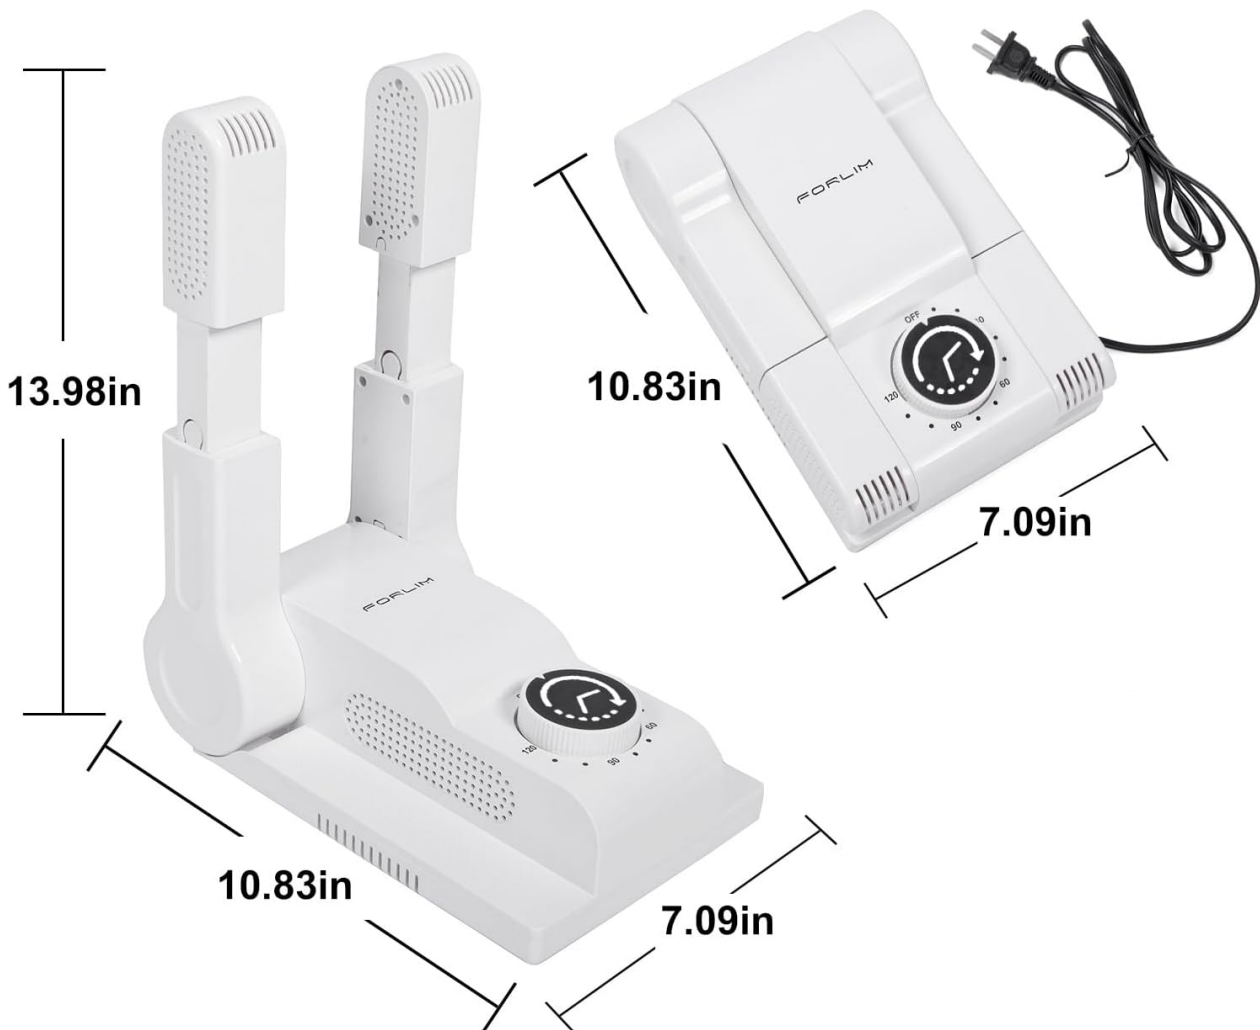


Image: The FORLIM Boot Dryer displayed with its key dimensions (length, width, height) indicated.

## 8. WARRANTY & SUPPORT

Your FORLIM Boot Dryer comes with a **2-year warranty**.

FORLIM offers 24/7 friendly customer service. If you have any questions, concerns, or require assistance with your product, please do not hesitate to contact us.

For further support, please visit the official FORLIM store on Amazon: [FORLIM Store](#)