

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UpBright 12V AC/DC Adapter User Manual for Therabody EM1024PR RecoveryAir JetBoots

UPBRIGHT EM1024PR

UpBright 12V AC/DC Adapter User Manual

For Therabody EM1024PR RecoveryAir JetBoots

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your UpBright 12V AC/DC Adapter, designed for compatibility with Therabody EM1024PR RecoveryAir JetBoots. Please read this manual thoroughly before use and retain it for future reference.



Image 1.1: The UpBright 12V AC/DC Adapter shown with Therabody RecoveryAir JetBoots, illustrating its intended use for powering the

compression system.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the product:

- Do not expose the adapter to water, rain, or excessive moisture.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not disassemble or attempt to repair the adapter. Refer servicing to qualified personnel.
- Ensure the adapter is used within its specified voltage and current ratings.
- Keep out of reach of children.
- Unplug the adapter from the power outlet when not in use for extended periods.

3. PRODUCT OVERVIEW

The UpBright 12V AC/DC Adapter provides reliable power for your compatible devices. It features built-in protection mechanisms to ensure safe operation.

UpBright AC Adapter Power Supply Compatible with:



Image 3.1: The UpBright 12V AC/DC Adapter, showing its compact design and power output cable.

3.1. Components


- **AC/DC Adapter Unit:** Converts AC wall power to 12V DC power.
- **Output Cable:** Connects the adapter to the device.

- **Y-Splitter Cable (Optional/Included):** Allows simultaneous connection to both Therabody RecoveryAir JetBoots.



Image 3.2: The Y-splitter cable, designed to connect both RecoveryAir JetBoots to a single power source.

Come With A Suitable AC Power Cord (Only One) to Fit Your Country/Area

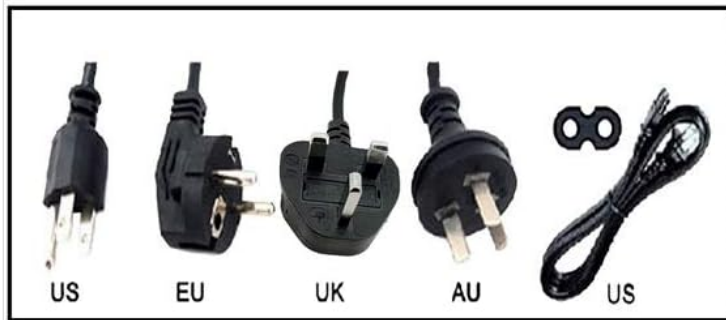

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE
+ UpBright® LIMITED WARRANTY



Image 3.3: All components of the UpBright 12V AC/DC Adapter system, including the main adapter, output cable, and Y-splitter.

4. SETUP INSTRUCTIONS

Follow these steps to properly connect your UpBright 12V AC/DC Adapter to your Therabody RecoveryAir JetBoots:

1. **Inspect Components:** Before connecting, ensure all components (adapter, cables) are free from visible damage.
2. **Connect Y-Splitter (if applicable):** If using both JetBoots simultaneously, connect the Y-splitter cable to the adapter's output cable.
3. **Connect to JetBoots:** Insert the barrel connectors from the Y-splitter (or directly from the adapter's output cable if using one boot) into the power input ports on your Therabody RecoveryAir JetBoots.
4. **Plug into Power Outlet:** Insert the AC plug of the adapter into a standard 100-240VAC 50/60Hz wall outlet.
5. **Verify Connection:** Ensure all connections are secure. The Therabody JetBoots should indicate power is being received (refer to your JetBoots manual for specific indicators).

5. OPERATING THE ADAPTER

The UpBright 12V AC/DC Adapter is designed for continuous power supply to your Therabody RecoveryAir JetBoots. Once connected as per the setup instructions, the adapter will provide the necessary power for operation or charging.

- The adapter automatically adjusts to worldwide input voltages (100-240VAC).
- It provides a stable 12V DC output.
- No user interaction is required for the adapter itself during operation, beyond plugging it in.

6. MAINTENANCE

Proper care ensures the longevity and performance of your adapter:

- **Cleaning:** Disconnect the adapter from the power outlet and device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Inspection:** Periodically check the adapter and cables for any signs of wear, fraying, or damage. Discontinue use if damage is observed.

7. TROUBLESHOOTING

If you encounter issues with your adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not receiving power	Loose connection, faulty outlet, damaged cable/adapter	Ensure all connections are secure. Test the outlet with another device. Inspect cables for damage. Try a different outlet.
Adapter feels hot	Normal operation, poor ventilation, overload	A slight warmth is normal. Ensure adequate ventilation around the adapter. If excessively hot, disconnect immediately and contact support.
Intermittent power	Loose connection, damaged cable	Check all connections. Inspect the cable for kinks or breaks.

If the problem persists after trying these solutions, please contact UpBright customer support.

8. SPECIFICATIONS

Detailed technical specifications for the UpBright 12V AC/DC Adapter:

- **Input Voltage:** 100-240VAC, 50/60Hz (Worldwide Compatible)
- **Output Voltage:** 12V DC
- **Amperage:** 2 Amps
- **Wattage:** 24 Watts
- **Connector Type:** Barrel Connector
- **Protection Features:**
 - OVP (Over Voltage Output Protection)
 - OCP (Over Current Output Protection)
 - SCP (Short Circuit Output Protection)
- **Product Dimensions:** Approximately 6 x 3 x 1 inches
- **Item Weight:** Approximately 3.84 ounces
- **Compatible Devices:** Therabody Model: EM1024PR RecoveryAir JetBoots



Image 8.1: Illustration of the adapter's internal security protection features, including over-voltage, over-current, and short-circuit protection.



Image 8.2: Visual representation of the adapter's flexible and durable wire, designed for longevity and resistance to wear.

9. WARRANTY AND SUPPORT

UpBright stands behind the quality of its products.

- **Refund Policy:** UpBright offers a 30-day refund policy from the date of purchase.
- **Exchange Policy:** The product is covered by a 24-month exchange warranty for manufacturing defects.
- **Contact Support:** For any questions, troubleshooting assistance, or warranty claims, please contact UpBright customer service through the retailer where the product was purchased or visit the official UpBright store online.

For more information about UpBright products, visit the [UpBright Amazon Store](#).

© 2026 UpBright. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question