

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ExBrite](#) /
- › [ExBrite 30"x32" Lighted Medicine Cabinet Instruction Manual \(Model 11MC3032V4DX\)](#)

ExBrite 11MC3032V4DX

ExBrite 30"x32" Lighted Medicine Cabinet Instruction Manual

MODEL: 11MC3032V4DX

Thank you for choosing the ExBrite Lighted Medicine Cabinet. Please read this manual carefully before installation and use.

1. Product Overview

The ExBrite 30"x32" Lighted Medicine Cabinet is a versatile and modern addition to any bathroom. It features advanced lighting controls, enhanced defogging, smart display functions, and ample storage, all within a durable aluminum frame. This unit is ETL certified, ensuring compliance with safety standards.



Image: Front view of the ExBrite 30"x32" Lighted Medicine Cabinet, showcasing its illuminated mirror and sleek design.

2. Safety Information

This lighted medicine cabinet is ETL certified as a complete unit, ensuring full compliance with safety standards. All critical components have also passed UL certification. For your safety, always ensure proper electrical installation by a qualified professional.

3. Setup & Installation

The ExBrite medicine cabinet supports both recessed and surface mounting. Due to the weight of the unit (51.5 lbs), a two-person installation is recommended. Ensure proper wall anchoring or attachment to studs for secure mounting.

3.1 Dimensions and Mounting Options



Cabinet Dimensions

Cutout Dimensions



Image: Technical drawing showing the cabinet's overall dimensions (30"W x 32"H x 5.25"D) and recommended cutout dimensions for recessed installation (30"W x 32"H x 4.25"D).

RECESSED MOUNTING



SURFACE MOUNTING

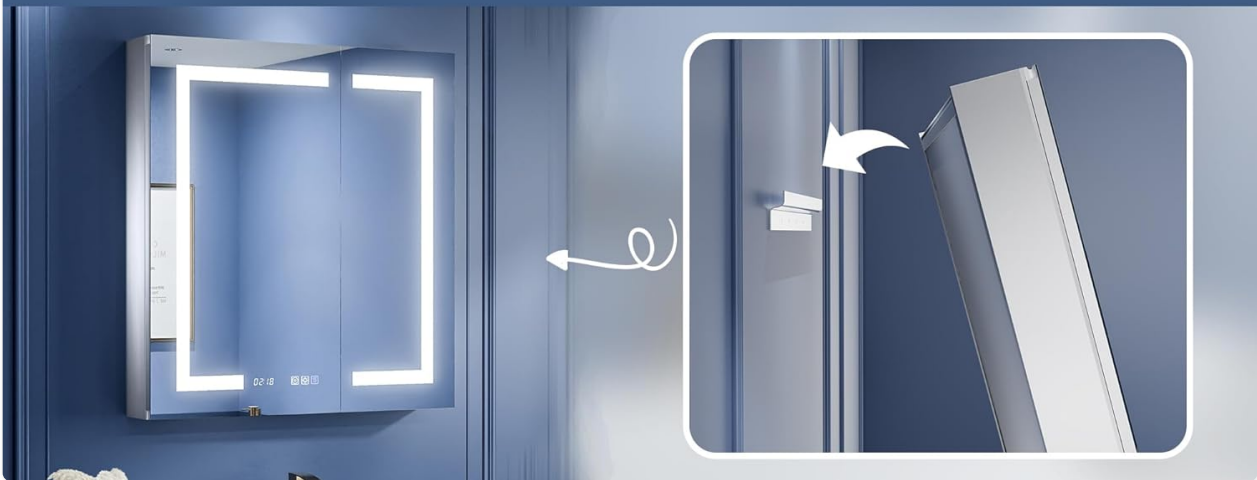


Image: Visual guide demonstrating how the medicine cabinet can be installed either recessed into the wall or surface-mounted.

3.2 Installation Steps

Refer to the provided installation diagram for detailed steps. For recessed mounting, ensure the power cord is routed correctly to avoid pinching. If hardwiring, consult a qualified electrician.



Image: A diagram illustrating the sequence of steps for installing the medicine cabinet, including measuring, drilling, and securing the unit.

3.3 Installation Videos

Video: Recessed installation guide for an LED medicine cabinet. This video demonstrates the process of preparing the wall and mounting the cabinet.

4. Operating Instructions

4.1 Lighting Control

The cabinet features stepless brightness adjustment from 10% to 100% and stepless color temperature adjustment from 3000K (warm) to 6000K (cool). Use the touch controls on the mirror surface to adjust to your preference. The mirror also has a memory function that retains the last lighting setting.




Image: Visual representation of the adjustable brightness range (10%-100%) and color temperature options (3000K, 4500K, 6000K).

4.2 Defog Function

Activate the defogging function via the touch control. The mirror surface quickly warms to approximately 40°C, clearing fog within minutes. For safety, the defogging function automatically shuts off after 60 minutes.

Enhanced Anti-Fog

Meet a clearer version of yourself

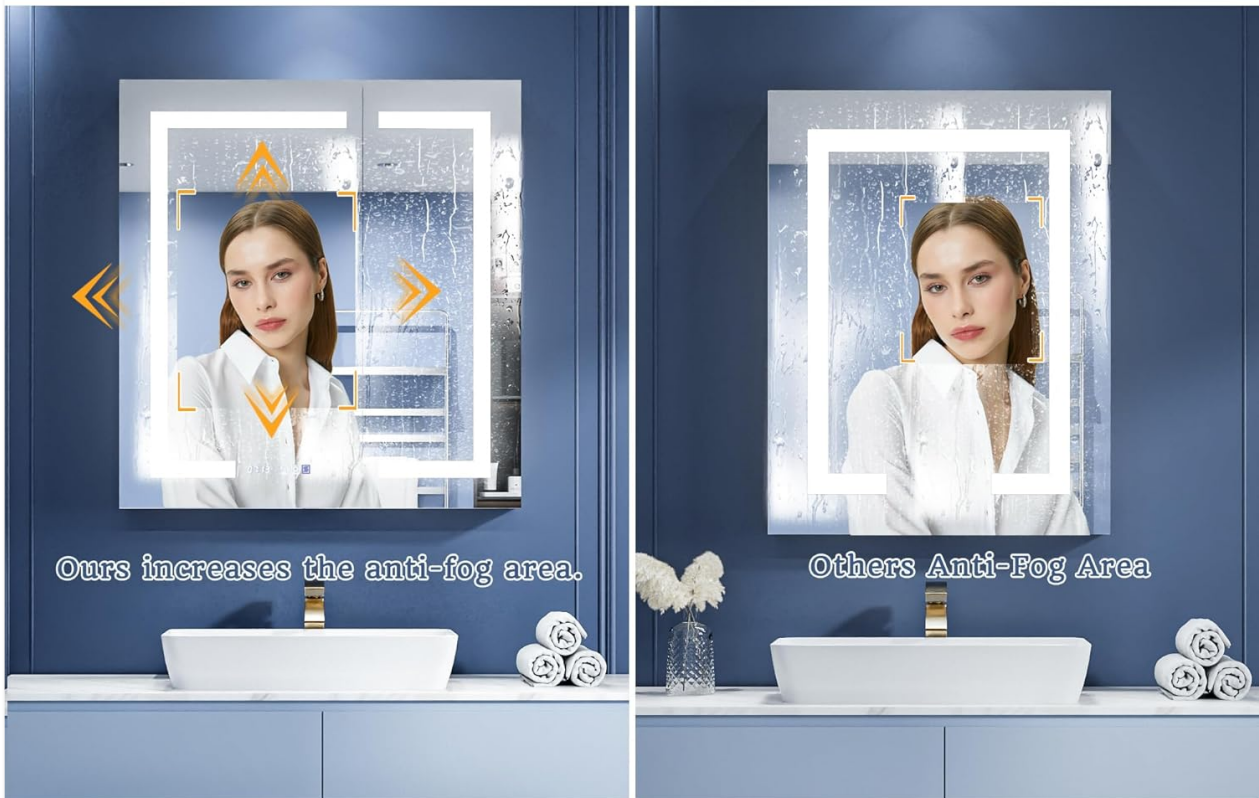

The image shows two bathroom vanity setups side-by-side. The left setup features a mirror with a large, clear rectangular area in the center, outlined in white, where a woman's reflection is visible. Orange arrows point from the edges of this clear area towards the fogged mirror surface. Below the mirror, the text reads "Ours increases the anti-fog area." The right setup features a mirror that is almost entirely covered in white condensation, with only a small, narrow rectangular area in the center clear enough to see the woman's reflection. Below this mirror, the text reads "Others Anti-Fog Area". Both setups include a white rectangular sink on a light blue vanity with a gold faucet and three rolled white towels on the right side.

Ours increases the anti-fog area.

Others Anti-Fog Area

- Click to turn on the anti-fog function
- Anti-fog function automatically turns off after 60 minutes

Image: Demonstration of the enhanced anti-fog feature, showing a clear mirror surface after activation compared to a fogged one.

4.3 Interior Sensor Light & Smart Display

A built-in 6000K LED interior light automatically turns on when the cabinet door is opened. The integrated digital clock and room temperature display provide practical information. A light-sensitive night light automatically activates in low-light conditions for gentle illumination.



Image: The light-sensitive night light feature, which automatically turns on when ambient brightness decreases.

4.4 Official Product Videos

Video: Demonstration of the TokeShimi LED Medicine Cabinet's features, including stepless dimming, fast defogging, and internal storage.

Video: Overview of the Lighted Medicine Cabinet by ExBrite, highlighting its various functionalities and design.

Video: Introduction to 13 selling points and features of a medicine cabinet, showcasing its practical aspects.

Video: Features of a lighted medicine cabinet with mirror, including lighting options and storage.

5. Storage & Design

5.1 Interior Storage

The cabinet is equipped with three adjustable 8mm thick tempered glass shelves, each supporting up to 30 lbs. This allows for customizable and secure storage of various bathroom essentials.

Safety Tempered Glass Mirror



Image: Comparison highlighting the durability and non-fragmenting nature of the tempered glass mirror with safety film.

5.2 Integrated Power Outlets

Two built-in 1800W high-power dual outlets and two USB ports are located inside the cabinet, ideal for charging and using devices like hairdryers, shavers, and electric toothbrushes.



Image: Detailed view of the interior, showing the 6000K LED sensor light, dual outlets, USB ports, and 110° soft-close hinges.

5.3 Durable Construction

The cabinet features a double-layer aluminum frame for superior strength, stability, and load-bearing capacity. The lighting system includes dual LED strips with high-brightness lamp beads and a Color Rendering Index (CRI) > 90 for natural color reproduction.

DOUBLE-LAYER ALUMINUM PROFILE FRAME NOT EASILY DEFORMED STABLE AND RELIABLE



Image: Illustration comparing the stability of a double-layer aluminum frame (used in this product) against a single-layer frame.

6. Maintenance

To maintain the appearance and functionality of your medicine cabinet, regularly clean the mirror surface with a soft, damp cloth and a mild glass cleaner. Avoid abrasive cleaners or harsh chemicals that could damage the mirror or frame. Ensure the electrical components remain dry.

7. Troubleshooting

- **Digital Display Malfunction:** If the clock or temperature display shows incorrect segments or malfunctions, check the power connection. If the issue persists, contact customer support.
- **Power Cord for Recessed Installation:** For standard 3.5" depth walls in the US, the power cord may exit from the back. It may be necessary to re-drill the aluminum frame to route the cord from the top for a flush installation. This modification may affect warranty; consult a professional.
- **Fogging Issues:** Ensure the defog function is activated. If the mirror remains fogged, verify the power supply to the defogger.

8. Specifications

| Feature | Detail |
|----------------------|--|
| Brand | ExBrite |
| Model Name | 11MC3032V4DX |
| Product Dimensions | 5.25"D x 30"W x 32"H |
| Item Weight | 51.5 Pounds |
| Mounting Type | Wall Mount (Recessed/Surface) |
| Frame Material | Double-Layer Aluminum |
| Number of Shelves | 3 (Tempered Glass) |
| Special Features | Adjustable, Durability, Waterproof, Stepless Dimming, 3-Color Temp, Defog, Clock & Temp Display, Night Light, Interior Sensor Light, Outlets & USB Ports |
| Safety Certification | ETL Certified Unit, UL Certified Components |

9. Warranty & Support

The ExBrite Lighted Medicine Cabinet comes with a 30-day free return policy and up to a 1-year warranty. For any questions or support, please contact ExBrite customer service. Email inquiries typically receive a reply within 24 hours.

[30-Day Free Return](#) [Up to 1 Year Warranty](#) [Email Support \(24-hour reply\)](#)