

Tonfarb 05280

Tonfarb Bone Conduction Headphones Model 05280 User Manual

Your guide to setting up, operating, and maintaining your Tonfarb Bone Conduction Headphones.

1. GETTING STARTED

1.1 Unboxing

Carefully remove all components from the packaging. The box should contain your Tonfarb Bone Conduction Headphones, a magnetic charging cable, and this user manual.

1.2 Charging the Headphones

Before first use, fully charge your headphones. Connect the magnetic charging cable to the charging port on the headphones and plug the USB end into a compatible power source (e.g., computer USB port, USB wall adapter). The charging indicator light will show the charging status. A full charge takes approximately 1.5 hours.




Image: Magnetic charging connection for the Tonfarb Bone Conduction Headphones.

The headphones feature a 160mAh battery, providing up to 8 hours of working time on a single charge.

MP3 PLAY MODE WITH 8GB MEMORY

Can save more than 1200 music based on audio file size

Compatible with FLAC, MP3 and AWW formats



Image: Visual representation of 1.5 hours fast charging and up to 8 hours working time.

1.3 Power On/Off

To power on, press and hold the Power button until the indicator light flashes. To power off, press and hold the Power button again until the indicator light turns off.

2. OPERATING INSTRUCTIONS

2.1 Bluetooth Pairing

With the headphones powered on, they will automatically enter pairing mode. On your device (e.g., smartphone), enable Bluetooth and search for available devices. Select "BS07" from the list to connect. The headphones utilize Bluetooth 5.3 for a stable connection.

BLUETOOTH CONNECTION & 8 HOURS PLAYBACK TIME

Build-in 160mAh battery and can work for up to 8 hours



Image: Bluetooth pairing interface on a mobile device.

2.2 MP3 Mode (Internal 8GB Memory)

The headphones feature an 8GB internal memory, allowing you to store over 1200 songs. This is ideal for activities where carrying a phone is inconvenient, such as swimming. Supported audio formats include FLAC, MP3, and AWW.

160 mAh battery capacity

Long battery life, no need to worry about power outages



Image: Headphones highlighting the MP3 play mode and 8GB internal storage.

To switch between Bluetooth and MP3 mode, refer to the control diagram below.

2.3 Controls

The headphones feature intuitive button controls for music playback and call management:

- **Music Mode:**

- Press '+' once: Play
- Press '-' once: Pause
- Press '+' twice: Volume +
- Press '-' twice: Volume -
- Press '+' three times: Previous track
- Press '-' three times: Next track
- Hold '+' for 2 seconds: Voice Assistant

- Press '-' four times: Switch between MP3/Bluetooth Mode

- **Call Mode:**

- Press '+' once: Answer / Hang up a call
- Hold '+' for 2 seconds: Reject call
- Press '+' twice: Hang up current call and answer a third-party call


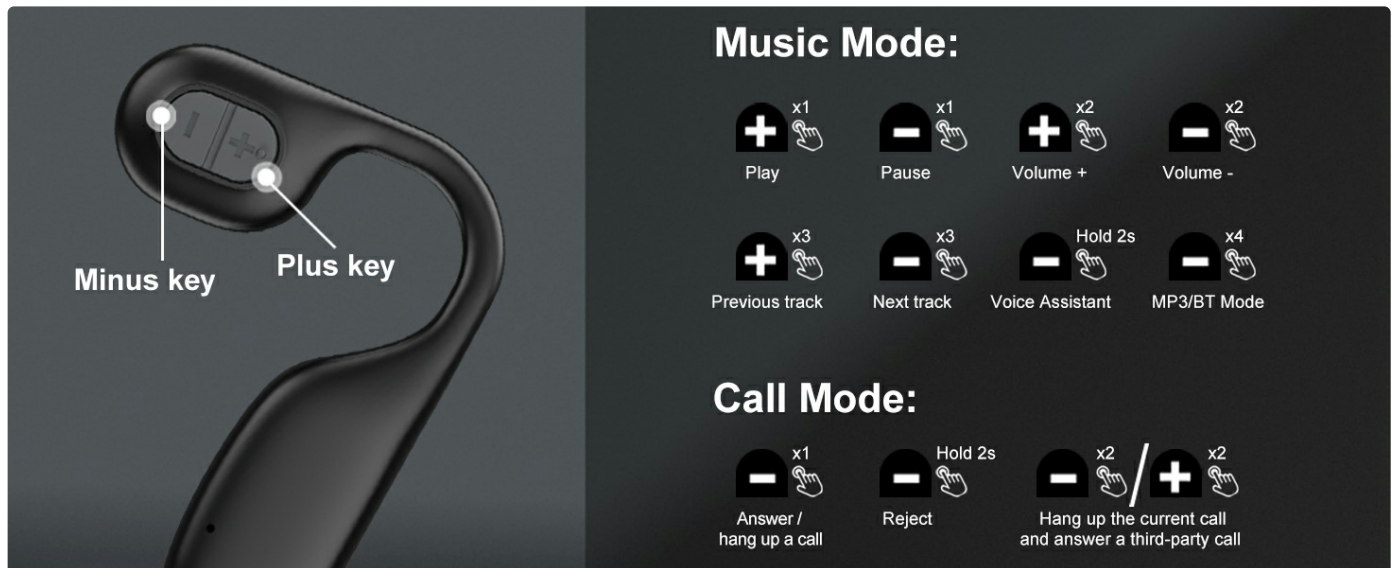


Image: Detailed control diagram for music and call functions.

2.4 Wearing the Headphones

The open-ear design ensures comfort and allows you to remain aware of your surroundings, enhancing safety during outdoor activities. The lightweight design (approximately 25 grams) provides a secure fit without discomfort.

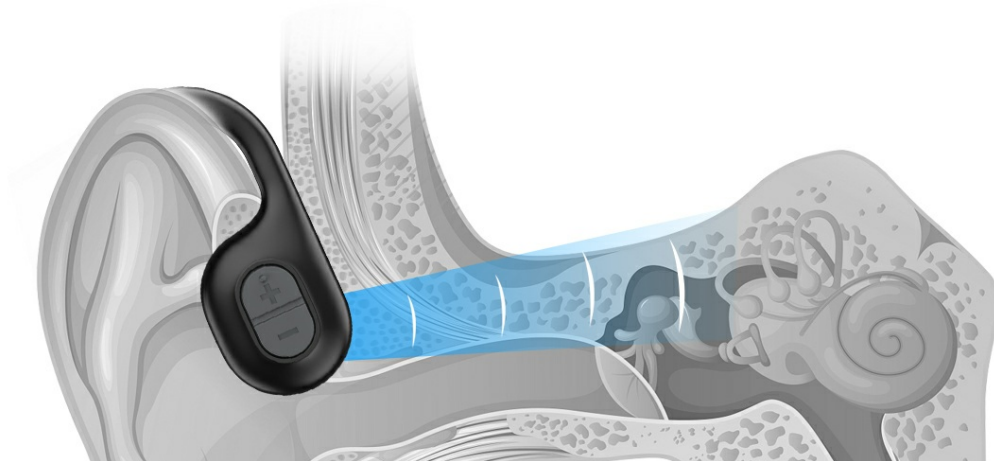

Open Ear Design

Image: User demonstrating the open-ear design during cycling, allowing awareness of surroundings.

2.5 Bone Conduction Technology

These headphones utilize bone conduction technology to transmit sound vibrations directly to your inner ear through your cheekbones, bypassing the eardrums. This allows for clear audio while keeping your ears open to ambient sounds.



Bone Conduction

Image: Diagram showing sound transmission via bone conduction.

3. CARE AND MAINTENANCE

3.1 Water Resistance (IP67)

The headphones are IP67 rated, meaning they are resistant to dust and can withstand immersion in water up to 1 meter for 30 minutes. This makes them suitable for swimming and other water-related activities. For optimal performance during swimming, use the MP3 mode.



IP67 Waterproof

Image: User swimming with IP67 waterproof bone conduction headphones.

3.2 Cleaning

Wipe the headphones with a soft, damp cloth after each use, especially after exposure to sweat or water. Do not use abrasive cleaners or harsh chemicals.

3.3 Storage

Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures. Avoid placing heavy

objects on top of the headphones.

4. TROUBLESHOOTING GUIDE

- **No Power:** Ensure the headphones are fully charged. If the issue persists, try a different charging cable or power adapter.
- **Cannot Pair via Bluetooth:** Make sure the headphones are in Bluetooth mode and within range of your device. Turn off and on Bluetooth on your device, then try pairing again.
- **Poor Sound Quality:** Check the volume levels on both the headphones and your connected device. Ensure the headphones are positioned correctly on your cheekbones. If using MP3 mode, verify the audio file quality.
- **Charging Issues:** Ensure the magnetic charging cable is securely connected to the headphones and the power source. Clean the charging contacts on both the headphones and the cable.

5. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	05280
Brand	Tonfarb
Connectivity Technology	Wireless (Bluetooth 5.3)
Waterproof Rating	IP67
Internal Memory	8GB (stores over 1200 songs)
Battery Life	Up to 8 hours
Charging Time	Approx. 1.5 hours
Weight	Approx. 25 grams
Ear Placement	Open Ear
Control Type	Media Control, Touch

6. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An overview of the Tonfarb bone conduction headphones, demonstrating features like open-ear design, MP3 mode, and suitability for various activities including running, cycling, and swimming.

7. WARRANTY INFORMATION

Your Tonfarb Bone Conduction Headphones are covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8. CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Tonfarb customer service through the contact information provided on our official website or in your product packaging. Our support team is available to help you with any questions or issues you may encounter.

© 2023 Tonfarb. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question