

Kohler K-28030-NA

KOHLER K-28030-NA Verdera Medicine Cabinet User Manual

Model: K-28030-NA

1. INTRODUCTION

This manual provides essential information for the safe and proper installation, operation, and maintenance of your KOHLER K-28030-NA Verdera Medicine Cabinet. Please read all instructions thoroughly before beginning installation or use. Retain this manual for future reference.



Figure 1: Front view of the KOHLER K-28030-NA Verdera Medicine Cabinet in a closed position.

2. SAFETY INFORMATION

WARNING:

- Ensure proper installation to prevent tipping or falling.
- Do not exceed the maximum weight capacity of 40 pounds (18.1 kg) for the cabinet. Overloading can lead to structural failure and injury.
- Always wear appropriate safety gear, such as safety glasses, during installation.
- If you are unsure about any part of the installation process, consult a qualified professional.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, contact KOHLER customer service.

- Verdera 20 in. x 40 in. Rectangular Framed Medicine Cabinet (1 unit)
- Adjustable Tempered-Glass Shelves (4 units)
- Mounting Hardware (for surface or recessed installation)
- Vertically Adjustable 3x Magnifying Mirror (1 unit, pre-installed on door interior)

4. FEATURES

The KOHLER K-28030-NA Verdera Medicine Cabinet offers the following key features:

- **Enhanced Visibility:** Front, inside door, and back panel mirrors provide comprehensive visibility for daily routines.
- **Customizable Storage:** Four adjustable tempered-glass shelves allow for flexible organization of personal care products.
- **Elegant Design:** A finish-matched cabinet interior complements the sleek, rectangular framed design.
- **Convenient Magnification:** A vertically adjustable 3x magnifying mirror is integrated on the inside of the door for detailed grooming tasks.
- **Ease of Access:** Features a slow-close door mechanism and two-way adjustable hinges with a 108° opening capability for smooth, quiet operation and durability.

Verdera®

Combines an elegant fit with a quick, easy installation.



SKU # 99006-NA

THE BOLD LOOK
OF **KOHLER**®

Figure 2: Feature diagram highlighting key components and design aspects of the Verdera cabinet.

5. SPECIFICATIONS

Specification	Detail
Brand	Kohler
Model Name	Verdera
Model Number	K-28030-NA
Color	Silver
Product Dimensions (D x W x H)	24.38" x 9.25" x 46.13" (Overall)
Size (Cabinet)	20 inches x 4.75 inches x 40 inches
Material	Glass, Anodized Aluminum (Frame, Top), Aluminum (Handle)
Mounting Type	Wall Mount (Recessed or Surface)
Number of Shelves	4 (Adjustable Tempered-Glass)
Weight Limit	40 Pounds (18.1 kg)
Item Weight	40 Pounds (18.1 kg)
Door Style	Glass Front, Slow-Close
Assembly Required	No (Minor setup for shelves)

6. SETUP AND INSTALLATION

The Verdera medicine cabinet is designed for either recessed or surface-mount installation. Mounting hardware is included. Professional installation is recommended to ensure proper and secure mounting.

6.1 Pre-Installation Checks

- Inspect the cabinet for any damage prior to installation.
- Ensure the wall structure can support the cabinet's weight (40 lbs / 18.1 kg) plus contents.
- For recessed installation, verify wall cavity dimensions match the cabinet's rough-in requirements.

6.2 Installation Steps

1. Refer to the detailed installation instructions provided with the physical product for specific steps and diagrams.
2. Mark the desired location on the wall, ensuring it is level and plumb.
3. Secure the mounting brackets or frame to the wall using appropriate fasteners for your wall type.
4. Carefully lift and attach the cabinet to the installed mounting system.
5. Adjust the cabinet to ensure it is level and securely fastened.
6. Install the adjustable glass shelves into the desired positions using the provided shelf clips.



Figure 3: Interior view showing adjustable shelves and magnifying mirror.

7. OPERATION

7.1 Door Operation

The cabinet features a slow-close door mechanism. To open, gently pull the door. To close, push the door until it engages the slow-close mechanism; it will then close softly and silently.

7.2 Adjusting Shelves

The four tempered-glass shelves are adjustable. To reposition a shelf, carefully lift it from its clips, move the clips to the desired height, and reinsert the shelf. Ensure clips are securely seated before placing items on the shelf.

7.3 Using the Magnifying Mirror

A 3x magnifying mirror is located on the inside of the cabinet door. This mirror is vertically adjustable. To adjust its height, gently slide it up or down along its track to suit your preference.



Figure 4: Adjusting the magnifying mirror.

8. MAINTENANCE

8.1 Cleaning

- Clean mirrored surfaces with a soft, damp cloth and a mild glass cleaner. Avoid abrasive cleaners or harsh chemicals that can damage the mirror finish.
- Wipe down aluminum frames and interior surfaces with a soft, damp cloth. Do not use abrasive pads or cleaners.
- For glass shelves, use a mild glass cleaner and a soft cloth.
- Ensure all surfaces are dried thoroughly after cleaning to prevent water spots.

8.2 Inspection

Periodically check the cabinet's mounting hardware for tightness and stability. Ensure hinges operate smoothly and that shelves are securely seated.

9. TROUBLESHOOTING

- **Door not closing smoothly:** Check hinges for proper alignment. The two-way adjustable hinges may require minor adjustment. Refer to the product's specific hinge adjustment instructions.
- **Shelves feel unstable:** Ensure shelf clips are fully inserted into the cabinet's pre-drilled holes and

that the glass shelf is resting evenly on all four clips. Do not overload shelves beyond the recommended weight capacity.

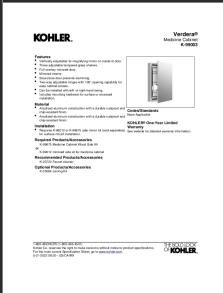
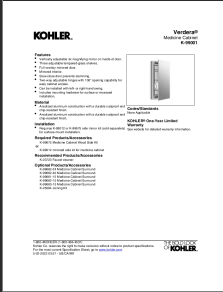
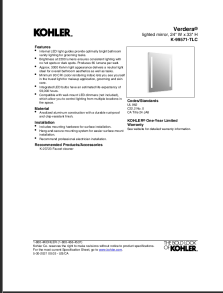

- **Missing components upon delivery:** If any parts, such as mirrored side panels or sufficient shelf brackets, are missing, contact KOHLER customer service immediately for assistance.

10. WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please visit the official KOHLER website or contact KOHLER customer service directly. Keep your proof of purchase for warranty claims. **KOHLER Customer Service:** Refer to your product packaging or the KOHLER website for current contact information.

© 2024 Kohler Co. All rights reserved.

Related Documents - K-28030-NA

	<p>Kohler Verdera Medicine Cabinet K-99003: Features, Installation, and Specifications</p> <p>Detailed information on the Kohler Verdera Medicine Cabinet K-99003, including its features, materials, installation instructions, required accessories, and technical specifications. Learn about its adjustable shelves, slow-close door, and durable aluminum construction.</p>
	<p>Kohler Verdera K-99001 Medicine Cabinet - Features, Dimensions, and Installation Guide</p> <p>Detailed specification sheet for the Kohler Verdera K-99001 medicine cabinet. This document outlines its features, anodized aluminum material, installation requirements, product dimensions, and recommended accessories. Includes notes for surface and recess mounting.</p>
	<p>Kohler Verdera K-99571-TLC Lighted Mirror: Specifications and Installation Guide</p> <p>Comprehensive specifications and installation details for the Kohler Verdera K-99571-TLC 24" W x 33" H lighted bathroom mirror. Features include LED lighting, anodized aluminum, and electrical requirements.</p>
	<p>Kohler K-33690-L-NA, K-33690-R-NA Lighted Mirror Cabinet Installation Guide</p> <p>Comprehensive installation guide for Kohler K-33690-L-NA and K-33690-R-NA lighted mirror cabinets. Includes safety instructions, roughing-in, surface and recess mounting, electrical connections, accessory installation, and electrical parameters.</p>

<div>Installation and Care Guide</div> <div>Lighted Medicine Cabinet</div> <div><div><div></div><div></div><div></div></div><div><div></div><div></div><div></div></div></div> <div><div>13875011-0-0</div><div><div></div><div></div><div></div></div></div>	<div>Kohler Lighted Medicine Cabinet: Installation and Care Guide</div> <div>Detailed installation and care instructions for Kohler lighted medicine cabinets. Covers safety, tools, step-by-step installation (recessed and surface-mount), wiring, and maintenance for models like K-99011-TL.</div>
<div>Installation and Care Guide</div> <div>Steam Generator</div> <div><div><div></div><div></div><div></div></div><div><div></div><div></div><div></div></div></div> <div><div>1335447-0-0</div><div><div></div><div></div><div></div></div></div>	<div>Kohler Steam Generator Installation and Care Guide</div> <div>This guide provides comprehensive installation, safety, and care instructions for Kohler Steam Generators, including model specifications and troubleshooting tips for models K-5525-NA through K-5543-NA.</div>