

Speaka SP-10924804

SPEAKA PROFESSIONAL SP-MM-910 x2 Dual Monitor Arm User Manual

Model: SP-10924804

1. INTRODUCTION

Thank you for choosing the SPEAKA PROFESSIONAL SP-MM-910 x2 Dual Monitor Arm. This high-quality and stable monitor stand is designed to support two monitors ranging from 17 inches (43.18 cm) to 32 inches (81.28 cm). Its swivel and tilttable design allows for various viewing angles and optimal ergonomic positioning, enhancing your workspace comfort and productivity.

Please read this manual thoroughly before installation and use to ensure proper setup and safe operation. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, please contact customer support.



Figure 2.1: All components included in the package. This image displays the main dual monitor arm assembly, the desk clamp base, the grommet mount option, and the two VESA mounting plates.

- Dual Monitor Arm Assembly (x1)
- Desk Clamp Base (x1)
- Grommet Mount Base (x1)
- VESA Mounting Plates (x2)
- Hardware Kit (screws, washers, Allen wrenches)
- Cable Management Clips (pre-installed or separate)
- User Manual (this document)

3. SPECIFICATIONS

Feature	Specification
Model Number	SP-10924804
Screen Size Compatibility	17" - 32" (43.2 cm - 81.3 cm)
Weight Capacity (per arm)	Up to 9 kg (19.8 lbs)
VESA Compatibility	75x75mm, 100x100mm
Tilt Range	Adjustable
Swivel Range	Adjustable
Rotation	360° (Portrait/Landscape)
Mounting Options	Desk Clamp, Grommet Mount
Color	Black

4. SETUP AND INSTALLATION

Before installation, ensure your desk is sturdy enough to support the weight of the monitor arm and your monitors. Choose either the desk clamp or grommet mount method.

4.1 Desk Clamp Installation

1. Attach the desk clamp base to the main pole of the monitor arm. Secure it with the provided screws.
2. Position the clamp on the edge of your desk. Ensure the desk thickness is within the clamp's range.
3. Tighten the clamp screw until the arm is securely fastened to the desk. Do not overtighten.
4. Slide the monitor arms onto the main pole. Adjust the height as desired and secure with the locking mechanism.



Figure 4.1: The SPEAKA PROFESSIONAL dual monitor arm installed using the desk clamp method. The image shows the arm securely attached to the edge of a desk, ready for monitors.

4.2 Grommet Mount Installation

1. If your desk has a grommet hole, remove the existing grommet cover.
2. Attach the grommet mount base to the main pole of the monitor arm.
3. Insert the pole through the grommet hole.
4. From underneath the desk, secure the grommet mount with the provided plate and wing nut. Tighten until stable.
5. Slide the monitor arms onto the main pole. Adjust the height as desired and secure with the locking mechanism.

4.3 Attaching Monitors

1. Attach the VESA mounting plates to the back of your monitors using the appropriate screws from the hardware kit. Ensure the screws are tightened securely but do not overtighten.
2. Carefully slide the monitors (with VESA plates attached) onto the VESA head of each arm.
3. Secure the monitors to the VESA head using the quick-release or locking mechanism, if present, or by tightening the designated screws.



Figure 4.2: Two monitors are successfully mounted on the SPEAKA PROFESSIONAL dual monitor arm, demonstrating the ergonomic setup on a wooden desk.

5. OPERATING AND ADJUSTMENTS

The SPEAKA PROFESSIONAL monitor arm offers extensive adjustability for optimal viewing and ergonomics.

5.1 Height Adjustment

To adjust the height of the monitor arms along the main pole, loosen the locking collar, move the arm to the desired height, and then re-tighten the collar securely.

5.2 Tilt Adjustment

The VESA head allows for tilting your monitor up or down. Loosen the tilt knob/screw on the VESA head, adjust the monitor to your preferred angle, and then tighten the knob/screw to secure it.

5.3 Swivel Adjustment

Each arm can swivel horizontally at various pivot points. Gently push or pull the monitor to swivel it left or right to achieve the desired viewing angle.



Figure 5.1: A detailed view of the SPEAKA PROFESSIONAL dual monitor arm, highlighting its robust construction and multiple articulation points that allow for extensive tilt, swivel, and rotation adjustments.

5.4 Rotation (Portrait/Landscape)

The VESA plate allows for 360° rotation, enabling you to switch your monitor between portrait and landscape orientations. Simply rotate the monitor to the desired orientation.

5.5 Cable Management

Utilize the integrated cable management clips or channels on the arms to route your monitor cables neatly. This helps maintain a clean and organized workspace.

6. MAINTENANCE

- **Cleaning:** Wipe the monitor arm with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.
- **Periodic Checks:** Periodically check all screws and connections to ensure they remain tight and secure. Re-tighten if necessary.
- **Lubrication:** No lubrication is typically required for the moving parts. If any joints become stiff, contact customer support.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Monitor arm is unstable/wobbly.	Clamp/grommet mount is not tight enough. Desk surface is too thin or not sturdy.	Ensure the clamp or grommet mount is fully tightened. Add a protective pad between the clamp and desk if the desk is delicate. Ensure desk can support weight.
Monitor sags or tilts down.	Tilt mechanism is loose. Monitor is too heavy for the arm.	Tighten the tilt adjustment screw on the VESA head. Verify monitor weight is within the 9 kg (19.8 lbs) limit per arm.
Cannot adjust monitor height.	Height locking collar is too tight or too loose.	Loosen the height locking collar, adjust, then re-tighten.
VESA plate does not fit monitor.	Incorrect VESA pattern on monitor.	Verify your monitor's VESA pattern (75x75mm or 100x100mm). This arm supports these standard patterns.

8. WARRANTY AND SUPPORT



SPEAKA PROFESSIONAL products are designed for durability and performance. For warranty information, technical support, or to inquire about replacement parts, please contact your retailer or visit the official Speaka Professional website.

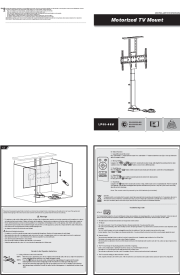

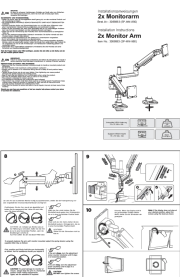

Manufacturer: SpeaKa Professional

For further assistance, please refer to the contact information provided with your purchase or on the manufacturer's official support channels.

© 2024 Speaka Professional. All rights reserved.
This manual is subject to change without notice.

Related Documents - SP-10924804

	<p>SpeaKa Smart Motorized TV Ceiling Mount User Manual and Safety Information</p> <p>Comprehensive guide for the SpeaKa Smart Motorized TV Ceiling Mount (models 2531304/SP-TVCM-510 and 2531305/SP-TVCM-520), covering intended use, safety instructions, installation, operation, cleaning, maintenance, and technical specifications.</p>
	<p>SpeaKa HT 60/80 Datasheet: Technical Specifications & Frequency Response</p> <p>Detailed technical specifications and SPL vs. Frequency response graph for the SpeaKa HT 60/80 speaker. Includes impedance, power handling, frequency range, SPL, mounting dimensions, and more from Conrad Electronic.</p>

	<p>Motorized TV Mount LP66-46M Installation Manual</p> <p>Comprehensive installation manual for the LP66-46M Motorized TV Mount, detailing assembly, operation, and troubleshooting.</p>
	<p>SpeaKa Professional Monitor Holder with Gas Pressure Spring: Safety, Use, and Technical Data</p> <p>Detailed safety instructions, intended use, handling, installation, maintenance, and technical specifications for SpeaKa Professional gas spring monitor holders (models SP-MM-900, SP-MM-910, SP-MM-920, SP-MM-930). Includes table specifications and warnings.</p>
	<p>SpeaKa Professional SP-MM-980 Dual Monitor Arm Installation Guide</p> <p>Comprehensive installation instructions for the SpeaKa Professional SP-MM-980 dual monitor arm. Learn how to safely mount, adjust, and balance your monitors for optimal ergonomic setup. Supports VESA 75x75 and 100x100, with a weight capacity of 2-20 kg per arm.</p>
	<p>SpeaKa Professional Monitor Arm Safety and Technical Instructions</p> <p>Comprehensive safety and technical guide for SpeaKa Professional monitor arms, including installation, usage, and maintenance for models SP-MM-1000, SP-MM-990, SP-MM-980, and SP-MM-970.</p>