

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [arboleaf](#) /

› [arboleaf Electric Head and Scalp Massager CM11B User Manual](#)

## arboleaf CM11B

# arboleaf Electric Head and Scalp Massager CM11B User Manual

Model: CM11B | Brand: arboleaf

## INTRODUCTION

---

This manual provides detailed instructions for the safe and effective use of your arboleaf Electric Head and Scalp Massager, model CM11B. Please read this manual thoroughly before operating the device and retain it for future reference.

## SAFETY WARNINGS

---

- Do not place hands or fingers into the massage heads while the device is operating.
- While the device is IPX7 waterproof and suitable for shower use, avoid prolonged immersion in water.
- Keep out of reach of children.
- Do not use if the device or charging cable is damaged.
- Consult a physician before use if you have any medical conditions, especially on the scalp or head.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x arboleaf Scalp Massager (CM11B)
- 8 x Massage Heads (pre-installed or separate)
- 1 x USB Charging Cable
- 1 x User Manual (this document)
- 1 x Packing Box

# Package Include

1 x Scalp Massager  
8 x Massage Heads  
1 x USB Cable  
1 x User Manual  
1 x Packing Box



Image: The arboleaf Scalp Massager CM11B and its complete package contents.

## SETUP

### 1. Charging the Device

Before first use, fully charge the massager. Connect the provided USB charging cable to the device's charging port and to a compatible USB power adapter (not included). The charging indicator light will show the charging status. A full charge takes approximately 2 hours and provides up to 80 minutes of use.

### 2. Attaching/Changing Massage Heads

The massager comes with 8 soft silicone massage heads. These are designed for easy attachment and removal. Ensure they are securely fastened before use. The shallow-profile design helps prevent hair tangling.

# Shallow-profile design claws, hair-friendly without tangling



VS



4 Claws x 25 Nodes

Fewer Nodes



Ours: food grade silicone

Others: hard silicone



Image: Illustration of the hair-friendly design of the arboleaf massage heads compared to other types.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

To turn the device **ON** or **OFF**, press and hold the power button for 2 seconds.

### 2. Selecting Massage Modes

Once powered on, short press the power button to cycle through the three available massage modes:

- **Mode 1 (Purple Light):** Soothing/Slow mode.
- **Mode 2 (Blue Light):** Power/Fast mode.
- **Mode 3 (Yellow Light):** Smart mode, automatically switches between fast and slow speeds.

### 3. Red Light Mode

The device features a red light mode designed for deep scalp nourishment and to stimulate scalp viability. To disable the red light mode, double-click the power button when the device is on.

# One Button Control




Non-slip  
Silicone Handle



**Long Press 2 Seconds**  
ON/OFF



**Short Press**  
Switch Speed Mode

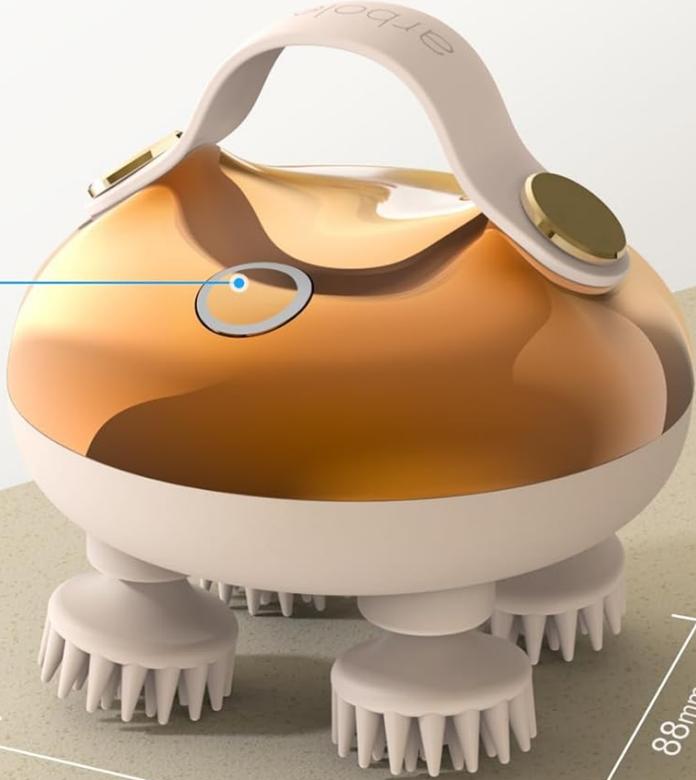

66mm

88mm

88mm

**Mode 1**

Purple light-Slow Mode

**Mode 2**


Blue light-Fast Mode

**Mode 2**

Yellow light-Auto Switch Between  
Fast and Slow Mode

Image: Diagram illustrating the one-button control and different massage modes indicated by light colors.

# Red Light Care, Deep Scalp Nourishment

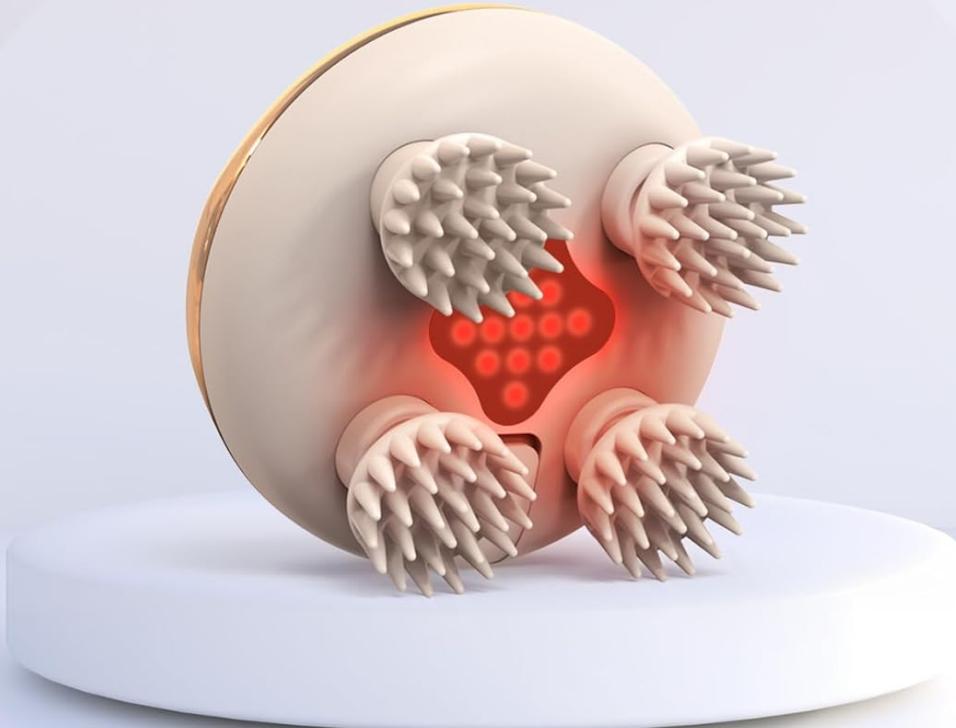

stimulate scalp viability

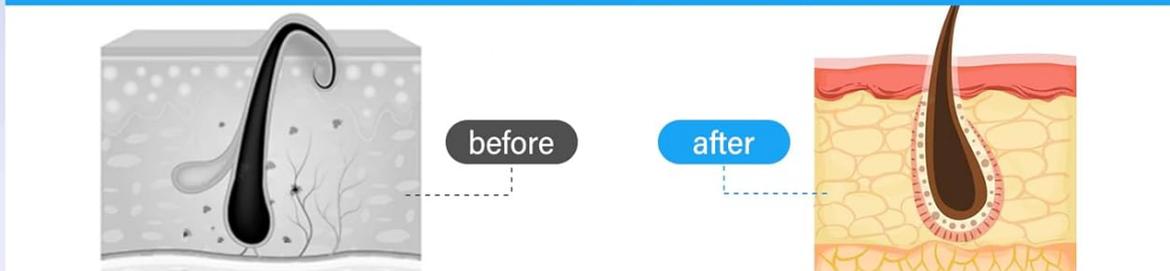


Image: The red light function of the massager for scalp care and nourishment.

## 4. Application

Gently place the massage heads on your scalp or other desired body areas. Move the massager slowly to cover the entire area. The 360° kneading massage provides a deep and relaxing experience. The device will automatically shut off after ten minutes of continuous operation to prevent overuse and conserve battery.

# IPX7 Waterproof

Dry & Wet Dual Use

Perfect use in the shower and bath



Image: The arboleaf massager being used in the shower, highlighting its IPX7 waterproof feature.

# Handheld Massager, Full Body Massager



Image: Demonstrating the versatility of the massager for use on different body parts and even pets.

## MAINTENANCE

### Cleaning the Device

Due to its IPX7 waterproof rating, the massager can be easily cleaned. After each use, especially if used with shampoo or conditioner, rinse the massage heads and the main body under running water. Use a soft cloth to wipe the device dry. Ensure the charging port cover is securely closed during cleaning. Do not use abrasive cleaners or immerse the device in water for extended periods.

## TROUBLESHOOTING

- **Device does not turn on:** Ensure the device is fully charged. Connect it to the USB charging cable and allow it to charge for at least 30 minutes before attempting to power on again.
- **Massage heads stop rotating:** Check if the battery is low. Recharge the device. If the issue persists, ensure no hair or debris is obstructing the massage heads.

- **Red light not activating:** Double-check the operating instructions for activating/deactivating the red light mode. Ensure the device is powered on.
- **Device shuts off unexpectedly:** The device has an automatic shut-off feature after 10 minutes of continuous use. This is normal operation. If it shuts off before 10 minutes, check the battery level.

If you encounter any issues not listed here, please refer to the Support section for assistance.

## SPECIFICATIONS

Model Number	CM11B
Brand	arboleaf
Dimensions (L x W x H)	8.8 x 8.8 x 6.6 cm
Weight	290 grams
Material	Silicone
Power Source	Battery powered (1 Lithium-polymer, included)
Charging Time	Approx. 2 hours
Operating Time	Up to 80 minutes
Waterproof Rating	IPX7
Massage Modes	3 (Slow, Fast, Variable)
Special Features	Red Light Care, Automatic 10-minute shut-off
Country of Origin	China

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official arboleaf website. You may also contact arboleaf customer service directly for assistance.

**arboleaf Official Website:** [www.arboleaf.com](http://www.arboleaf.com)