

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [onerbl](#) /

› [onerbl 12V AC/DC Adapter User Manual](#)

onerbl LP-ALVRD-BLK

onerbl 12V AC/DC Adapter User Manual

Model: LP-ALVRD-BLK

1. INTRODUCTION

This user manual provides essential information for the safe and effective use of your onerbl 12V AC/DC Adapter. This adapter is designed as a high-quality replacement power supply for devices requiring 12VDC 2A (2000mA) power, such as the Lifepro AllevaRed LP-ALVRD-BLK Red Light Therapy Cloth Wrap Belt. Please read this manual thoroughly before use and retain it for future reference.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Ensure the adapter's voltage and current output (12VDC, 2A) match the requirements of your device. Using an incompatible adapter may damage your device.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not disassemble or attempt to repair the adapter. Refer all servicing to qualified personnel.
- Unplug the adapter from the power outlet when not in use or during electrical storms.
- Keep out of reach of children.
- The adapter features built-in **Over Voltage Protection**, **Over Heat Protection**, and **Short-Circuit Protection** to safeguard your devices.

SMART CHIP



Guard Your Electricity Safety



short-circuit
protection



over-voltage
protection



over-current
protection

Multiple Protection

Image: The adapter incorporates a smart chip for multiple protections, including short-circuit, over-voltage, and over-current protection, ensuring electrical safety.

3. PRODUCT OVERVIEW

The onerbl 12V AC/DC Adapter is a compact and durable power supply unit. It consists of the main adapter body with integrated AC prongs and an attached DC output cable with a barrel connector.




Image: Front view of the onerbl 12V AC/DC Adapter, showing the main body, AC prongs, and the coiled DC output cable with its barrel

connector.



Image: Two views of the adapter, showcasing its front face with specifications and a side profile, highlighting its compact design.

QUALITY CONTROL

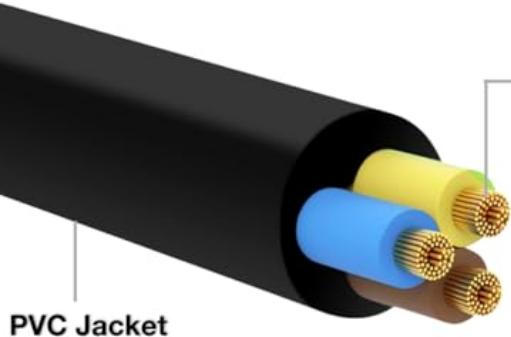

DURABLE DESIGN

Image: Illustration demonstrating the durable design of the adapter, including a cross-section of the copper wire and PVC jacket for enhanced quality and longevity.

4. SETUP

Setting up your onerbl 12V AC/DC Adapter is straightforward:

1. Verify Compatibility: Before connecting, ensure your device requires a 12V DC input and a current of 2A (2000mA) or less. Check your device's specifications or original power adapter.
2. Connect to Device: Insert the barrel connector of the adapter's DC output cable firmly into the power input port of your device (e.g., Lifepro AllevaRed LP-ALVRD-BLK).
3. Connect to Power Outlet: Plug the AC prongs of the adapter into a standard AC 100-240V 50/60Hz wall power outlet.
4. Power On: Once connected, your device should receive power. Refer to your device's manual for specific power-on procedures.



Image: The adapter connected to a device, demonstrating a typical setup scenario on a desk, providing power to the connected unit.

5. OPERATING INSTRUCTIONS

The onerbl 12V AC/DC Adapter operates automatically once connected to a power source and a compatible device. It provides a stable power supply for continuous operation.

- The adapter is designed for continuous use within its specified operating parameters.
- It automatically adjusts to worldwide AC input voltages (100-240V, 50/60Hz).
- No user intervention is required for power conversion or regulation.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your adapter:

- Cleaning: Disconnect the adapter from the power outlet and your device before cleaning. Use a soft, dry cloth to wipe the surface. Do not use liquid cleaners or aerosols.

- Storage: When not in use, store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- Inspection: Periodically inspect the adapter and cable for any signs of damage, such as frayed wires, bent prongs, or cracks in the casing. If damage is found, discontinue use immediately.

7. TROUBLESHOOTING

If you encounter issues with your adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not powering on.	Adapter not fully plugged in. Power outlet is not active. Device power input port is faulty. Adapter is faulty. Device requires more power than 2A.	Ensure adapter is securely plugged into both the wall outlet and the device. Test the outlet with another device. Try the adapter with another compatible device. Verify device power requirements.
Adapter feels hot.	Normal operation (slight warmth). Overload or short circuit. Poor ventilation.	A slight warmth is normal. Disconnect immediately if excessively hot. Ensure device is compatible. Ensure adapter is in a well-ventilated area.
Intermittent power.	Loose connection. Damaged cable or connector.	Check all connections. Inspect cable and connector for damage. Replace if damaged.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model	LP-ALVRD-BLK (Replacement Adapter)
Input Voltage	AC 100-240V, 50/60Hz
Output Voltage	DC 12V
Output Current	2A (2000mA)
Connector Type	Barrel Connector (standard DC plug for Lifepro AllevaRed)
Cable Length	Approx. 76 inches (6.3 feet)
Dimensions (Adapter Body)	Approx. 2.6 inches (L) x 1.6 inches (W) x 1.2 inches (H)
Weight	8 ounces
Protections	Over Voltage Protection, Over Heat Protection, Short Circuit Protection
Manufacturer	Shenzhen Waweis Technology Co., Ltd



Image: Visual representation of the adapter's dimensions (2.6 x 1.6 x 1.2 inches) and the cable length (76 inches).

EXTENDED CORD DESIGN

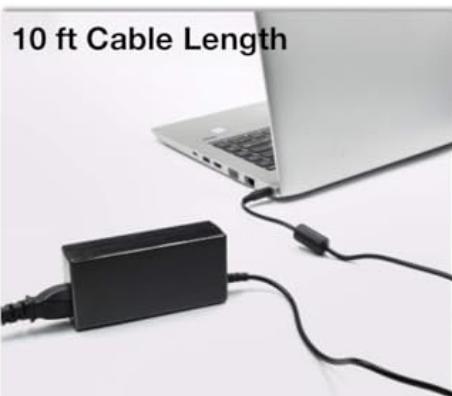


Image: Comparison showing the extended cord design, highlighting the practical length for various setups.

9. WARRANTY AND SUPPORT

This product comes with a standard return policy. For specific warranty details and customer support, please refer to the seller's information on the purchase platform or contact the manufacturer directly.

- **Return Policy:** Typically 30 days from purchase for refund/replacement.
- **Manufacturer:** Shenzhen Waweis Technology Co., Ltd
- For technical assistance or warranty claims, please contact the seller "GreatComputerParts" via the Amazon messaging system.





© 2024 onerbl. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - LP-ALVRD-BLK

	<p>Lifepro AllevaRed Light Therapy Belt User Manual</p> <p>Comprehensive user manual for the Lifepro AllevaRed Light Therapy Belt, detailing features, setup, operating instructions, safety precautions, and troubleshooting. Learn how to use red and near-infrared light therapy for pain relief, inflammation reduction, skin rejuvenation, and muscle recovery.</p>
-------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

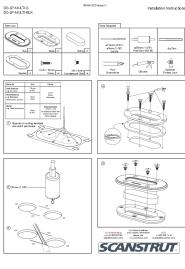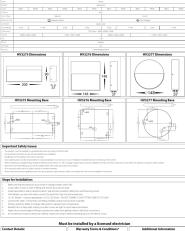	<p>Lifepro Legra Hand Massager User Manual</p> <p>Comprehensive user manual for the Lifepro Legra Hand Massager, detailing its features, operation, safety instructions, and troubleshooting tips for effective hand and wrist therapy.</p>
	<p>Scanstrut Low-Profile Multi Cable Seal Installation Instructions</p> <p>Detailed installation guide for the Scanstrut Low-Profile Multi Cable Seal (DS-LP-MULTI-S and DS-LP-MULTI-BLK), covering parts, tools, and step-by-step assembly for a secure and watertight cable pass-through.</p>
	<p>HAVIT Virsma Step Light Installation Instructions</p> <p>Detailed installation guide for HAVIT Virsma step lights (models HV3275, HV3276, HV3277), covering product specifications, safety precautions, and step-by-step installation procedures.</p>
	<p>Starfire Designs Béton Natural Gas Conversion Kit Manual</p> <p>Comprehensive manual for converting Starfire Designs Béton fire pits from Liquid Propane (LP) to Natural Gas. Includes safety warnings, parts list, step-by-step installation instructions, pre-use checks, lighting procedures, and warranty information.</p>
	<p>Lifepro VibraAI Thermo Vibration Plate User Manual: Voice Control & Heat Function</p> <p>Your complete guide to the Lifepro VibraAI Thermo Vibration Plate. Learn how to use its advanced voice control and heat features for enhanced fitness, muscle recovery, and pain relief. Includes setup, operation, safety, and exercise tips.</p>