

[Manuals.plus](#) /

› [SANODESK](#) /

› SANODESK Standing Desk with Drawer User Manual

SANODESK EG8

SANODESK Standing Desk with Drawer User Manual

Model: EG8

Brand: SANODESK

1. INTRODUCTION

The SANODESK Standing Desk with Drawer is an electric height-adjustable home office desk designed for optimal comfort and productivity. It features a robust motor for smooth transitions between sitting and standing, integrated USB ports for convenient charging, and a spacious built-in drawer for organized storage. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure a seamless user experience.



Image: The SANODESK Standing Desk with Drawer, showcasing its sleek design and integrated drawer.

2. KEY FEATURES

- **Optimized For Work From Home:** Made with an industrial-grade steel frame and built-in electric motor lift mechanism, this standing desk can support up to 110lbs, and is perfectly designed for all types of work from home set-ups.
- **Electric Height Adjustment:** Switch from sitting to standing in seconds! Our standing desk features a robust motor that enables smooth, easy transitions from 28.3" to 47.6" (with 2.6" thickness of table top included) with the press of a button.
- **Embedded Multiple Functions:** Easily save multiple with four programmable height presets, a child lock button helps prevent accidental touch. Charge up to three devices with integrated USB ports (Type-C output: 5V2.4A/9V2A/12V1.5A; 2 Type-A output: 3.6-6.5V2.4A/6.5-9V2A/12V1.5A) without mess & hassle. (Note: USB ports may pause charging while adjusting desk height, Laptop charging is not supported).

- **Convenient Storage Drawer:** A convenient pull-out drawer embedded in the desktop provides seamless integrated storage space for your home office supplies. The modern design blends in perfectly with the rest of the structure while keeping your belongings out of sight and neatly put away!
- **Anti-Collision Function:** The desk is equipped with an anti-collision system to prevent damage to furniture or objects during height adjustments.

3. ASSEMBLY INSTRUCTIONS

Our innovative quick-install design lets you get up and running in less than 5 minutes! A factory-installed crossbeam greatly simplifies the setup process, freeing up time so you can get back to what matters most. Please follow these steps for assembly:

1. Unpack all components and ensure all parts are present according to the packing list.
2. Place the pre-assembled desktop upside down on a soft, clean surface to prevent scratches.
3. Attach the desk legs to the designated mounting points on the desktop using the provided screws and assembly tools.
4. Secure the feet to the bottom of the desk legs.
5. Carefully flip the desk upright.
6. Connect the power cable and organize any other cables using the integrated cable management features.

| ANTI-COLLISION FUNCTION

Prevent your furniture from damage



Image: Visual representation of the simple three-step assembly process.

4. OPERATING INSTRUCTIONS

The SANODESK Standing Desk features an intuitive control panel for easy height adjustment and memory presets.

4.1. Control Panel Overview

I INTEGRATED CONTROL PANEL



Image: Detailed view of the integrated control panel, showing the LED display, up/down buttons, four memory presets, and USB charging ports.

- **LED Display:** Shows the current desk height.
- **Up/Down Buttons:** Press and hold to adjust the desk height upwards or downwards.
- **Memory Presets (1, 2, 3, 4):** Press a numbered button to move the desk to a saved height. To save a height, adjust the desk to your desired position, then press and hold one of the numbered buttons until the LED display flashes or indicates the height is saved.
- **Child Lock Button:** Press to activate/deactivate the child lock, preventing accidental height adjustments.
- **USB Charging Ports:** Use the integrated Type-C and Type-A ports to charge compatible devices. Note: USB ports may pause charging while adjusting desk height. Laptop charging is not supported.

4.2. Anti-Collision Function

The desk is equipped with an anti-collision sensor. If the desk encounters an obstacle during height adjustment, it will automatically stop and reverse slightly to prevent damage. Ensure the area around the desk is clear before adjusting height.

| SIMPLE THREE-STEP ASSEMBLY

Pre-assembled desktop and frame



Image: Illustration of the anti-collision function, showing the desk stopping and reversing upon encountering an obstacle.

5. CARE AND MAINTENANCE

Proper care and maintenance will extend the life of your SANODESK Standing Desk.

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as they may damage the finish.
- **Motor Care:** The electric motor is designed for long-term use. Avoid overloading the desk beyond its maximum weight capacity (110 lbs).
- **Cable Management:** Periodically check and organize cables to prevent tangling or damage, especially when adjusting desk height.
- **Regular Inspection:** Check all screws and connections periodically to ensure they are secure. Tighten if necessary.

6. TROUBLESHOOTING

If you encounter any issues with your SANODESK Standing Desk, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected; Child lock activated; Overload.	Check power connection; Deactivate child lock; Reduce weight on desk.
Desk moves unevenly or makes unusual noise.	Loose connections; Obstruction; Uneven weight distribution.	Check and tighten all screws; Remove any obstructions; Redistribute weight evenly.
Height presets not working.	Presets not properly saved.	Re-save your desired height presets by adjusting the desk to the desired position and holding the numbered button until confirmed.
USB ports not charging.	Desk height adjustment in progress; Device incompatibility.	Wait for desk to stop moving; Ensure device is compatible (laptops not supported).

If the issue persists after attempting these solutions, please contact SANODESK customer support for further assistance.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	SANODESK
Model Number	EG8
Product Dimensions	24"D x 48"W x 47.6"H
Color	White
Style	Modern
Base Material	Alloy Steel
Top Material Type	Wood
Special Feature	Electric, Height Adjustable, Storage, USB Ports
Minimum Height	28.3 Inches
Maximum Height	47.6 Inches
Tabletop Thickness	2.6 Inches
Maximum Weight Recommendation	110 Pounds (Note: Specifications also list 121 Pounds, refer to product packaging for definitive weight limit)
Number of Drawers	1

Feature	Detail
Included Components	Assembly tools
UPC	810072838032

SPECIFICATIONS

Max load:110 lbs Sound<50 db

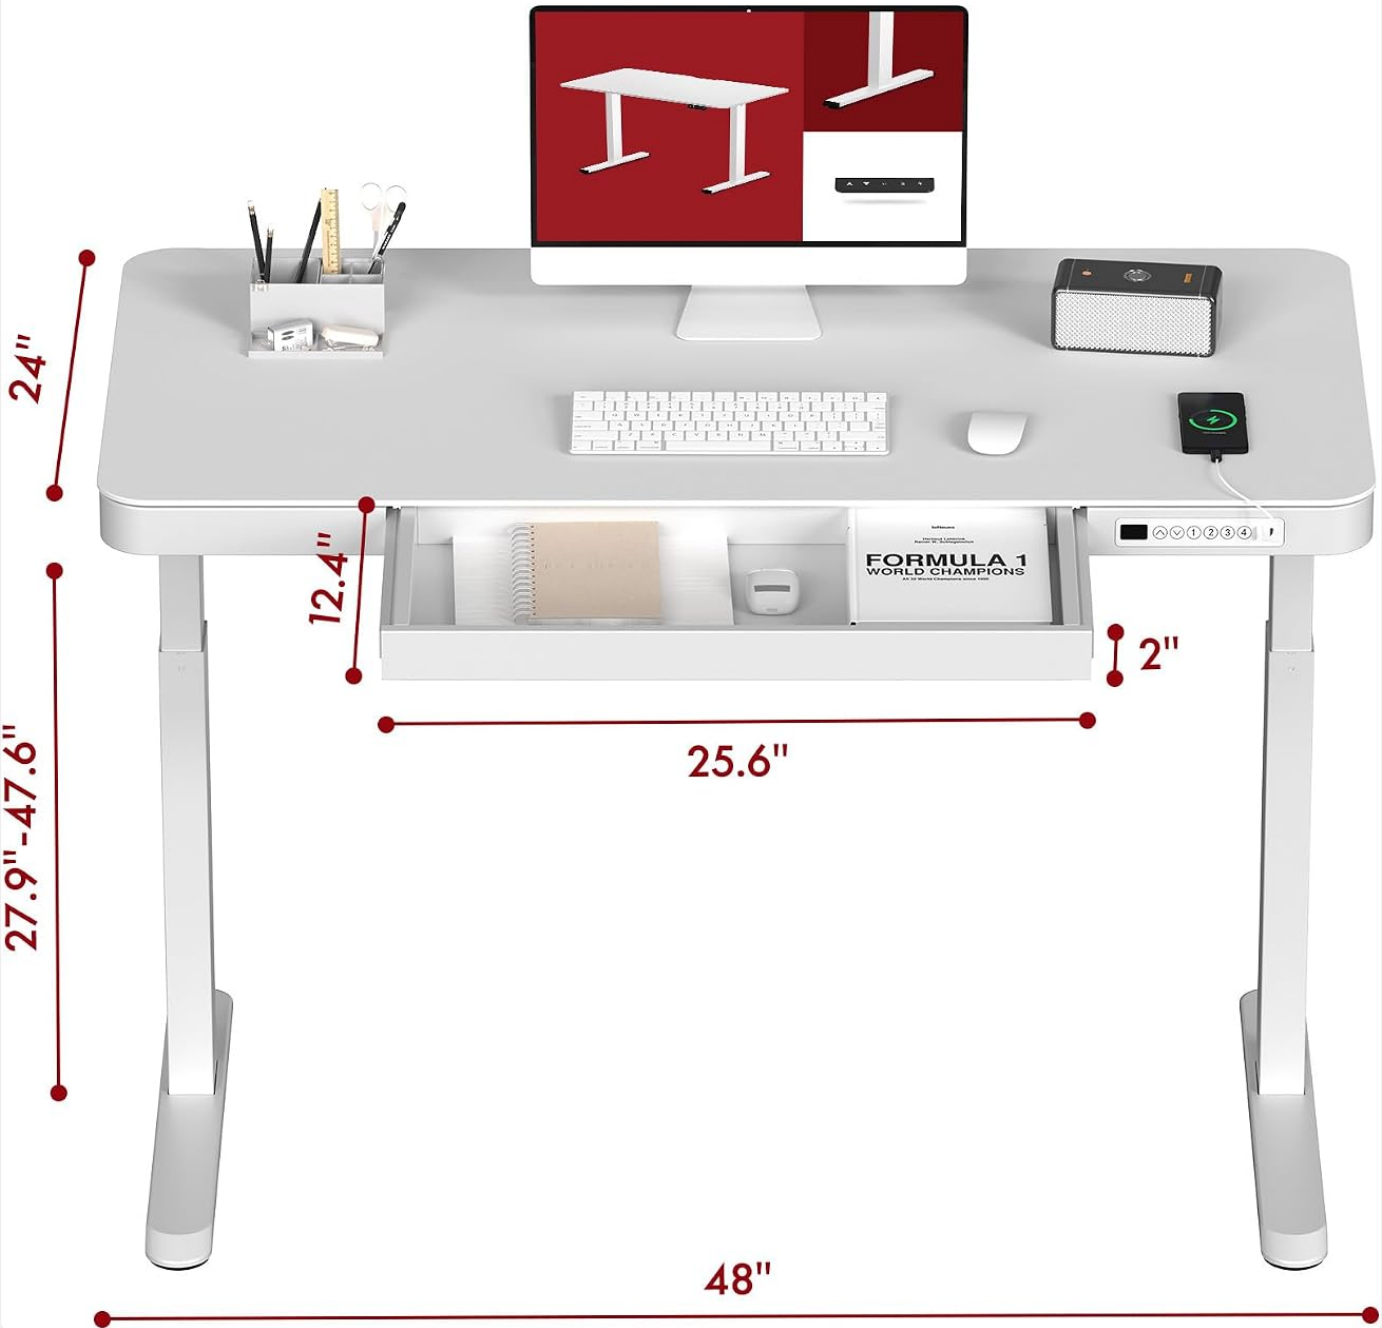


Image: Visual representation of key specifications including dimensions and maximum load.

8. WARRANTY AND SUPPORT

SANODESK is committed to providing high-quality products and customer satisfaction.

8.1. Warranty Information

Specific warranty details are typically provided with your product packaging. For detailed information regarding your product's warranty period and coverage, please refer to the documentation included in your purchase or contact SANODESK customer support.

8.2. Customer Support

For any questions, technical assistance, or warranty claims, please contact SANODESK customer support. You may also refer to the official Installation Manual (PDF) for additional guidance.

- **Seller:** SanoDesk
- **Official User Guide (PDF):** [Download Installation Manual](#)

© 2024 SANODESK. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question