

PetSafe PBC00-17758

PetSafe NanoBark Collar Instruction Manual

Model: PBC00-17758

1. INTRODUCTION AND OVERVIEW

The PetSafe NanoBark Collar is designed to help reduce excessive barking in small and medium dogs. It is the world's smallest, low-profile, and lightweight bark collar, offering a comfortable fit for your pet. Utilizing advanced technology, the collar learns your dog's unique bark pattern and automatically adjusts correction levels to effectively discourage nuisance barking.



Image 1.1: The PetSafe NanoBark Collar and its retail packaging.

Key Features:

- **Compact Design:** Remarkably low-profile, similar in size to a smartwatch, ensuring comfort for small and medium dogs.
- **Perfect Bark™ Technology:** Learns your dog's vocal pattern and automatically adjusts correction between 10 levels of static stimulation.
- **Adjustable Stimulation:** Features 10 auto-adjusting stimulus levels that respond exclusively to your dog's bark pattern.
- **Rechargeable Battery:** Lithium-ion battery provides up to 40 hours of life, depending on barking habits.
- **Waterproof Design:** Built to withstand splashes and outdoor use.
- **Suitable for Small & Medium Dogs:** Designed for dogs with neck sizes between 6 and 13 inches.

2. SETUP AND FITTING

2.1 Charging the Collar

Before initial use, fully charge the NanoBark Collar. Connect the provided USB charging cable to the collar's charging port and a compatible USB power source. The collar's indicator light will show charging status. A full charge can take approximately 2-3 hours.


2.2 Fitting the Collar

Proper fit is crucial for the NanoBark Collar to function effectively and safely. The collar should be snug enough for the contact points to touch your dog's skin, but not so tight as to cause discomfort or restrict breathing. Ensure the collar fits dogs with neck measurements between 6 and 13 inches.

1. **Measure Neck Girth:** Measure your dog's neck at the base, where the collar will sit. If you don't have a tape measure, you can use a string or leash and then measure it against a ruler.
2. **Position the Collar:** Place the collar on your dog's neck so that the PetSafe logo is centered under their chin and the contact points are positioned on either side of their windpipe.
3. **Adjust Snugly:** Adjust the strap so that you can comfortably fit one finger between the contact point and your dog's neck. The collar should not be loose, as this can lead to inconsistent correction or rubbing.
4. **Trim Excess Strap:** If the strap is too long, you may trim it after ensuring the correct fit. Use a lighter to singe the end of the nylon strap to prevent fraying.

Fits necks 6-13 inches

Measure at the base of your dog's neck

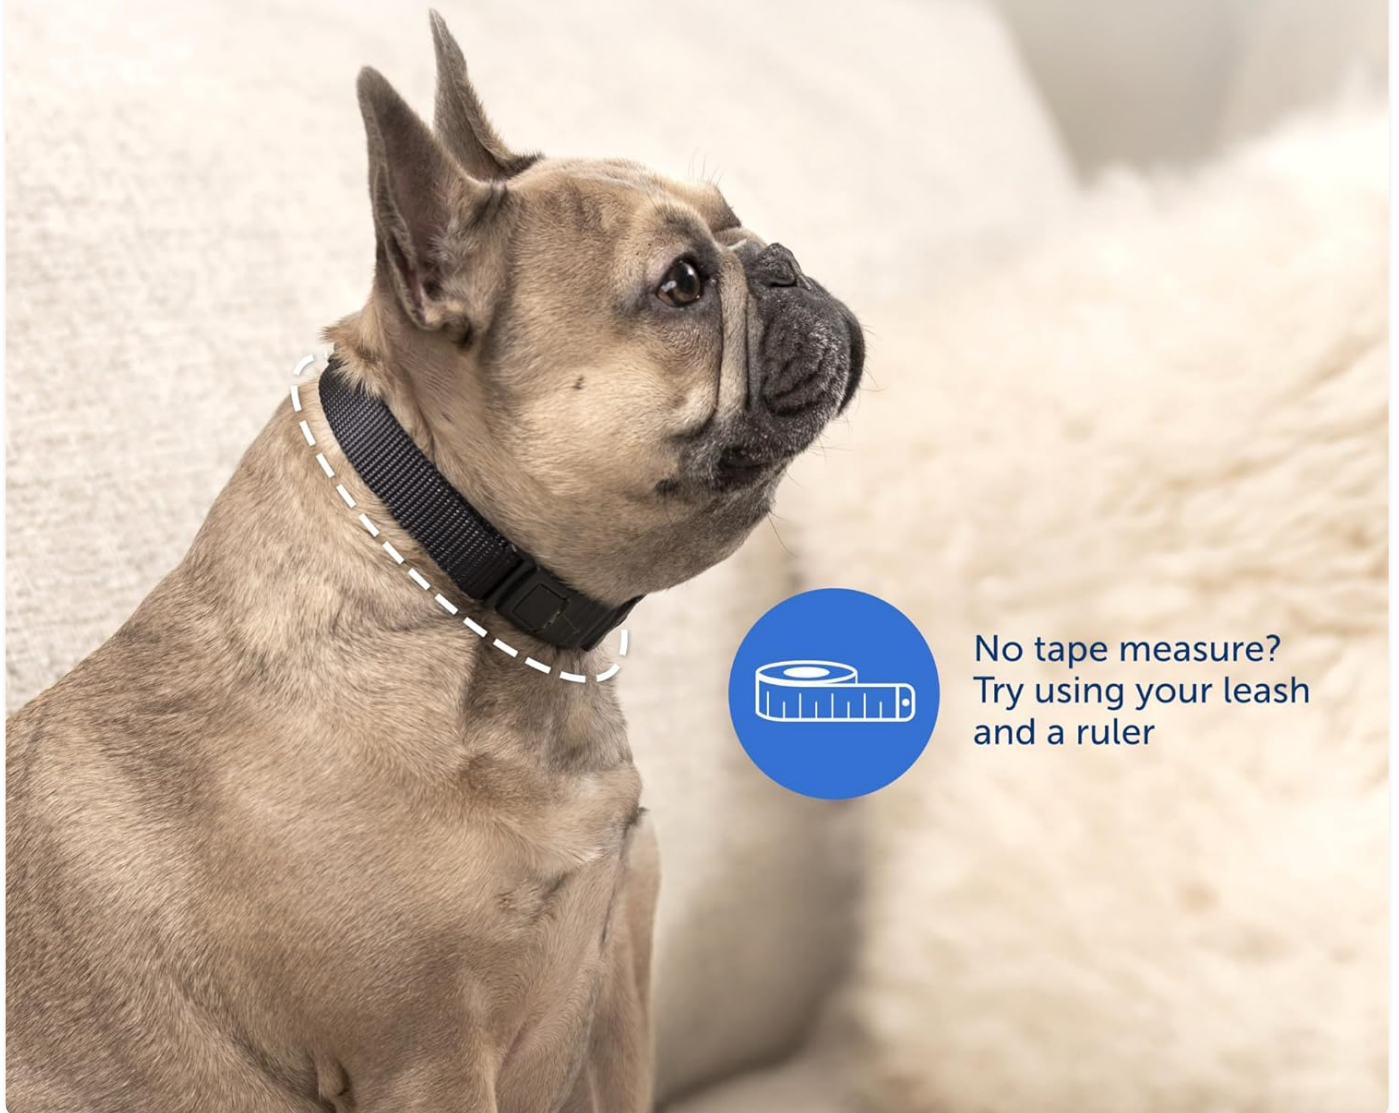

No tape measure?
Try using your leash
and a ruler

Image 2.1: Proper measurement and fitting of the NanoBark Collar.

NANOBARK™ COLLAR
FOR SMALL DOGS

The next-gen of bark control



10 auto-adjusting
stimulus levels



Magnetic
Charger



Slim profile



Patented
technology

Image 2.2: The NanoBark Collar is designed for small and medium dogs with neck sizes between 6-13 inches.

3. OPERATING THE NANOBARK COLLAR

3.1 How it Works

The NanoBark Collar uses PetSafe's proprietary Perfect Bark™ technology. This technology employs a unique sensor that detects both vibration from your dog's vocal cords and the sound of their bark. This dual-detection system ensures that only your dog's bark activates the correction, minimizing false corrections from other noises or other dogs.

Safely silences barks with Perfect Bark® technology



10 auto-adjusting stimulus levels respond exclusively to your dog's bark pattern

Image 3.1: The NanoBark Collar utilizes Perfect Bark™ technology for accurate bark detection.

3.2 Static Stimulation Levels

The collar features 10 levels of static stimulation. The system automatically adjusts the correction level based on your dog's barking habits. It starts at the lowest level and increases if barking continues, then resets to the lowest level after a period of quiet. This adaptive approach helps your dog learn to associate their barking with the correction.

For more information on PetSafe's correction types, you can refer to the general guide below:



Designed with small dogs in mind

Fits a variety of breeds with necks between 6-13"



No tape measure?
Try using your leash and a ruler

Image 3.2: Understanding various correction types offered by PetSafe.

3.3 Initial Training Period

It is recommended to introduce the collar gradually. Allow your dog to wear the collar for short periods without activation to get accustomed to it. Observe your dog's reaction to the collar's corrections. Most dogs show noticeable results in just 2 weeks.

World's smallest bark collar

Noticeable results in just 2 weeks



Image 3.3: The NanoBark Collar is designed for quick and effective results.

4. MAINTENANCE

To ensure the longevity and proper functioning of your PetSafe NanoBark Collar, follow these maintenance guidelines:

- **Regular Cleaning:** Clean the collar and contact points regularly with a damp cloth. Ensure no dirt or debris accumulates around the contact points, as this can interfere with proper operation.
- **Inspect for Wear:** Periodically check the collar strap for any signs of wear, fraying, or damage. Replace the strap if necessary.
- **Skin Health:** Regularly inspect your dog's neck area for any signs of irritation, redness, or sores. If irritation occurs, discontinue use and consult a veterinarian. Allow the skin to heal completely before resuming use.
- **Charging Port:** Keep the USB charging port clean and dry. Avoid exposing it to excessive moisture or dirt.
- **Storage:** When not in use for extended periods, store the collar in a dry, cool place.

5. TROUBLESHOOTING

If you encounter issues with your NanoBark Collar, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Collar not activating when dog barks	Improper fit; low battery; contact points not touching skin; collar not turned on.	Ensure collar is snug with contact points touching skin. Charge the battery. Turn the collar on.
Collar activates without dog barking (false corrections)	Collar too loose; external noises; other dogs barking nearby.	Tighten the collar slightly (one finger fit). Ensure the collar is detecting only your dog's barks.
Battery life is shorter than expected	Frequent barking; extreme temperatures.	Battery life can vary based on barking frequency. Ensure full charge before use. Avoid extreme temperatures.
Collar not charging	Faulty cable or power source; dirty charging port.	Try a different USB cable and power adapter. Clean the charging port.
Dog shows signs of skin irritation	Collar worn for too long; improper fit; allergic reaction.	Remove collar immediately. Consult a veterinarian. Ensure proper fit and do not leave on for more than 12 hours a day.

6. SPECIFICATIONS

- **Model Number:** PBC00-17758
- **Item Weight:** 6.4 ounces
- **Product Dimensions:** 9.1 x 9.1 x 9.1 inches (packaging/overall product dimensions)
- **Battery:** 1 Lithium Polymer battery (included)
- **Battery Life:** Up to 40 hours (depending on usage)
- **Neck Girth Compatibility:** 6 - 13 inches
- **Material:** Nylon (strap)
- **Color:** Black
- **Waterproof:** Yes
- **Included Components:** NanoBark™ Collar, Quick Start Guide, USB charging cable
- **Manufacturer:** Radio Systems Corporation

7. WARRANTY AND SUPPORT

The PetSafe NanoBark Collar comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For customer support, technical assistance, or warranty claims, please contact PetSafe's U.S.-based customer care team. They are available by phone, email, or chat to assist with any questions you may have regarding your product.

You can also find additional resources and information by scanning the QR code found on the product packaging or by visiting the official PetSafe website. A direct link to more information about the NanoBark Collar can be found here: [PetSafe NanoBark Collar Info](#)



Endorsed by
Vets & Trainers







US based
product experts



Trusted by pet
parents since 1998


Image 7.1: PetSafe's commitment to quality and support.

Related Documents

	PetSafe NanoBark Collar for Small Dogs: Quick Start Guide Learn how to set up, fit, charge, and use your PetSafe NanoBark collar for small dogs. This guide covers basic operation, troubleshooting, and important tips for effective bark control.
	PetSafe Lite Rechargeable Bark Collar & Rechargeable Bark Collar Product Manual Official product manual for PetSafe Lite Rechargeable Bark Collar (PBC00-16446) and Rechargeable Bark Collar (PBC00-15999). Learn about features, setup, fitting, operation, safety, troubleshooting, and warranty.
	PetSafe Anti-Bark Collar User Manual - PBC17-16635, PBC19-16636 This user manual provides detailed instructions for the PetSafe Anti-Bark Collar (models PBC17-16635 and PBC19-16636), covering setup, operation, safety precautions, fitting, testing, troubleshooting, and warranty information for effective bark control.
	PetSafe Spray Bark Collar PBC00-16368 Product Manual Comprehensive product manual for the PetSafe Spray Bark Collar (PBC00-16368). Learn about its features, setup, operation, safety precautions, maintenance, and troubleshooting to effectively manage nuisance barking in dogs.



Get Started!

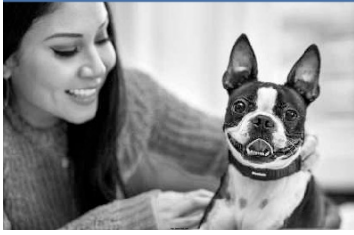

[PetSafe NanoBark Collar for Small Dogs: Quick Start Guide](#)

Learn how to set up, fit, charge, and use your PetSafe NanoBark collar for small dogs. This guide covers basic operation, troubleshooting, and important tips for effective bark control.

lang:en **score:47** filesize: 3.55 M page_count: 12 document date: 2023-10-31