

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Perlegear](#) /

› [Perlegear PGTVS29 Single Monitor Stand Instruction Manual](#)

## Perlegear PGTVS29

# Perlegear PGTVS29 Single Monitor Stand Instruction Manual

Model: PGTVS29

## INTRODUCTION

Thank you for choosing the Perlegear PGTVS29 Single Monitor Stand. This freestanding monitor mount is designed to enhance your workspace by providing versatile positioning for your 13-34 inch screens. With features like 360-degree rotation, 5 ergonomic height settings, and adjustable swivel and tilt, this stand offers optimal viewing flexibility and improved posture. Please read this manual carefully before installation and use to ensure safe and correct operation.

## IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly. If you do not understand these instructions or have doubts about the safety of the installation, please contact a qualified installer. Check for any missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose not explicitly specified in this manual.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 44 lbs (20 kg).
- **Screen Size:** Compatible with screens from 13 to 34 inches.
- **VESA Compatibility:** Supports VESA mounting patterns 50x50mm and 100x100mm. Verify your screen's VESA pattern before installation.
- **Stability:** Ensure the stand is placed on a stable, level surface to prevent tipping.
- **Children:** Keep children away from the assembly area. Small parts may be swallowed.

## PACKAGE CONTENTS

Please check that all components are included and undamaged. If any parts are missing or damaged, contact Perlegear customer support.

- Support Pillar (1)
- Tempered Glass Base (1)
- VESA Plate (1)
- Mounting Hardware Kit (screws, washers, spacers)

- Cable Clips (2)
- Assembly Tools (Allen key, screwdriver)
- Instruction Manual (1)

## SETUP AND INSTALLATION

Follow these steps to assemble your Perlegear PGTVS29 Monitor Stand.

### Step 1: Attaching the VESA Plate to Your Monitor

Determine the correct screws and spacers for your monitor's VESA mounting holes. For flat-back screens, use appropriate screws directly. For curved screens or screens with a bump, use spacers to ensure a secure fit. Attach the VESA plate to the back of your monitor.



**Image:** VESA compatibility details for Perlegear Monitor Stand. Shows VESA patterns 50x50mm, 75x75mm, 100x100mm, max load 44 lbs, and screen size 13"-34".

## Step 2: Connecting the Support Pillar to the Base

Attach the foot pads to the matte side of the tempered glass base. Secure the support pillar to the tempered glass base using the provided screws, steel washers, and plastic washers. Ensure plastic washers contact the glass to prevent damage.

## Step 3: Attaching the Monitor to the Support Pillar

Carefully lift your monitor (with the VESA plate attached) and slide it onto the support pillar. Secure the monitor to the support pillar using the knob on the VESA plate. Ensure it clicks into place securely.



**Image:** Illustration of the 5 ergonomic height settings for the monitor stand, ranging from a minimum of 9.27 inches to a maximum of 15.26 inches.

## Assembly Video Guide

Your browser does not support the video tag.

**Video:** Official Perlegear video demonstrating the assembly process and key features of the monitor stand, including attaching the VESA

plate, connecting the pillar to the base, and mounting the screen.

## OPERATING INSTRUCTIONS

The Perlegear PGTVS29 Monitor Stand offers multiple adjustment options to customize your viewing experience.

### Height Adjustment

The monitor stand features 5 height settings, allowing you to adjust your screen from 9.27 inches to 15.26 inches tall. To adjust the height, loosen the knob on the support pillar, slide the monitor to your desired height, and then re-tighten the knob to secure it.

### Tilt Adjustment

Adjust the screen tilt from  $-15^\circ$  to  $+10^\circ$  using the convenient tilt knob located on the VESA plate. Loosen the knob, adjust the screen to your preferred angle, and then tighten the knob to lock it in place.



**Image:** Demonstrates the tilt adjustment feature of the monitor stand, allowing movement from  $-15$  degrees to  $+10$  degrees using a tilt

knob.

## Swivel Adjustment

The screen can be swiveled manually  $+-50^\circ$  for ultimate viewing flexibility. Only swivel the screen by the screen edges; do not press on the screen itself.



**Image:** Illustrates the screen swivel freedom of  $+-50$  degrees for the monitor stand.

## 360° Rotation

Rotate your screen a full 360° to switch between landscape and portrait orientations. This feature is compatible even with large 34-inch displays, though off-centered VESA patterns may affect perfect vertical orientation.


# 34" Screen Rotation



Others



PGTVS29

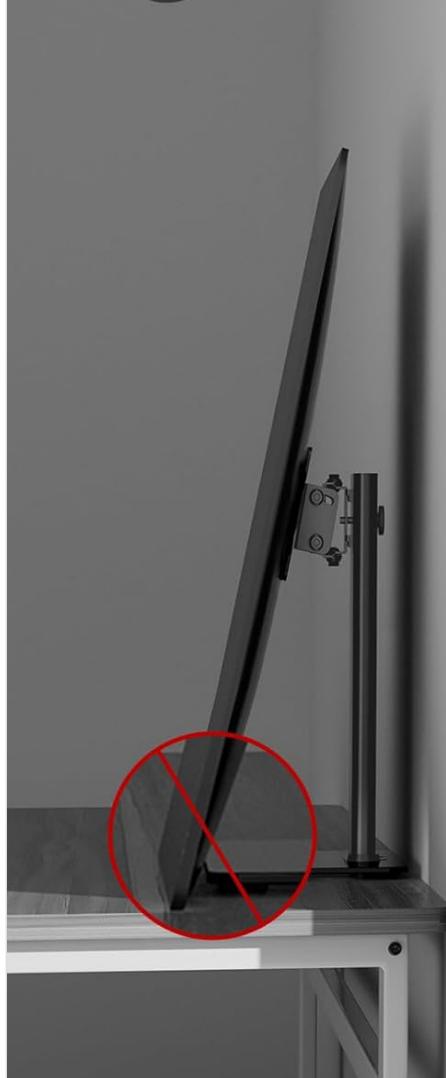

**Image:** Shows the 360-degree screen rotation capability of the PGTVS29 monitor stand, highlighting its ability to handle 34-inch screens.

## Cable Management

Utilize the two included cable clips to route cables neatly along the back of the support pillar. This helps maintain a clean and organized workspace.

# Easily Route Cables

Two Cable Clips Included



**Image:** Displays the cable management feature of the monitor stand, showing two cable clips used to route cables along the back of the pillar.

## MAINTENANCE

To ensure the longevity and optimal performance of your Perlegear PGTVS29 Monitor Stand, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the stand with a soft, damp cloth. Avoid using abrasive cleaners or solvents that may damage the finish.
- **Fasteners:** Periodically check all screws and connections to ensure they remain tight and secure. Re-tighten if necessary.
- **Movement:** If any moving parts become stiff, apply a small amount of silicone-based lubricant to the joints.

## TROUBLESHOOTING

If you encounter any issues with your monitor stand, refer to the following common problems and solutions:

- **Monitor is wobbly:**

- Ensure all screws securing the monitor to the VESA plate and the pillar to the base are tightened.
- Verify the stand is on a flat, stable surface.

- **Monitor does not tilt/swivel/rotate smoothly:**

- Check if the tilt knob is sufficiently loosened before attempting to adjust.
- Apply a small amount of silicone lubricant to the moving joints if resistance persists.

- **Monitor cannot be mounted:**

- Confirm your monitor's VESA pattern matches the stand's compatibility (50x50mm or 100x100mm).
- Ensure your monitor's weight (max 44 lbs) and size (max 34 inches) are within the specified limits.
- Use the correct screws and spacers from the mounting hardware kit for your specific monitor.

If you are unable to resolve an issue, please contact our U.S.-based product support team for assistance.

## SPECIFICATIONS

Feature	Detail
Brand	Perlegear
Model Number	PGTVS29
Item Weight	4.95 pounds (2.25 kg)
Package Dimensions	17.65 x 9.02 x 2.8 inches
Color	Black
Material	Metal and Tempered Glass Base
Mounting Type	Tabletop Mount
Movement Type	Swivel
Compatible Screen Size	13-34 inches
Maximum Load Capacity	44 lbs (20 kg)
VESA Compatibility	50x50mm, 100x100mm
Height Settings	5 settings (9.27" to 15.26")
Tilt Adjustment	-15° to +10°
Swivel Adjustment	+/-50°
Rotation	360°

## WARRANTY AND SUPPORT

Perlegear stands behind the quality of its products. For specific warranty information, please refer to the product

packaging or contact Perlegear customer service. If you have any questions, require technical assistance, or need to report missing/damaged parts, please contact our U.S.-based product support team. Contact details can typically be found on the product packaging or the official Perlegear website.

© 2026 Perlegear. All rights reserved.