

nutribullet NB50500

nutribullet Ultra Personal Blender User Manual

Model: NB50500

INTRODUCTION

Thank you for choosing the nutribullet Ultra Personal Blender. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. The nutribullet Ultra is designed to simplify your blending experience with its powerful motor, durable components, and intuitive design.

Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

When using any electrical appliance, basic safety precautions should always be observed. Failure to do so may result in serious injury or damage to the appliance.

- Always unplug the blender from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Avoid contact with moving parts. Never place hands or utensils inside the blending cup while the motor is operating.
- Ensure the blade is securely attached to the cup before placing it on the motor base.
- Do not blend hot liquids as pressure buildup can cause the cup to burst, resulting in injury. Allow hot ingredients to cool before blending.
- Do not overfill the blending cups. Always ensure ingredients are below the MAX line.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep out of reach of children. Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- Use only nutribullet authorized accessories and replacement parts.

WHAT'S INCLUDED

Your nutribullet Ultra Personal Blender package includes the following components:

What's Included:




Motor Base



24oz Cup



Rapid Extractor Blade

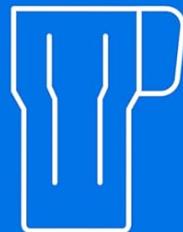

24oz Handled Cup



32oz Cup



2 To-Go Lids

nutribullet.

This diagram illustrates the various parts included with your nutribullet Ultra Personal Blender, ensuring you have all necessary components for operation.

- 1200-Watt Motor Base
- Rapid Extractor Blade
- 32 oz Cup (made with Tritan Renew)
- 24 oz Cup (made with Tritan Renew)
- 24 oz Handled Cup (made with Tritan Renew)
- (2) To-Go Lids
- Recipe Guide
- User Guide (this manual)

SETUP

1. **Unpack Components:** Carefully remove all components from the packaging.

- Initial Cleaning:** Before first use, wash all cups, lids, and the Rapid Extractor Blade in warm, soapy water. Rinse thoroughly and dry. The cups and lids are top-rack dishwasher-safe. Do not immerse the motor base in water. Wipe the motor base with a clean, damp cloth.
- Placement:** Place the motor base on a clean, dry, and level surface. Ensure there is adequate ventilation around the unit.



The nutribullet Ultra blender assembled with various cups, ready for use. This image shows the sleek design and multiple cup options.

OPERATING INSTRUCTIONS

Assembly and Blending

- Add Ingredients:** Fill a nutribullet cup with your desired ingredients. Ensure ingredients do not exceed the MAX fill

line. For best results, add liquids first, then soft ingredients, and finally harder ingredients or ice.

2. **Attach Blade:** Screw the Rapid Extractor Blade onto the open end of the cup until it is tightly sealed.
3. **Place on Motor Base:** Invert the cup and blade assembly and place it onto the motor base. Align the tabs on the cup with the slots on the motor base.
4. **Activate Blending:**
 - **Automated Smoothie Cycle:** Press the large circular button on the illuminated touch interface. The blender will run for an optimized blending cycle and automatically shut off.
 - **Pulse Function:** Press the smaller, dotted circular button for hands-on control. Release the button to stop blending. This is ideal for chopping or creating chunkier textures.



The intuitive glow interface of the nutribullet Ultra, showing the two blending options: automated cycle and pulse.

5. **Remove Cup:** Once blending is complete, lift the cup assembly straight up from the motor base.
6. **Enjoy:** Unscrew the blade from the cup. You can attach a To-Go Lid for portability or pour your creation into another container.

Tips for Optimal Blending

- If blending thick mixtures, you may need to pulse the blender or add more liquid to achieve desired consistency.
- For frozen fruits or ice, ensure there is enough liquid to allow proper circulation.
- Do not run the blender continuously for more than 1 minute. If blending for longer, allow the motor to cool down for a few minutes before resuming.

**Create
smoothies,
shakes, dips,
dressings,
and beyond.**

nutribullet



The nutribullet Ultra can be used to create a variety of healthy preparations, from smoothies to dressings.

CARE AND MAINTENANCE

Cleaning

- **Motor Base:** Always unplug the motor base before cleaning. Wipe the motor base with a clean, damp cloth. Do not immerse it in water or any other liquid.
- **Cups and Lids:** The cups and To-Go Lids are top-rack dishwasher-safe. For manual cleaning, wash with warm, soapy water and rinse thoroughly.
- **Rapid Extractor Blade:** Wash the blade immediately after use to prevent food from drying on it. Hand wash with

warm, soapy water and a brush to clean around the blades. Rinse thoroughly. The blade is not dishwasher-safe.

**Cups and lids
are top-rack
dishwasher-safe
for convenient
cleanup.**



nutribullet.



nutribullet Ultra cups and lids are designed for easy cleaning, being top-rack dishwasher-safe.

Storage

Store the nutribullet Ultra in a clean, dry place. Ensure all parts are dry before storing. Do not store the appliance with the blade attached to the cup and placed on the motor base.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; cup/blade not properly assembled or seated; motor overload.	Ensure unit is plugged into a working outlet. Re-seat the cup and blade assembly firmly onto the motor base. Unplug, remove cup, allow motor to cool for 15 minutes, then try again. Reduce ingredients if overloaded.

Problem	Possible Cause	Solution
Leaking from the cup.	Blade not screwed on tightly; cup overfilled; damaged blade gasket.	Ensure the blade is screwed on tightly. Do not fill past the MAX line. Inspect blade gasket for damage; replace blade if necessary.
Ingredients not blending smoothly.	Too little liquid; too many hard ingredients; ingredients stuck.	Add more liquid. Reduce the amount of hard ingredients. Pulse the blender or remove the cup and shake gently to redistribute ingredients before resuming.
Loud noise or burning smell.	Motor overload; prolonged continuous operation.	Unplug immediately. Allow the motor to cool for at least 15 minutes. Reduce ingredients and/or liquid. Do not operate continuously for more than 1 minute. If problem persists, contact customer support.

SPECIFICATIONS

- **Model:** NB50500
- **Motor Power:** 1200 Watts
- **Voltage:** 120V
- **Product Dimensions:** 5"D x 4.75"W x 7.9"H (Motor Base)
- **Item Weight:** Approximately 10.1 pounds
- **Material:** BPA-Free Tritan Renew (cups), Stainless Steel/Titanium Coating (blade)
- **Special Features:** Dishwasher Safe (cups/lids), Illuminated Touch Interface

**Powerful
1200-watt
motor.**

1200
watts

nutribullet.



The nutribullet Ultra features a powerful 1200-watt motor for efficient blending.

Durable titanium-coated Rapid Extractor Blade.



nutribullet.



The Rapid Extractor Blade is titanium-coated for enhanced durability and blending performance.

WARRANTY AND SUPPORT

The nutribullet Ultra Personal Blender comes with a **5-Year Limited Warranty** on the Rapid Extractor Blade. For full warranty details and to register your product, please visit nutribullet.com/warranty.

For customer support, replacement parts, or any inquiries not covered in this manual, please visit the official nutribullet website or contact their customer service department.

**Each Rapid
Extractor Blade
is protected by
a 5-year Limited
Warranty.***

***For more information on the Rapid
Extractor Blade Limited Warranty,
visit: nutribullet.com/warranty**

nutribullet.





The Rapid Extractor Blade is backed by a 5-year limited warranty, ensuring long-term performance.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found with the required format (m3u8) or specific creator type for embedding in this manual. Please refer to the product page for any available video content.

© 2025 nutribullet. All rights reserved.

Related Documents

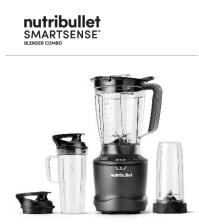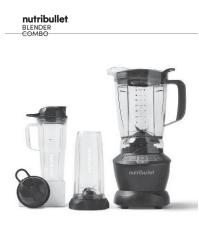	<p><u>Magic Bullet Quick Guide: Blend, Mix, and Create Healthy Recipes</u></p> <p>Discover the versatility of the Magic Bullet blender with this quick guide. Learn essential techniques, usage tips, and how to create delicious recipes for a healthier lifestyle.</p>
 User guide.	<p><u>NutriBullet SmartSense Blender Combo User Guide</u></p> <p>Comprehensive user guide for the NutriBullet SmartSense Blender Combo, covering important safeguards, assembly, operation, control panel functions, blending techniques, care, maintenance, and warranty information.</p>
 User guide.	<p><u>NutriBullet Blender Combo User Guide</u></p> <p>Comprehensive user guide for the NutriBullet Blender Combo, covering essential safety precautions, assembly instructions, operation details, care and maintenance tips, replacement parts information, and warranty details.</p>
 User guide.	<p><u>NutriBullet Blender Combo User Guide: Operation, Safety, and Maintenance</u></p> <p>Comprehensive user guide for the NutriBullet Blender Combo, covering essential safety precautions, assembly, operation, cleaning, and maintenance for optimal performance. Learn how to use your blender safely and effectively.</p>

Documents - nutribullet – NB50500

nutribullet.
Ultra



User guide.


⚠️ WARNING! To reduce the risk of serious injury, read the User guide before operating your nutribullet® Ultra. Save these instructions. Be sure anyone who uses the nutribullet® knows how to do so safely.

[\[pdf\] Instructions Guide](#)

User Guide nutribullet® Ultra NB50500 UG LowRes PROOF F230516 2023 08 22 dl nbmedia imgix net |||

User guide. WARNING To reduce the risk of serious injury, read the User guide before operating your ... e our products, therefore the specifications contained herein are subject to change without notice. **NB50500_230516** ...

lang:en **score:38** filesize: 503.05 K page_count: 17 document date: 2023-05-16

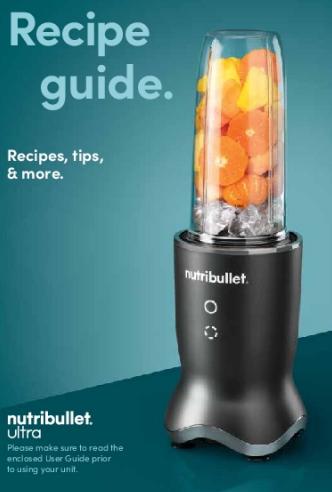

[\[pdf\] Guide](#)

Recipe Book nutribullet® Ultra NB50500 All Retail Guide LowRes PROOF F230522 2023 08 22 dl nbmedia imgix net |||

Recipe guide. Recipes, tips, more. Please make sure to read the enclosed User Guide prior to using ... roducts, therefore the specifications contained herein are subject to change without notice. 230522_ **NB50500** ...

lang:en **score:37** filesize: 1.24 M page_count: 31 document date: 2023-05-22

nutribullet.
Ultra



User guide.

⚠️ WARNING! To reduce the risk of serious injury, read the User guide before operating your nutribullet® Ultra. Save these instructions. Be sure anyone who uses the nutribullet® knows how to do so safely.

[\[pdf\] User Manual Owner's Manual Instructions Guide](#)

Owner Manual Nutribullet Ultra NutriBullet ntrb1074 8100979750NutriBullet NB50500SSnb50500 ultra seriesessecure img1 ag wfcdn dm document c895b321 e0ff 4268 9d73 045033cf3252 nb50500 series |||

User guide. WARNING To reduce the risk of serious injury, read the User guide before operating your ... e our products, therefore the specifications contained herein are subject to change without notice. **NB50500_240201** ...

lang:en **score:33** filesize: 811.03 K page_count: 17 document date: 2024-02-01

[pdf] Warranty

Warranty nutribullet® Ultra NB50500 WC EN LowRes PROOF F230511 2023 08 22 dl nbmedia imgix net

|||

product registration card. warranty coverage. 1-year limited warranty from the date of delivery of the product to the consumer.* This card is for product registration. Failure to complete product registration does not diminish the consumer's warranty rights. where to find your serial number. The p...

lang:en score:14 filesize: 55.79 K page_count: 1 document date: 2023-05-10

[pdf] Warranty

Discover the Power of nutribullet® Ultra Blender NB50500 Warranty EN Web 2025 11 03 dl nbmedia

imgix net |||

product registration card. warranty coverage. 1-year limited warranty from the date of delivery of the product to the consumer.* This card is for product registration. Failure to complete product registration does not diminish the consumer's warranty rights. where to find your serial number. The p...

lang:en score:14 filesize: 87.05 K page_count: 1 document date: 2024-01-19