

[Manuals.plus](#) /

> [Misolant](#) /

> Misolant Ergonomic Office Chair MI500-14 Instruction Manual

Misolant MI500-14

Misolant Ergonomic Office Chair MI500-14 Instruction Manual

Model: MI500-14 | Brand: Misolant

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Misolant Ergonomic Office Chair, model MI500-14. Please read these instructions carefully before use to ensure proper function and longevity of your chair.

SAFETY INFORMATION

Important:

- Ensure the chair is used by individuals weighing less than 300 pounds. The chair has passed BIFMA testing and is SGS certified for safety and durability within this weight limit.
- Always follow assembly instructions carefully to prevent injury or damage to the product.
- Keep small parts away from children during assembly.

COMPONENTS LIST

Before beginning assembly, verify that all components are present:

- Headrest: 1pc
- Armrest: 2pc
- Backrest: 1pc
- Seat Cushion: 1pc
- Chair Base: 5pc
- Base Plate: 1pc
- Gas Lift: 1pc

- Casters: 5pc
- Screws: 19pc
- Allen Wrench: 1pc
- Side Caps: 6pc

ASSEMBLY INSTRUCTIONS

Assembly typically takes approximately 20 minutes. An Allen wrench is included for your convenience.

1. **Attach Casters to Chair Base:** Insert each of the 5 casters into the openings at the end of the chair base legs. Ensure they are securely fitted.
2. **Install Gas Lift:** Place the gas lift cylinder into the center hole of the assembled chair base.
3. **Attach Base Plate to Seat Cushion:** Align the base plate with the pre-drilled holes on the underside of the seat cushion. Secure it using the provided screws and Allen wrench. Ensure the 'FRONT' indicator on the base plate aligns with the front of the seat cushion.
4. **Connect Backrest to Seat Cushion:** Attach the backrest to the seat cushion using the designated screws.
5. **Attach Armrests:** Secure the two armrests to the sides of the seat cushion and backrest using the provided screws.
6. **Install Headrest:** Insert the headrest into the top of the backrest and secure it.
7. **Connect Seat Assembly to Gas Lift:** Carefully place the assembled seat and backrest onto the gas lift cylinder, ensuring it is firmly seated.

Your browser does not support the video tag.

Video: Official Misolant MI500 Office Chair Display, demonstrating assembly and features.

OPERATING INSTRUCTIONS

Your Misolant Ergonomic Office Chair offers several adjustable features for personalized comfort:

- **Height Adjustment:** Use the lever located under the seat on the right side to adjust the chair's height. Pull the lever up while seated to lower the chair, or pull it up while standing to raise it.
- **Adjustable Headrest:** The headrest can be adjusted up and down by pulling it to your desired height. It also features a 45° recline function for neck support.

ADJUSTABLE HEADREST

Effectively support head and relax neck



Image: Adjustable headrest with lifting and reclining functions.

- **Flip-Up Armrests:** The armrests can be rotated 90 degrees upwards to save space or allow closer access to your desk.

FLIP UP ARMREST

Soft and Breathable Mesh
90° Adjustable Armrest

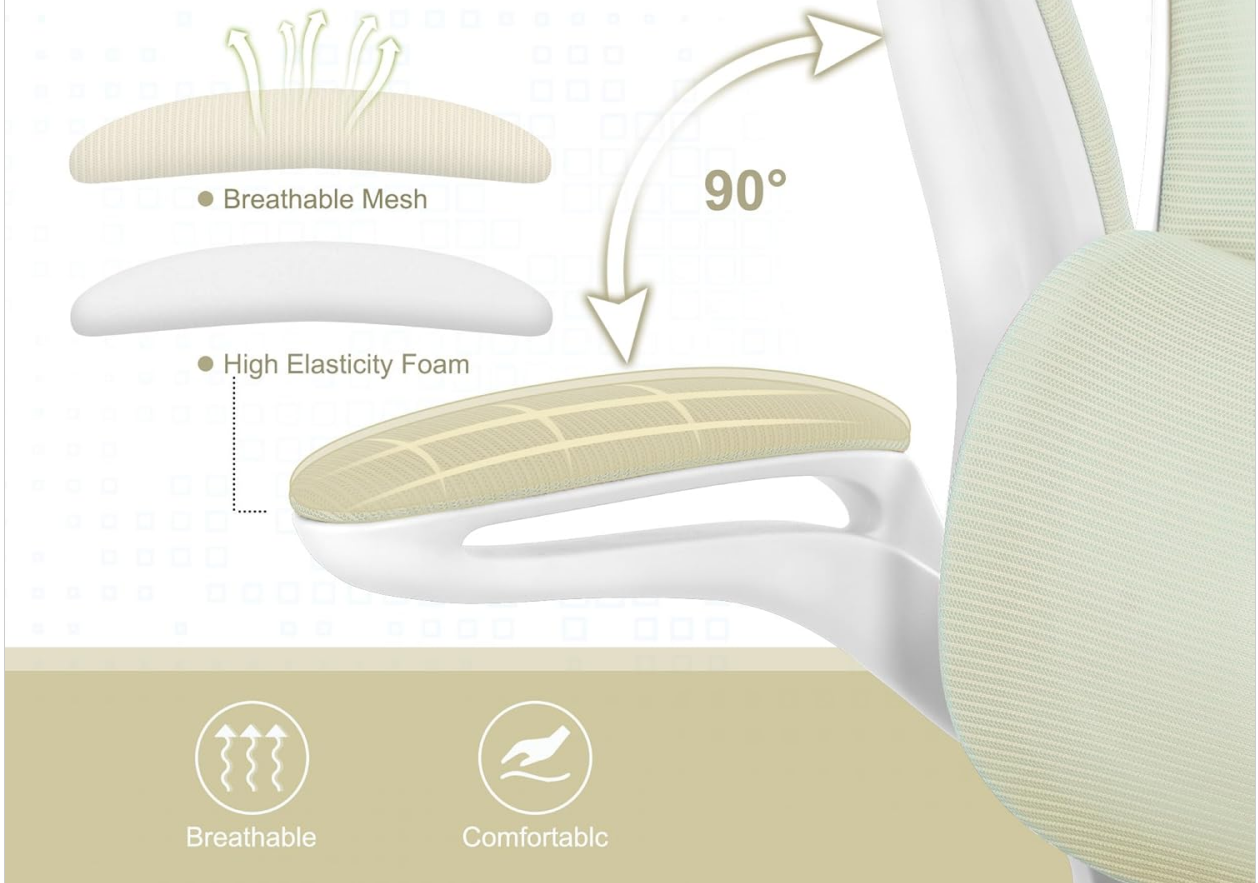


Image: Flip-up armrests for space-saving and flexibility.

- **Three Tilt Back Postures:** The chair offers three recline positions: 90° for work, 105° for relaxation, and 115° for napping. Use the adjustable handle and tilt tension knob under the seat to select and lock your preferred angle.



Image: Three back tilt angle adjustments for various activities.

- **Ergonomic Lumbar Support:** The double-back structure provides integrated support for the backrest and lumbar region, promoting proper posture and balancing pressure. The breathable mesh material enhances air circulation.

EFFECTIVELY SUPPORT BREATHABLE MESH



Breathable
Reduce the feeling
of stuffiness,
keep cool



Curved Surface
Fit the waist,
sedentary also
relaxed

Image: Ergonomic lumbar support and breathable mesh design.

- **360° Swivel:** The chair features 360° PU casters, allowing for smooth movement and rotation in any direction.

MAINTENANCE

To maintain the appearance and functionality of your Misolant Ergonomic Office Chair, wipe it clean with a damp cloth as needed. Avoid harsh chemicals or abrasive cleaners.

TROUBLESHOOTING

If you encounter any issues with your chair, please refer to the assembly instructions to ensure all parts are correctly installed. For further assistance, contact Misolant customer service.

SPECIFICATIONS

Feature	Specification
Brand	Misolant
Model Name	Ergonomic Office Chair
Item Model Number	MI500-14
Color	Beige
Product Dimensions	20.1"D x 25.2"W x 52.8"H
Item Weight	35.3 pounds
Maximum Weight Recommendation	300 Pounds
Material	Textile, Foam
Back Style	Mesh Back
Special Feature	Adjustable Headrest, Flip-up Armrests, 3-position Tilt Lock
Reclining Position Count	3
Product Care Instructions	Wipe Clean



Image: Product dimensions overview.

Misolant provides a one-year quality guarantee on this ergonomic desk chair. For any questions, needs, or replacement parts, please contact Misolant customer service. We are available 24/7 via email to assist you.