

[Manuals.plus](#) /

> [DICTAC](#) /

> DICTAC 31.5"x23.6" LED Bathroom Medicine Cabinet User Manual

DICTAC 31.5"x23.6"

DICTAC 31.5"x23.6" LED Bathroom Medicine Cabinet User Manual

Model: 31.5"x23.6"

1. INTRODUCTION

This manual provides essential instructions for the safe installation, operation, and maintenance of your DICTAC 31.5"x23.6" LED Bathroom Medicine Cabinet. Please read this manual thoroughly before installation and use, and retain it for future reference.

Safety Information

- Always unplug the cabinet before cleaning or performing any maintenance.
- Do not install the cabinet in areas with high humidity or direct contact with water to prevent electrical hazards.
- Use appropriate safety gear when installing the cabinet to avoid injuries from heavy lifting or sharp objects.
- Always follow the manufacturer's instructions for proper installation and use.

2. PRODUCT FEATURES

The DICTAC LED Bathroom Medicine Cabinet is designed with functionality and durability in mind. Key features include:

- **LED Illuminated Mirror:** Features 3-color temperatures (3000K Warm, 4500K Natural, 6500K Cold) and dimmable brightness with a memory function.
- **Built-in AC Charging Station:** Includes 2 AC outlets inside the cabinet for convenient charging of electric toothbrushes, shavers, and other small appliances.
- **Ample Storage:** Wall-mounted design with multi-layer storage space and adjustable glass shelves to accommodate various items.
- **Durable Construction:** Made from high-quality metal and glass, treated with varnish for excellent resistance to rust and corrosion.
- **IP44 Waterproof Rating:** Provides protection against moisture and water, suitable for humid bathroom environments.
- **Magnetic Lock:** Ensures the mirror doors remain securely closed.



Figure 2.1: DICTAC LED Bathroom Medicine Cabinet with illuminated mirrors.

3. SETUP AND INSTALLATION

The cabinet is designed for easy assembly and installation. Basic tools are included. Ensure you have adequate space and proper wall support before beginning installation.

3.1 Dimensions

Product Size |

W
31.5"

H
23.6"

D
4.3"

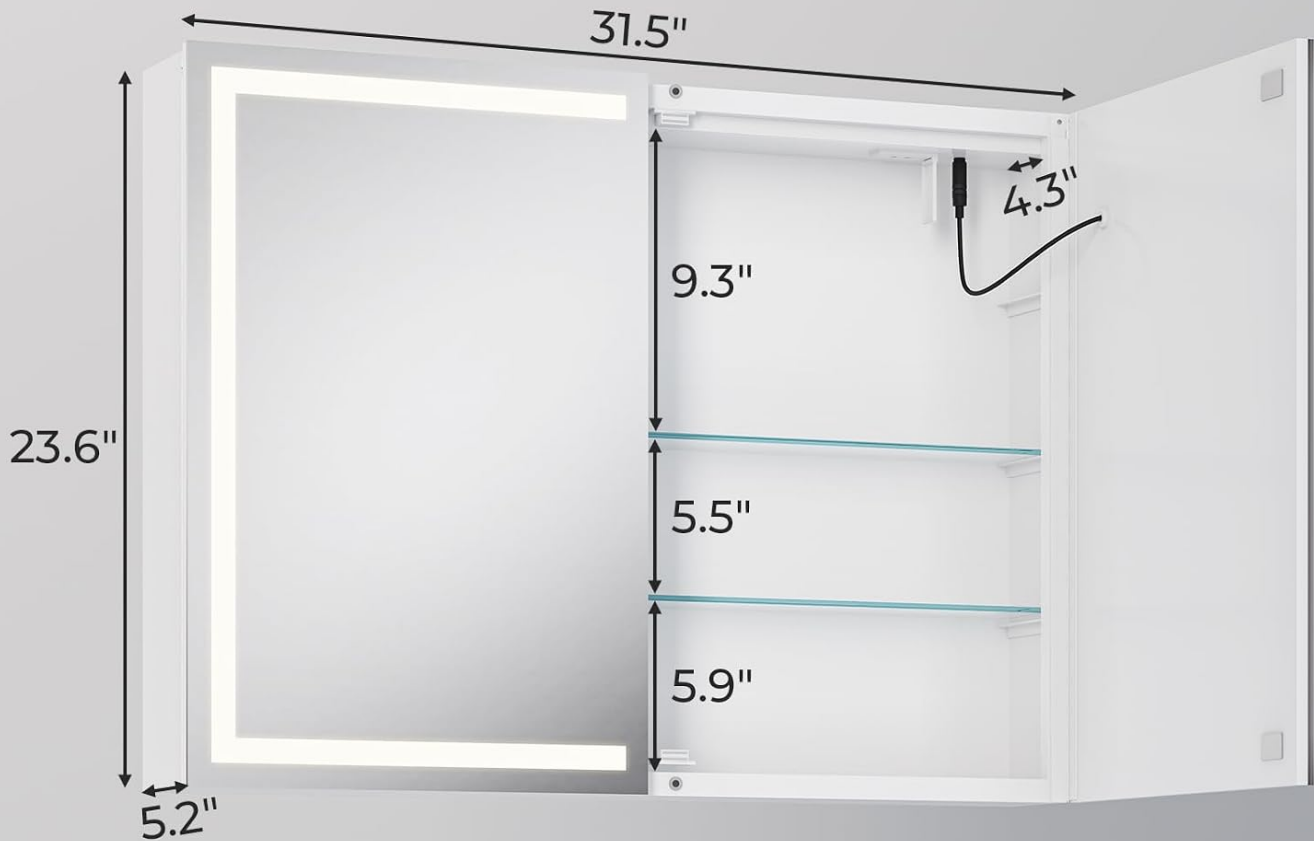


Figure 3.1: Detailed dimensions of the 31.5"x23.6" medicine cabinet.

3.2 Installation Methods

The medicine cabinet supports two primary installation methods: wall-mounted and recessed. Choose the method that best suits your bathroom design and wall structure.

Your browser does not support the video tag.

Video 3.1: Installation overview for the DICTAC Medicine Cabinet, demonstrating wall-mounted and recessed options.

3.3 Power Connection

The cabinet can be powered in two ways:

1. **Plug-in:** Directly plug the cabinet's power cord into a standard wall socket.
2. **Hardwired:** For a seamless look, the mirror power cable can be connected to a reserved wall cable. This requires professional electrical installation.



Figure 3.2: Illustration of plug-in and hardwired power connection methods.

4. OPERATING INSTRUCTIONS

4.1 LED Light Control

The LED lights are controlled via a touch switch located on the mirror surface.

- **Turn On/Off:** Single-click the touch switch to turn the lights on or off.
- **Change Color Temperature:** While the lights are on, single-click the touch switch to cycle through 3000K (Warm Light), 4500K (Natural Light), and 6500K (Cold Light).
- **Adjust Brightness:** Long-press the touch switch to adjust the brightness level. The memory function will retain your last brightness setting for the next use.

3 Farbtemperatur Dimmbare mit Touch-Schalter



Figure 4.1: Visual guide to controlling LED light color temperature and brightness.

4.2 Using the AC Charging Station

The cabinet includes two AC outlets inside for charging small electronic devices. Ensure the cabinet is properly powered before using the outlets.



Figure 4.2: Location of the built-in AC outlets for charging devices.

4.3 Adjusting Shelves

The glass shelves are adjustable to accommodate items of different heights. Carefully lift and reposition the shelves to your desired height.



Figure 4.3: Adjustable glass shelves for flexible storage.

5. MAINTENANCE

Regular cleaning and care will ensure the longevity and optimal appearance of your medicine cabinet.

- **Cleaning:** Always unplug the cabinet before cleaning. Wipe surfaces with a damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish or mirror.
- **Mirror Care:** Use a soft, lint-free cloth and a glass cleaner specifically designed for mirrors.
- **Electrical Components:** Ensure all electrical connections and outlets remain dry. Do not spray water directly onto the cabinet.

6. TROUBLESHOOTING

If you encounter any issues with your medicine cabinet, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
LED lights do not turn on.	No power supply; loose connection; faulty touch switch.	Check if the cabinet is plugged in or hardwired correctly. Ensure the power outlet is functional. Contact customer support if the issue persists.
Lights are not dimming or changing color.	Incorrect operation of touch switch.	Refer to Section 4.1 for correct touch switch operation (single-click for color, long-press for brightness).
AC outlets are not working.	No power supply to the cabinet; device not properly plugged in.	Verify the cabinet has power. Ensure devices are fully inserted into the outlets.
Mirror doors do not close securely.	Misaligned hinges; obstruction; damaged magnetic lock.	Check for any obstructions. Inspect hinges for proper alignment and adjust if necessary.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	DICTAC
Model Number	31.5"x23.6"
Dimensions (D x W x H)	5.11"D x 31.5"W x 23.62"H
Material	Metal, Glass
Color	White
Weight	37.48 Pounds
Number of Doors	2
Shelves	Adjustable Glass Shelves
LED Lights	3 Color Temperatures (3000K, 4500K, 6500K), Dimmable, Memory Function
Power Outlets	2 AC Outlets (AC125V, AC15A)
Protection Level	IP44 Bathroom Protection
Installation Type	Wall Mount
Assembly Required	Yes

8. WARRANTY AND SUPPORT

DICTAC stands behind the quality of its products. If you receive the LED Lighted bathroom medicine cabinet with mirror and encounter any problems, please do not hesitate to contact us. We are always here for you and offer the most satisfied solution.

For assistance, please refer to your purchase documentation or visit the official DICTAC website for contact information.

Your browser does not support the video tag.

Video 8.1: Product display video showcasing features and functionality.

© 2024 DICTAC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CFV1MD18>

More documents and user manuals: <https://manuals.plus/>