

Manuals.plus /

› GANPE /

› GANPE LED Lighted Bathroom Medicine Mirror Cabinet User Manual

GANPE GBC01

GANPE LED Lighted Bathroom Medicine Mirror Cabinet

Model: GBC01

User Manual

1. PRODUCT OVERVIEW

The GANPE LED Lighted Bathroom Medicine Mirror Cabinet is designed to enhance your bathroom experience with its multi-functional features. It combines a sleek mirror with practical storage, integrated lighting, and convenient power outlets. This manual provides detailed instructions for safe installation, operation, and maintenance of your new cabinet.



Figure 1.1: Overview of the GANPE LED Lighted Bathroom Medicine Mirror Cabinet installed in a bathroom setting.

2. SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, or injury to persons, read all instructions before installing the product.

- Always disconnect power at the circuit breaker before installation or servicing.
- Ensure the product is properly grounded.
- Do not install in areas with excessive humidity or direct water spray unless specifically rated for such conditions. This product has an IP44 waterproof rating, suitable for damp bathroom environments, but not direct water immersion.
- Handle glass components with care to prevent breakage and injury.
- Do not overload the integrated electrical outlets (sockets & USBs). Refer to specifications for maximum load.
- Keep children away from the installation area.
- If you are unsure about electrical wiring, consult a qualified electrician.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation.

- LED Lighted Medicine Mirror Cabinet (1 unit)
- Glass Shelves (2 units)
- Installation Cardboard Template (1 unit)
- Mounting Hardware (screws, anchors, hanging bracket)
- User Manual (this document)



Figure 3.1: Product packaging, ensuring safe delivery of the mirror cabinet.

4. SPECIFICATIONS

Feature	Specification
Brand	GANPE
Model Number	GBC01
Product Dimensions	5"D x 20"W x 28"H (5" depth, 20" width, 28" height)
Material	Aluminum Frame, Glass Shelves
Mounting Type	Wall Mount
Lighting Type	LED (Frontlit and Bottom Light)
Color Temperature	3500K (Warm White), 4000K (Natural Light), 6500K (Bright White)
Dimming	Stepless adjustment (10% to 100%)
Special Features	Anti-Fog, Sockets & USBs, Dimmable, Antirust, Mute Hinges, Light Memory Function, Bottom Light
Waterproof Rating	IP44
Number of Shelves	2 (Adjustable)
Storage Volume	7 Gallons
Item Weight	13 Kilograms (approx. 28.6 pounds)
UPC	749838296581

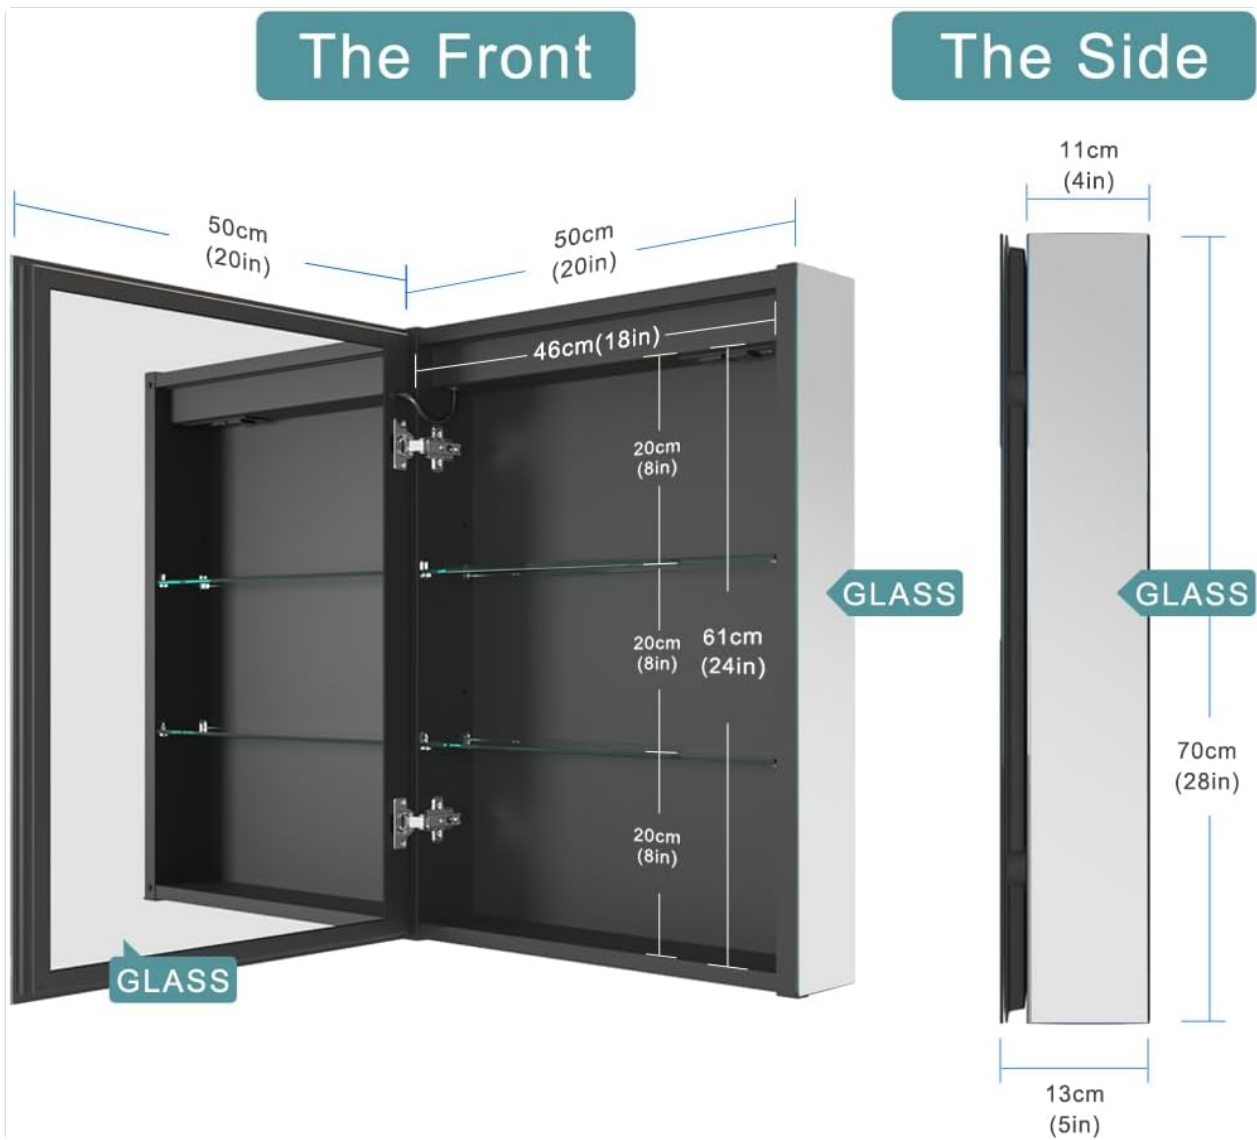


Figure 4.1: Detailed dimensions of the GANPE Medicine Cabinet.

5. SETUP AND INSTALLATION

The mirror cabinet comes fully assembled. Installation is designed to be straightforward with the provided template and hardware.

5.1 Pre-Installation Checklist

- Ensure power is OFF at the circuit breaker.
- Gather necessary tools: drill, level, measuring tape, pencil.
- Identify a suitable wall location, preferably with wall studs for secure mounting.

5.2 Mounting Instructions

1. **Positioning:** Use the provided installation cardboard template to mark the desired mounting height and position on the wall. Ensure it is level.
2. **Drilling:** Drill pilot holes at the marked locations. If mounting into drywall without studs, use appropriate wall anchors (included).
3. **Attach Hanging Bracket:** Secure the hanging bracket to the wall using the provided screws and anchors. Ensure it is firmly attached and level.
4. **Mount Cabinet:** Carefully lift the medicine cabinet and align its rear hanging mechanism with the

installed wall bracket. Gently lower the cabinet onto the bracket until it is securely seated.

5. **Electrical Connection:** The cabinet can be hardwired or connected via a wall plug. Ensure all electrical connections are made safely and according to local electrical codes. The cabinet features a reserved wire groove for neat installation.



Figure 5.1: Installation steps using the provided cardboard template and mounting hardware.

5.3 Shelf Installation

- The cabinet includes two removable glass shelves.
- Adjust the height of the shelves by placing the shelf clips into the desired slots inside the cabinet.
- Carefully place the glass shelves onto the clips.

MIRROR CABINET DETAILS



Figure 5.2: Interior view highlighting removable shelves and other cabinet details.

6. OPERATING INSTRUCTIONS

Your GANPE medicine cabinet features intuitive touch controls for lighting and anti-fog functions.

6.1 Lighting Control

- **Power On/Off:** Tap the power icon () on the mirror surface to turn the light on or off.
- **Color Temperature Adjustment:** Double-click the power icon to cycle through the three color temperatures:
 - Warm White (3500K)
 - Natural Light (4000K)
 - Bright White (6500K)
- **Brightness Dimming:** Long press the power icon to steplessly adjust the brightness from 10% to 100%. Release when the desired brightness is reached.
- **Memory Function:** The cabinet remembers your last used brightness and color temperature settings when turned off and on.



Figure 6.1: Demonstrating the color temperature and dimming features of the mirror light.

6.2 Anti-Fog Function

- **Activate Anti-Fog:** Tap the anti-fog icon (with steam symbol) on the mirror surface to activate the defogger.
- This feature helps to keep the mirror clear in steamy bathroom conditions.

ANTI-FOG
IP44 WATERPROOF



Figure 6.2: The anti-fog feature ensures a clear reflection even in humid conditions.

6.3 Integrated Sockets & USBs

- The cabinet includes internal power outlets and USB ports for charging small electronic devices like electric toothbrushes or shavers.
- These are located inside the cabinet for convenient and discreet charging.
- Do not use high-power appliances like hair dryers with these internal outlets.



Figure 6.3: Internal sockets and USB ports for convenient charging of small devices.

7. MAINTENANCE

7.1 Cleaning the Mirror and Cabinet

- For the mirror surface, use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray cleaner onto the cloth, not directly onto the mirror, to prevent liquid from seeping into the edges.
- For the aluminum frame and interior, wipe with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- Ensure the cabinet is dry after cleaning, especially around electrical components.

7.2 General Care

- Regularly check all mounting hardware to ensure the cabinet remains securely fastened to the wall.
- Avoid placing excessively heavy items on the glass shelves.
- The cabinet features mute hinges for quiet operation. Avoid forcing the door open or closed.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; loose connection; faulty switch.	Check circuit breaker. Ensure all wiring connections are secure. Tap the touch switch firmly.
Anti-fog function not working.	Anti-fog feature not activated; power issue.	Ensure the anti-fog icon is tapped to activate. Verify power supply to the unit.
Lights flicker or dim unexpectedly.	Unstable power supply; loose wiring.	Check electrical connections. Ensure stable power. If problem persists, consult an electrician.
Internal outlets not providing power.	No power to cabinet; overloaded circuit.	Ensure cabinet is powered on. Do not exceed maximum load for outlets. Try a different device.
Mirror surface is distorted.	Manufacturing defect (rare).	Contact customer support if distortion is significant and not due to external factors.

9. WARRANTY AND SUPPORT

GANPE is committed to providing high-quality products and excellent customer service.

- **Warranty:** This product comes with a 1-year warranty. Free replacement of parts is available for three years.
- **Customer Support:** For any questions during installation or use, please do not hesitate to contact us. We offer 24/7 email assistance.
- For more information about GANPE products and support, visit the official GANPE store: [GANPE Store](#).

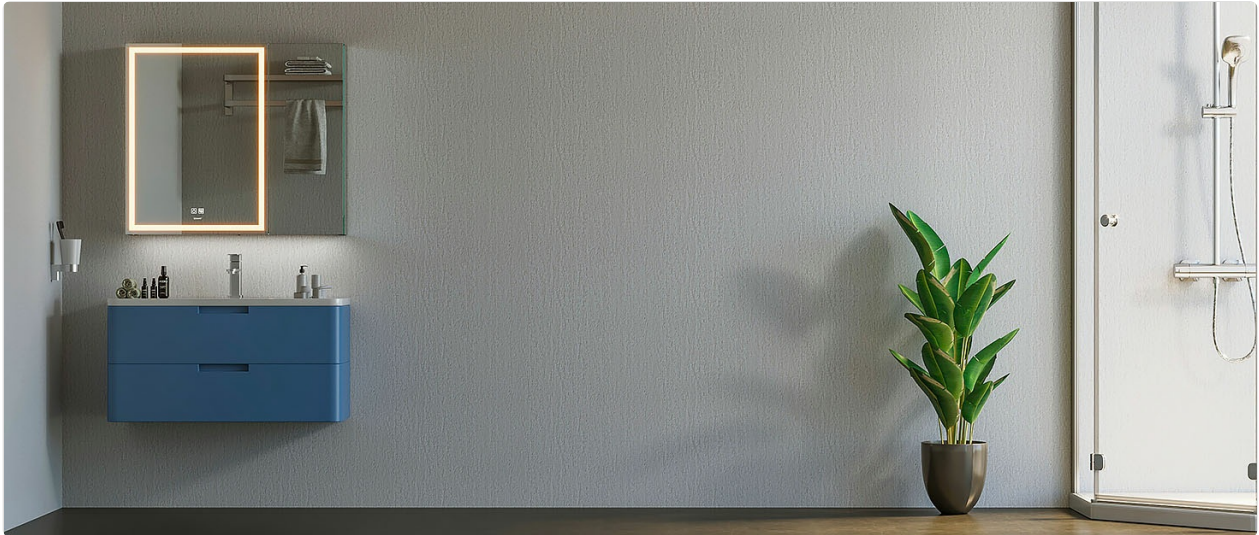


Figure 9.1: GANPE's commitment to quality and customer satisfaction.