Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > SMALLRIG /
- > SMALLRIG Teleprompter 3646 User Manual for iPad/Tablet (up to 11-inch)

SMALLRIG 3646

SMALLRIG Teleprompter 3646 User Manual for iPad/Tablet (up to 11-inch)

Model: 3646 | Brand: SMALLRIG

Setup Operation Maintenance Troubleshooting Specifications Support

Introduction

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your SMALLRIG Teleprompter Model 3646. This device is designed to assist with video recording and live broadcasting by displaying text for the presenter, ensuring direct eye contact with the camera. It is compatible with iPads and tablets up to 11 inches and requires a 15mm LWS baseplate for proper setup.



Image: The SMALLRIG Teleprompter 3646, showcasing the main unit, remote control, cleaning cloth, and carrying bag.

SETUP AND INSTALLATION

Follow these steps to correctly assemble and install your teleprompter. A 15mm LWS rod support system is required for stable mounting and to protect your camera's lens mount.

Required Components:

- SMALLRIG Teleprompter 3646
- 15mm LWS Rod Support System (e.g., SMALLRIG ID: 2092B / 3067, sold separately)
- Compatible iPad or tablet (up to 11 inches)
- Camera (DSLR, Mirrorless, or Camcorder)

Installation Steps:

1. **Install the Silicone Cover:** Attach the appropriate silicone cover to your camera lens. This cover supports lenses with diameters between 49mm and 95mm.

Installation Introduction



Install the silicone cover to the lens



Install the iPad stand and 15mm LWS support



Install the clamp-on back 95mm



Lock clamp-on back 95mm via the knob



Adjust the height with a knob



Hold down the button to extend the iPad stand further



Align the clamp-on back 95mm and mount the Matte Box



Adjust the angle of the top flag via the knob



Mount the iPad to the iPad stand

Image: A hand installing the silicone lens cover onto a camera lens.

2. **Assemble iPad Stand and 15mm LWS Support:** Connect the iPad stand to the 15mm LWS support system.

Presenting Captions in High Definition

Adjustable top flag and filter frame (no filter included) to prevent outdoor glares



Image: Components of the iPad stand and 15mm LWS support being connected.

3. Install the Clamp-on Back 95mm: Secure the clamp-on back (95mm) to the assembly.



Image: A hand installing the 95mm clamp-on back onto the teleprompter frame.

4. Lock Clamp-on Back: Use the knob to firmly lock the 95mm clamp-on back in place.



Image: A hand tightening a knob to secure the clamp-on back.

5. **Adjust Height:** Adjust the height of the teleprompter assembly using the designated knob to align with your camera lens.



Image: A hand adjusting a knob to change the vertical position of the teleprompter.

6. **Extend iPad Stand:** Press and hold the button to extend the iPad stand to its desired length.

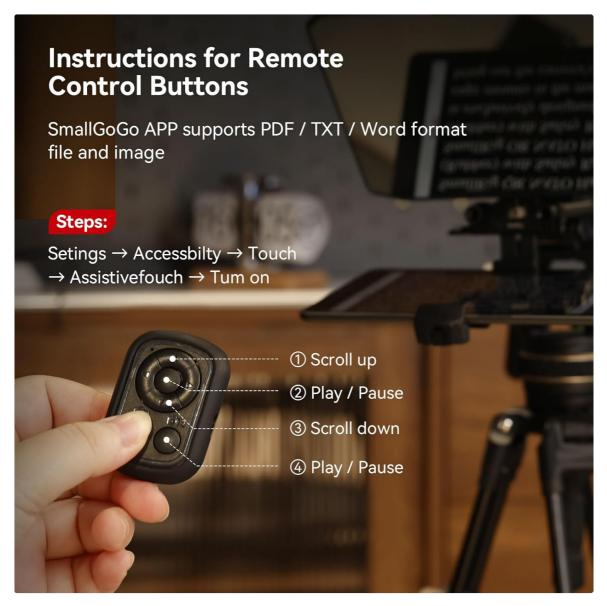


Image: A hand pressing a button to extend the iPad stand horizontally.

7. **Align and Mount Matte Box:** Align the clamp-on back (95mm) and mount the matte box onto the teleprompter.

Save More Time with the Updated APP

SmallGoGo APP offers a fast and precise text extraction feature, compatible with PDF, TXT, Word format files, and images, efficiently retrieve text content

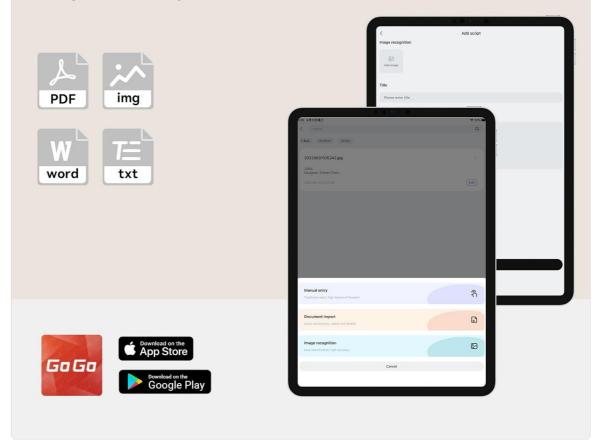


Image: A hand aligning the matte box with the teleprompter unit.

8. **Adjust Top Flag Angle:** Adjust the angle of the top flag using its dedicated knob to prevent glare.

Adapter Ring for the Lens

It is recommended to use it with an adapter ring.



Image: A hand adjusting the top flag on the teleprompter.

9. Mount iPad: Securely mount your iPad or tablet onto the extended iPad stand.

and prevents accidental falling of the device.



Image: An iPad being placed into the teleprompter's tablet holder.

Lens Compatibility and Protection:

The teleprompter includes a silicone cover for direct lens mounting, compatible with lenses having an outer diameter between 49mm and 95mm. For optimal stability and lens mount protection, it is mandatory to use this teleprompter with a 15mm LWS rod support system. This system alleviates pressure from the camera lens mount.



Image: Visual representation of the adjustable silicone cover fitting various lens sizes up to 95mm outer diameter.



Image: The teleprompter assembly mounted on a 15mm LWS rod support system, highlighting lens mount safety. An adapter ring kit is included for SmallRig Matte Box models 3575, 3196, 3680, 3556, 3645, and 5011. Additional adapter ring kits (ID: 3383) for 52-95mm lenses may be purchased separately if needed.



Image: A visual guide to adapter ring sizes for different lenses, indicating included and separately sold kits.

OPERATION

The SMALLRIG Teleprompter 3646 is designed for use with iPads and tablets up to 11 inches, providing a clear display for scripts during recording or live streaming. It is not compatible with smartphones.

SmallGoGo App Control:

The SmallGoGo App is essential for operating the teleprompter. It is available on both the Apple App Store and Android Market. The app allows you to:

- Extract text from PDF, picture, Word, and TXT files.
- Edit extracted text for teleprompter display.
- · Control script scrolling and playback.



Image: Screenshots of the SmallGoGo app demonstrating text extraction from various file formats and image recognition. The app supports multi-language mixed recognition with high accuracy, including English (98%), Chinese (97%), Japanese (90%), and Korean (90%). It supports 96 languages and automatic language detection.

Remote Control Usage:

The included remote control allows for convenient operation of the SmallGoGo App features. Ensure the remote is paired with your tablet.



Image: A hand holding the remote control, with labels indicating button functions: Scroll up, Play/Pause, Scroll down, Play/Pause.

To enable remote control functionality, navigate to your tablet's settings:

• Settings → Accessibility → Touch → AssistiveTouch → Turn on

Optimizing Display:

The teleprompter features an adjustable top flag and a filter frame (filters not included) to prevent outdoor glare and ensure clear caption presentation. No vignetting will occur when the focal length is 22mm or greater. The recommended reading distance is within 5 meters (16.4 feet) for optimal clarity, especially when using a 10.9-inch iPad.



Image: The teleprompter in use, showing clear text display and the adjustable top flag for glare prevention.



Image: A split image demonstrating no vignetting when using the teleprompter with appropriate focal lengths.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your SMALLRIG Teleprompter.

• Cleaning: The lens hood features a modular design, allowing for quick release to facilitate cleaning of

the reflective glass and internal components. Use the provided cleaning cloth or a soft, lint-free cloth for cleaning. Avoid abrasive materials or harsh chemicals.

- **Storage:** When not in use, store the teleprompter in its included carrying bag to protect it from dust, scratches, and impacts.
- Handling: Handle the teleprompter with care, especially the reflective glass, to prevent damage.

TROUBLESHOOTING

If you encounter issues with your SMALLRIG Teleprompter, consider the following common solutions:

• Text Not Displaying Clearly:

- Ensure the iPad/tablet is securely mounted and positioned correctly.
- Check the brightness settings on your iPad/tablet.
- · Adjust the top flag to minimize glare from ambient light.
- Verify that the script text in the SmallGoGo app is formatted for readability.

• Vignetting (Dark Corners in Video):

- Confirm your camera lens focal length is 22mm or greater.
- Ensure the teleprompter is correctly aligned with the lens and the silicone cover is properly seated.
- Check that the 15mm LWS baseplate is securely attached and providing proper support.

• Remote Control Not Working:

- Ensure the remote control has fresh batteries.
- Verify that the remote is properly paired with your iPad/tablet via Bluetooth.
- Confirm that AssistiveTouch is enabled in your tablet's accessibility settings (Settings →
 Accessibility → Touch → AssistiveTouch → Turn on).
- Restart both the remote and the SmallGoGo app.

• Tablet Not Fitting:

- Confirm your tablet is an iPad or another tablet up to 11 inches. Smartphones are not compatible.
- Ensure the iPad stand is fully extended as per installation step 6.

If problems persist, please refer to the support section for contact information.

SPECIFICATIONS

Feature	Detail
Product Dimensions	7.64 x 10.24 x 9.61 inches
Item Weight	1.98 pounds
Model Number	3646
Brand	SMALLRIG

Compatible Devices	iPads/Tablets up to 11 inches, Mirrorless/DSLR Cameras, Camcorders
Lens Compatibility	49mm to 95mm outer diameter (via silicone cover)
Required Support System	15mm LWS Baseplate (sold separately)
App Support	SmallGoGo App (PDF, Picture, Word, TXT formats)
Vignetting	None at focal lengths ≥ 22mm
Recommended Reading Distance	Within 5 meters (16.4 feet)
Color	Black
Special Features	Adjustable, Modular Design, Top Flag, Filter Adapter (4x5.65")

WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance with your SMALLRIG Teleprompter 3646, please contact SMALLRIG customer service directly. Refer to the product packaging or the official SMALLRIG website for the most current contact details and warranty terms.

Official SMALLRIG Website: www.smallrig.com

© 2023 SMALLRIG. All rights reserved.

Related Documents - 3646





1odular Follow Focus F60

SmallRig F60 Modular Follow Focus: Installation and Operation Guide

A comprehensive guide to the SmallRig F60 Modular Follow Focus system, detailing its components, installation procedures, and operational features for professional camera setups. Includes information on mounting, adjustments, and accessories.

V-Mount Battery Mount Plate kit for Islama NAV Bods Videos Red # Ill Nova Till Bill

SmallRig V-Mount Battery Mount Plate Kit for 15mm LWS Rods - Operating Instructions

Comprehensive operating instructions, specifications, and warranty details for the SmallRig V-Mount Battery Mount Plate Kit. Designed for 15mm LWS Rod systems, this kit allows secure mounting of V-mount batteries and includes features like USB-C and D-Tap power outputs. Learn about installation, product features, indicator lights, and service information.

SmallRig

Mini Matte Box Lite

SmallRig Mini Matte Box Lite 3575 Operating Instructions

Operating instructions for the SmallRig Mini Matte Box Lite 3575, a lightweight and compact matte box designed for DSLRs and mirrorless cameras to control light and prevent glare. Includes product details, safety guidelines, and specifications.

SmallRig



SmallRig Right-Angle 15mm Rod Clamp - Operating Instruction

Operating instructions and specifications for the SmallRig Right-Angle 15mm Rod Clamp (Model 2069), detailing its features, applications, safety guidelines, and package contents.

SmallRig



rca-Type Quick Release Mount Plate Kit

SmallRig Arca-Type Quick Release Mount Plate Kit 2280 Operating Instructions

Operating instructions for the SmallRig Arca-Type Quick Release Mount Plate Kit 2280, designed for mirrorless and DSLR cameras. Includes product details, safety guidelines, specifications, and what's in the box.

mallDia



-Mount Battery Mount Plate

SmallRig V-Mount Battery Mount Plate 4505 - Operating Instructions & Specifications

Comprehensive operating instructions and specifications for the SmallRig V-Mount Battery Mount Plate 4505, detailing its features, safety guidelines, assembly, and usage scenarios for camera rigs.