

[Manuals.plus](#) /

› [HUIZHEN](#) /

› HUIZHEN SmartClean V2 Replacement Parts Kit Instruction Manual

HUIZHEN SmartClean V2

HUIZHEN SmartClean V2 Replacement Parts Kit Instruction Manual

For Ionvac SmartClean V2 Robovac Robot Vacuum

INTRODUCTION

This manual provides detailed instructions for the installation and maintenance of your HUIZHEN SmartClean V2 Replacement Parts Kit. This kit is specifically designed to be compatible with the Ionvac SmartClean V2 Robovac Robot Vacuum, ensuring your device maintains optimal cleaning performance.

Regular replacement of wear-and-tear parts is crucial for the efficiency and longevity of your robot vacuum. This kit includes essential components to keep your SmartClean V2 running effectively.

KIT CONTENTS

Your HUIZHEN SmartClean V2 Replacement Parts Kit includes the following items:

- 2 x Main Roller Brush
- 6 x Side Brushes
- 6 x High-Efficiency HEPA Filters

Compatible Model

Compatible with IonVac SmartClean V2 Robovac



Figure 1: Overview of the replacement parts included in the kit, compatible with the Ionvac SmartClean V2 Robovac.

INSTALLATION GUIDE

Before installing any replacement parts, ensure your Ionvac SmartClean V2 Robovac is powered off and disconnected from its charging base.

1. Replacing the Main Roller Brush

1. Turn the robot vacuum upside down to access the brush compartment.
2. Locate the brush guard and unlatch it to open.
3. Remove the old main roller brush.
4. Insert the new V-shaped main roller brush into the compartment, ensuring the ends align with the slots.
5. Close the brush guard and latch it securely.

V-Shaped Roller Brush

Strong pickup for pet hair, dirt, dust & debris
Works on most floors—hardwood, carpet, tile & more



Figure 2: The V-shaped main roller brush is designed for effective debris collection.

Deep Clean • Easy Maintenance



**V-Shaped Brush
Fits Close to Floors**



**Quick-Release Cap
Easy Hair Removal**



Figure 3: The main brush features a quick-release cap for simplified maintenance.


2. Replacing Side Brushes

1. Turn the robot vacuum upside down.
2. Locate the side brushes. Each brush is typically held by a screw.
3. Using a screwdriver, remove the screw holding the old side brush.
4. Carefully pull off the old side brush.
5. Align the new 3-arm side brush with the post and press it down.
6. Secure the new side brush with the screw.

3-ARM SIDE BRUSH



Perfect Fit
Snaps in securely

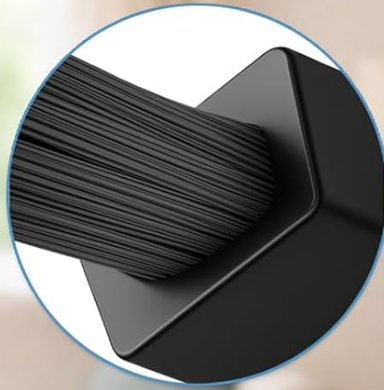

Tight Connection
Sturdy and reliable



Gentle Bristles
Floor-friendly design



Figure 4: The 3-arm side brush ensures a secure fit and gentle cleaning.

3. Replacing HEPA Filters

1. Open the dustbin compartment on your robot vacuum.
2. Remove the dustbin.
3. Locate the filter assembly within the dustbin.
4. Remove the old HEPA filter.
5. Insert the new HEPA filter into the designated slot, ensuring it is seated correctly.
6. Close the dustbin and reinsert it into the robot vacuum.

High-Efficiency HEPA Filter

Captures **99.9%** of particles as small as **0.1 microns**



Figure 5: The HEPA filter captures fine particles, improving air quality.

4. Component Location Diagram

Refer to the diagram below for the location of each component on the underside of your robot vacuum.

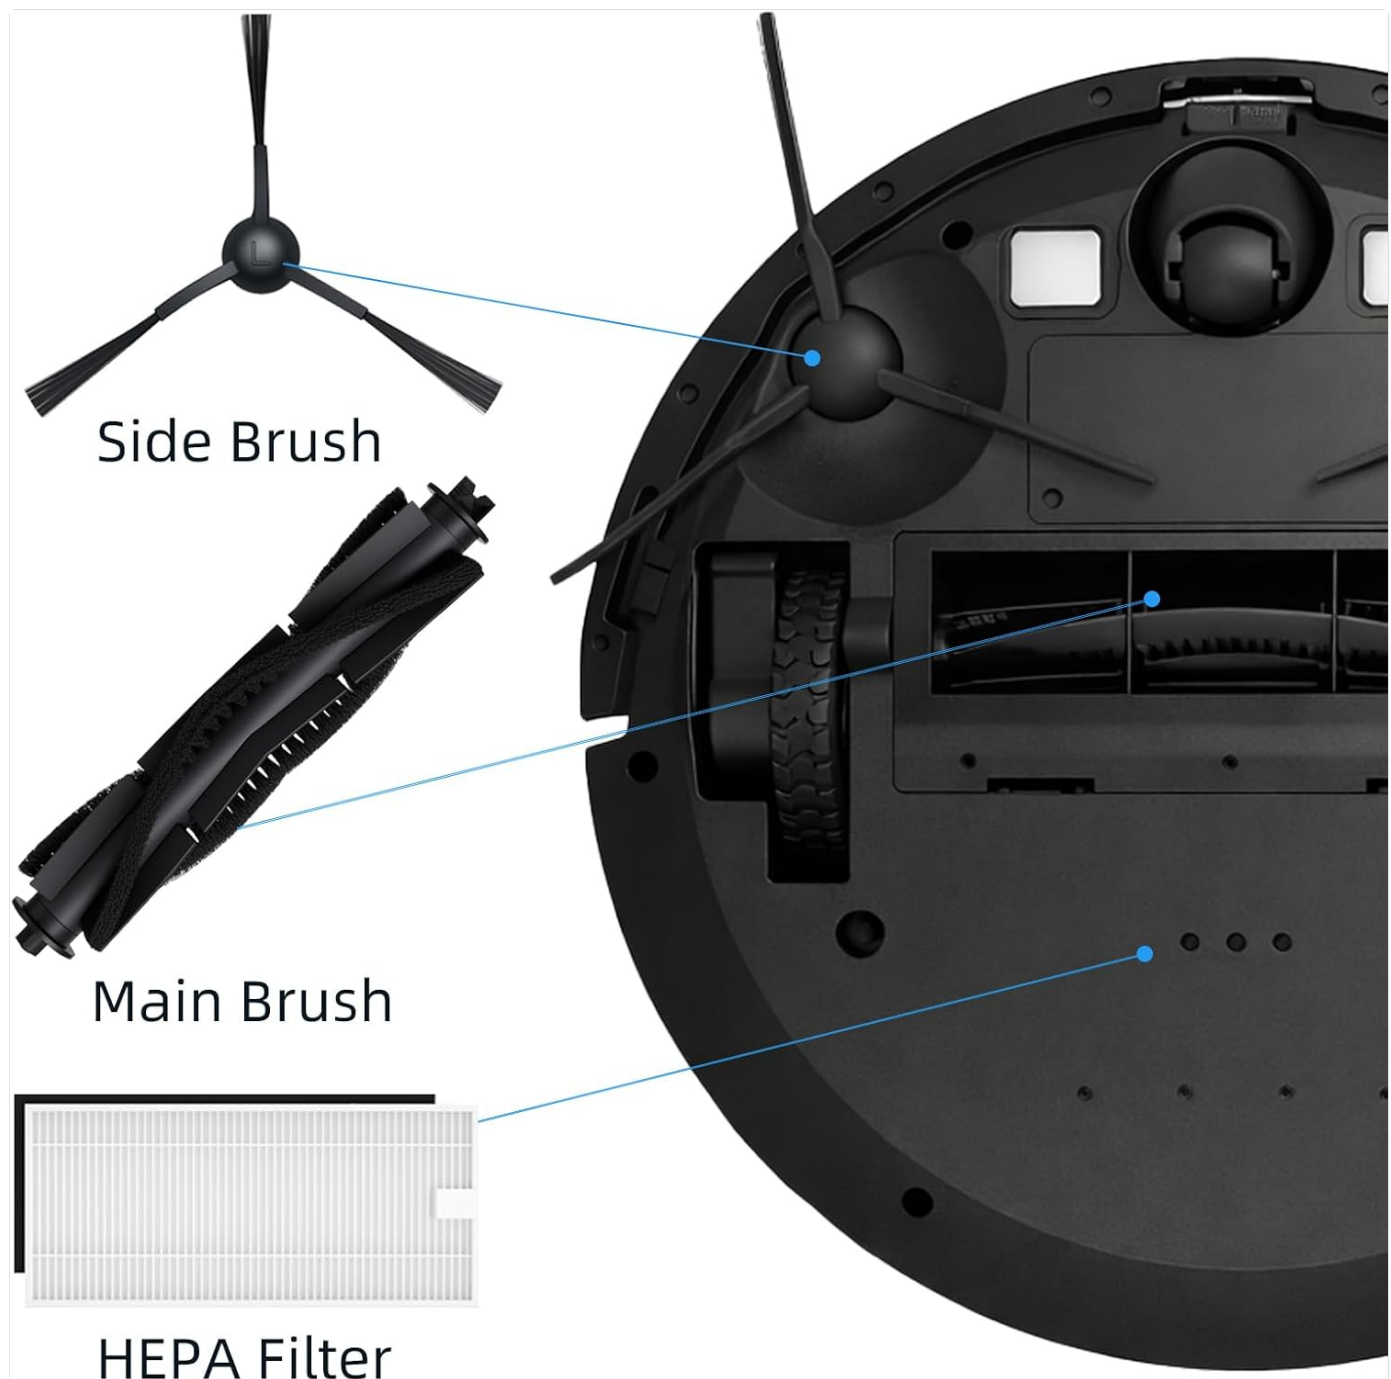


Figure 6: Underside view of the SmartClean V2 Robovac with key component locations.

MAINTENANCE

Regular maintenance of your replacement parts ensures your SmartClean V2 Robovac operates at peak efficiency and extends its lifespan.

Recommended Replacement Schedule:

- **Side Brushes and HEPA Filters:** Replace every 1-3 months, especially in homes with pets or high dust levels.
- **Main Roller Brush:** Replace every 6 months.

Cleaning Instructions:

- **Washable Parts:** The side brushes and HEPA filters can be rinsed with water. Ensure they are air-dried fully (approximately 24 hours) before reinstallation. **Do not soak** these parts.
- **Main Roller Brush:** Use the cleaning tool provided with your robot vacuum to remove hair and debris from the main

brush. The quick-release caps facilitate easy hair removal.

Washable & Reusable

Air-dry fully (about 24 hours)
before reuse. Rinse to clean;
do not soak



Figure 7: Instructions for washing and reusing the replacement parts.

Tip for Bent Side Brushes:

If side brushes appear bent or curled due to shipping, soak them in warm water for a few minutes. This will help them recover their original shape and will not affect their quality or performance.

TROUBLESHOOTING

If your robot vacuum's cleaning performance decreases after replacing parts, consider the following:

- **Incorrect Installation:** Double-check that all parts are installed correctly and securely according to the instructions in the "Installation Guide" section.
- **Part Condition:** Ensure the new parts are free from manufacturing defects.
- **Other Robot Issues:** If the problem persists, the issue might not be related to the replacement parts. Refer to your robot vacuum's original user manual for further troubleshooting.

SPECIFICATIONS

Feature	Detail
Brand	HUIZHEN
Compatible Devices	Ionvac SmartClean V2 Robot Vacuum
Material (Filter)	HEPA
Reusability	Reusable (Side Brushes, HEPA Filters)
Included Components	2 x Main Brush, 6 x Side Brush, 6 x Hepa Filter

CUSTOMER SUPPORT

For any questions or concerns regarding your HUIZHEN SmartClean V2 Replacement Parts Kit, please contact our customer service team. We are committed to assisting you promptly to ensure your satisfaction.

Please refer to the retailer's website or your purchase documentation for specific contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CGWWZQPN>

More documents and user manuals: <https://manuals.plus/>