



[Manuals.plus](#) /

> [Healthkeep](#) /

> Healthkeep Digital Bathroom Scale T107 User Manual

## Healthkeep T107

# Healthkeep Digital Bathroom Scale T107 User Manual

Model: T107 | Brand: Healthkeep

## INTRODUCTION

Thank you for choosing the Healthkeep Digital Bathroom Scale Model T107. This scale is designed to provide accurate and consistent weight measurements with ease of use. Featuring high-precision sensors, a durable tempered glass platform, and convenient Step-On technology, it is an ideal tool for monitoring your weight. Please read this manual thoroughly before use to ensure proper operation and maintenance.

## SAFETY INFORMATION

- Always place the scale on a hard, flat surface. Using it on soft surfaces like carpet may affect accuracy.
- The scale surface is made of tempered glass. It can be slippery when wet. Ensure the surface is dry before stepping on.
- Do not jump on the scale or use it for purposes other than weight measurement.
- Keep the scale away from water and extreme temperatures.
- This scale is for household use only and is not intended for medical diagnosis or treatment.
- Keep batteries out of reach of children.

## PACKAGE CONTENTS

- 1 x Healthkeep Digital Bathroom Scale Model T107
- 2 x AAA Batteries (pre-installed)
- 1 x User Manual (this document)

## PRODUCT FEATURES

- **High Precision Sensors:** Equipped with 4 high-precision sensors for accurate measurements with a 0.1 kg (0.2 lb) graduation.
- **Step-On Technology:** Provides instant and accurate weight readings upon stepping on the scale.
- **Durable Tempered Glass:** 5mm tempered glass platform with rounded corners for safety and durability.
- **Clear LED Display:** Large, bright, and clear numbers for effortless readability.

- **Compact Design:** Slim profile (26 x 26 x 2.4 cm / 10.24 x 10.24 x 0.94 inches) for easy placement in various rooms.
- **Unit Conversion:** Easily switch between pounds (lb) and kilograms (kg).
- **Automatic Shut-off:** Conserves battery life by turning off automatically after use.
- **Anti-Skid Padding:** Ensures stability and prevents slipping during use.

## Effortless Readability at a Glance

Experience effortless readability with our large, bright, and clear numbers on the backlit display.

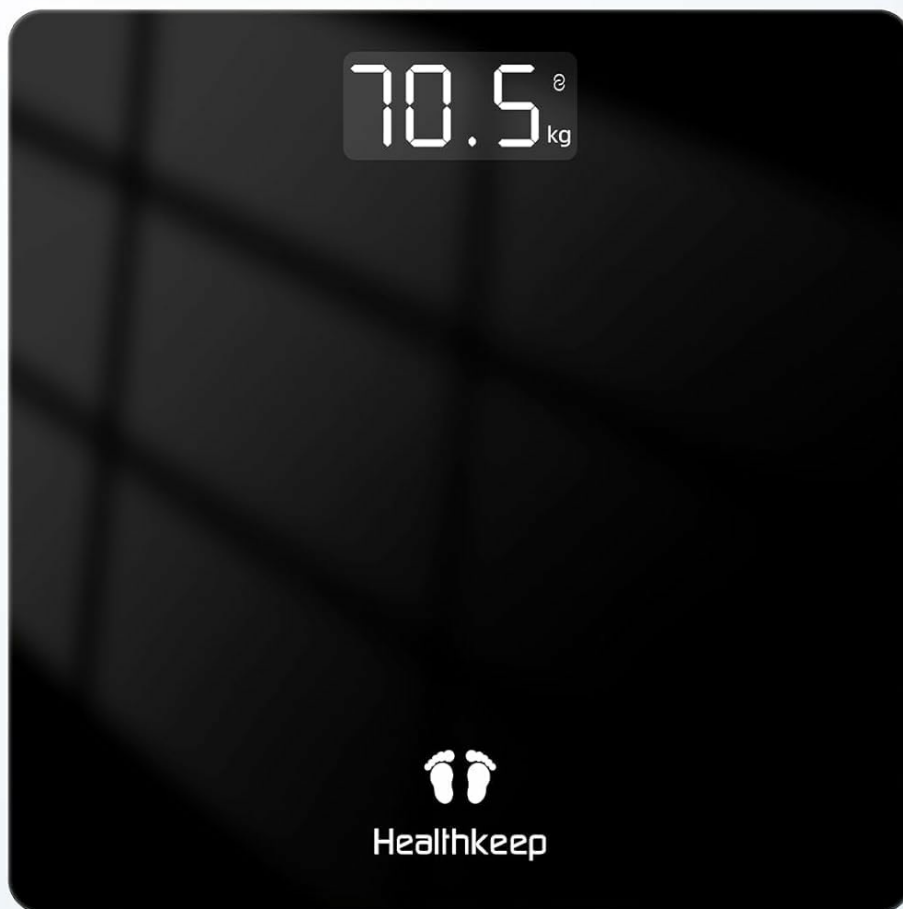


Image: The Healthkeep T107 digital scale showcasing its large, bright LED display with a clear weight reading of 70.5 kg.

## Space-Saving Design for Effortless Placement

With a compact size of **10.24inch\*10.24inch**, our scale seamlessly integrates into any space without sacrificing accuracy or style.



Image: A person's feet on the Healthkeep T107 scale, visually representing its compact dimensions of 10.24 inches by 10.24 inches, highlighting its space-saving design.

### SETUP

1. **Unpack the Scale:** Carefully remove the scale from its packaging.
2. **Battery Installation:** The scale comes with 2x AAA batteries pre-installed. Open the battery compartment on the underside of the scale and remove any protective plastic strip if present. Ensure the batteries are inserted with the correct polarity (+/-).



Image: Underside of the Healthkeep T107 scale, highlighting the battery compartment and the unit conversion button. The scale features anti-skid padding on its feet.

3. **Placement:** Place the scale on a hard, flat, and stable surface. Avoid carpets or uneven flooring, as this can affect accuracy.

## OPERATING INSTRUCTIONS

1. **Step-On Measurement:** Gently step onto the center of the scale with bare feet. The scale will automatically turn on and display your weight.



Image: A woman stepping onto the Healthkeep T107 scale, demonstrating the instant weight measurement feature with the weight displayed on the screen.

2. **Stable Reading:** Stand still on the scale until the weight reading stabilizes and flashes a few times. This indicates the final measurement.
3. **Automatic Shut-off:** The scale will automatically turn off after a few seconds of inactivity to conserve battery power.

## UNIT CONVERSION (LB/KG)

To switch between measurement units (pounds or kilograms), locate the "UNIT" button on the underside of the scale, near the battery compartment. Press this button to toggle between "lb" and "kg". The selected unit will be displayed on the screen.



Image: A detailed view of the underside of the scale, specifically pointing out the "UNIT" button used for switching between pounds and kilograms.

## MAINTENANCE AND CARE

- **Cleaning:** Wipe the scale surface with a damp cloth and mild detergent. Avoid abrasive cleaners or harsh chemicals.
- **Storage:** Store the scale in a cool, dry place. Do not store it vertically or place heavy objects on it when not in use.
- **Battery Replacement:** If the display shows "LO" or becomes dim, replace both AAA batteries. Ensure correct polarity.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
"LO" displayed	Low battery power.	Replace both AAA batteries.

Problem	Possible Cause	Solution
"Err" displayed	Scale overloaded or unstable.	Ensure weight is within 180 kg (400 lb) limit. Place scale on a flat, hard surface. Step off and then back on.
Inaccurate readings	Scale on soft/uneven surface, or not properly calibrated.	Place scale on a hard, flat floor. Step on and off quickly to "wake up" the scale, then wait for it to show "0.0" before taking a measurement.
No display	Batteries are dead or incorrectly installed.	Check battery polarity or replace batteries.

## SPECIFICATIONS

<b>Model:</b>	T107
<b>Brand:</b>	Healthkeep
<b>Dimensions (L x W x H):</b>	26 x 26 x 2.4 cm (10.24 x 10.24 x 0.94 inches)
<b>Item Weight:</b>	1.1 Kilograms (2.43 lbs)
<b>Weight Capacity:</b>	180 kg / 400 lb
<b>Graduation:</b>	0.1 kg / 0.2 lb
<b>Material:</b>	5mm Tempered Glass
<b>Display Type:</b>	LED
<b>Power Source:</b>	2 x AAA Batteries
<b>Special Features:</b>	Automatic Shut-off, Precise Measurement, Anti-slip Platform, Portable

## WARRANTY AND SUPPORT

Healthkeep products are designed for reliability and performance. For any questions, technical support, or warranty inquiries, please contact Healthkeep customer service through the retailer's platform or the official Healthkeep website. Please have your model number (T107) and purchase information ready when contacting support.

For more information, visit: [Healthkeep Official Store](#)

