

Imetec 16965

Imetec Scaldasonno Adapto Recreo Double Heated Mattress Pad Instruction Manual

Model: 16965

INTRODUCTION

The Imetec Scaldasonno Adapto Recreo Double Heated Mattress Pad (Model 16965) is designed to provide warmth and comfort for a restful sleep. This manual provides essential information for the safe and effective use, setup, operation, and maintenance of your heated mattress pad. Please read all instructions carefully before first use and retain this manual for future reference.



Image: The Imetec Scaldasonno Adatto Recreo Double Heated Mattress Pad, showing the product folded and its packaging with two control units.

Safety Information

Your safety is paramount. Please adhere to the following guidelines:

- The product can become hot during use; handle with care.
- Do not leave the heated mattress pad unattended during operation.
- Always verify that the power is off and the unit is unplugged before storing.
- Ensure that the selected temperature is not excessively high, especially when used with memory foam mattresses, to prevent damage or discomfort.
- Read all instructions thoroughly before use.
- Do not use the heated mattress pad if it is wet or damp.
- Keep pets away from the heated mattress pad to prevent damage or injury.
- Do not fold, crease, or bunch the heated mattress pad excessively during use or storage, as this can damage the internal heating elements.

- The integrated Electro Block safety system continuously monitors the pad's temperature and automatically shuts off power in case of overheating or malfunction.



Image: A couple sleeping, demonstrating the safe and comfortable use of the heated mattress pad.

PRODUCT FEATURES

The Imetec Scaldasonno Adatto Recreo offers advanced features for optimal comfort and safety:

- **Soft, Hypoallergenic Fabric:** Made from recycled fiber, providing a soft and comfortable surface.
- **Adatto Technology:** Patented technology ensuring rapid heating, personalized temperature control, and enhanced safety.
- **Electro Block Safety System:** Electronic control with self-diagnosis at every power-on, constantly monitoring temperature 25 times per second during use.
- **Rapid Heating Function:** Quickly warms your bed to the desired temperature.
- **6 Temperature Settings:** Allows for precise customization of warmth levels.
- **Auto-Off Timer:** Programmable shut-off after 1, 3, or 9 hours for convenience and energy saving.
- **Digital LED Control:** Features an intuitive digital display with automatic adjustment of LED light intensity.

- **Removable Controls:** Control units can be detached for easy cleaning of the mattress pad.
- **Low Energy Consumption:** Designed for efficient operation.
- **Memory Foam Compatible:** Suitable for use with memory foam mattresses.
- **Washable:** Can be hand washed or machine washed at 30°C.
- **Made in Italy:** Manufactured in Italy, ensuring quality craftsmanship.



Morbido tessuto anallergico
in fibra riciclata certificata GRS*

Image: Oeko-Tex Standard 100 certification, highlighting the fabric's safety.



Image: Detail of the hypoallergenic and anti-slip fabric.

SETUP INSTRUCTIONS

Follow these steps to properly set up your heated mattress pad:

1. **Unpack:** Carefully remove the heated mattress pad and its control units from the packaging.
2. **Placement:** Lay the heated mattress pad directly on top of your mattress. Ensure it is spread out flat and smooth, without any folds, creases, or wrinkles. The pad should cover the main sleeping area.
3. **Position Controls:** Position the pad so that the connectors for the control units are located at either the head or foot of the bed, in a position that is easily accessible from the side of the bed.
4. **Connect Controls:** Securely connect each control unit to its corresponding connector on the heated mattress pad. For double models, ensure each control is connected to the correct side of the pad for independent operation.
5. **Cover with Sheet:** Once the heated mattress pad is in place, cover it with your usual fitted bed sheet.
6. **Power Connection:** Plug the power cord(s) of the control unit(s) into a suitable and easily accessible electrical outlet.



Image: The heated mattress pad correctly placed on a bed, ready for use.

OPERATING INSTRUCTIONS

Operating your Imetec Scaldasonno Adapto Recreo is straightforward:

1. **Power On/Off:** Press the power button on the control unit to turn the heated mattress pad on or off. The LED display will illuminate upon activation.
2. **Temperature Selection:** Use the '+' and '-' buttons on the control unit to cycle through the 6 available heat settings. Start with a lower setting (e.g., 1 or 2) and adjust upwards until your desired warmth is achieved.
3. **Rapid Heating:** To quickly warm your bed, select a higher temperature setting. The Adapto technology ensures rapid heating.
4. **Timer Function:** Press the timer button to set the automatic shut-off. You can choose between 1, 3, or 9 hours. The pad will automatically turn off after the selected duration, providing peace of mind and energy efficiency.
5. **Independent Zones (Double Model):** For the double size, each control unit operates independently. This allows two users to customize their preferred temperature settings for their respective sides of the bed.
6. **LED Display:** The digital LED display shows the current temperature setting and the active timer. The

display's light intensity automatically adjusts to ambient light conditions.



Il più veloce*, 6 temperature
e timer di autospegnimento

Image: Close-up of the digital control unit with LED display.



2 zone di temperatura
indipendenti

Image: Two control units for independent temperature zones on a double bed.



Image: A user adjusting the control unit while in bed.

MAINTENANCE

Proper care and maintenance will extend the life of your heated mattress pad:

1. **Disconnect Power:** Before any cleaning, always unplug the heated mattress pad from the electrical outlet and detach the control unit(s) completely from the pad.
2. **Washing:** The heated mattress pad is washable by hand or machine at 30°C. Ensure the control unit(s) are fully detached before washing.
 - For machine washing, use a gentle cycle with a mild detergent.
 - Do not use bleach, iron the pad, or dry clean it.
3. **Drying:** Air dry the heated mattress pad completely before re-use or storage. Lay it flat or hang it over a line, ensuring no moisture remains, especially around the connectors. Do not use a tumble dryer.
4. **Storage:** When not in use, ensure the heated mattress pad is clean and completely dry. Store it in its original packaging or a breathable bag in a cool, dry place. Avoid placing heavy objects on top of the stored pad to prevent damage to the internal wiring.

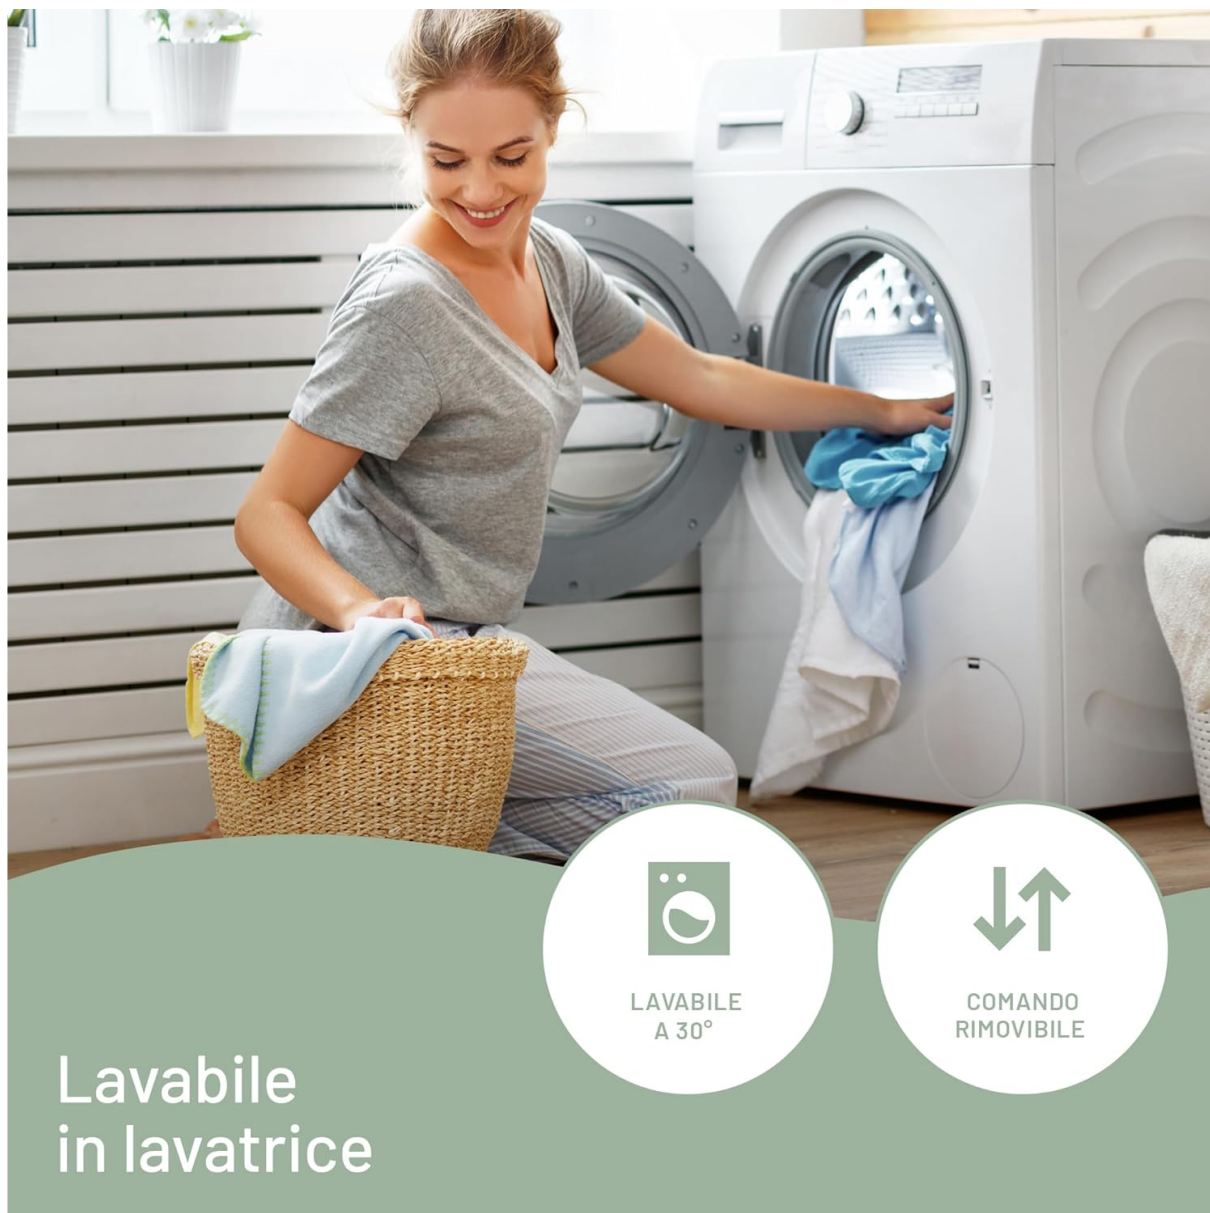


Image: The heated mattress pad being placed into a washing machine, demonstrating its washability.

TROUBLESHOOTING

If you encounter any issues with your heated mattress pad, refer to the following common troubleshooting steps:

- **Pad not heating:**

- Check if the power cord is securely plugged into a functional electrical outlet.
- Ensure the control unit is properly and firmly connected to the heated mattress pad.
- Verify that the power button on the control unit is pressed and a temperature setting has been selected.
- The Electro Block safety system might have activated. Try unplugging the unit from the wall, waiting a few minutes, and then plugging it back in.

- **Uneven heating:**

- Ensure the heated mattress pad is laid completely flat on the mattress without any folds, creases, or bunching.
- Check that the fitted sheet covering the pad is not too tight, which could compress the heating

elements.

- **Control unit not responding:**
 - Unplug the control unit from the wall and from the pad, then reconnect everything securely.
 - If the issue persists after reconnection, contact customer support for further assistance.
- **LED display not working:**
 - Check all power connections as described above.
 - If the unit is powered on and heating but the display remains off, there might be a fault with the display. Contact customer support.

For issues not covered here, please refer to the support section or contact Imetec customer service.

SPECIFICATIONS

Feature	Detail
Model Number	16965
Dimensions	150 x 160 x 1 cm
Weight	2.3 kg
Fabric Type	100% Polyester (Recycled Fiber)
Care Instructions	Machine washable (30°C)
Batteries Required	No
Color	White
Brand	Imetec
Special Feature	Breathable
Temperature Settings	6 levels
Auto-off Timer	1, 3, or 9 hours
Safety System	Electro Block

WARRANTY AND SUPPORT

The Imetec Scaldasonno Adapto Recreo is manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product or visit the official Imetec website.

For technical support, spare parts, or any inquiries regarding your product, please contact Imetec customer service. You can find contact information on the official Imetec website or through the retailer where you purchased the product.

Visit the official Imetec store for more information:[Imetec Store](#)

Related Documents - 16965



TERMOFORO

IT	TERMOFORO	pagina	1
EN	HEATING PAD	page	1
FR	C-OUSSIN CHAUFFANT	page	2
DE	HEIZKISSE	Seite	2
ES	ALMOHADILLA ELÉCTRICA	pagina	2
EL	ΗΛΕΚΤΡΙΚΗ ΘΕΡΜΟΠΟΡΑ	σελ.	3
CS	ZAHŘIVACÍ PODLOŽKA	strana	4
HU	ELEKTROMOS MELEGÍTŐ	oldal	5
SK	ELEKTRIČKÁ PODUŠKA	strana	6

TYPE R6701



Manuale d'uso IMETEC TYPE R6701 - Termoformo Elettrico

Manuale di istruzioni per l'uso del termoforo IMETEC TYPE R6701. Questo documento fornisce una guida completa per l'utilizzo sicuro ed efficace, inclusi dettagli su specifiche tecniche, istruzioni di sicurezza, uso, pulizia, manutenzione, risoluzione dei problemi e garanzia.



SCALDALETTO

IT	SCALDALETTO	pagina	3
EN	HEATED UNDERGLANKET	page	3
FR	SURMATELAS CHAUFFANT	page	23
DE	HEIZDECKE	seite	31
ES	CALIENTACAMAS	página	43

THE DISEASE DISEASE DISEASE



IMETEC Scaldaletto: Manuale d'Uso e Sicurezza

Manuale completo per lo scaldaletto IMETEC, che include istruzioni dettagliate per l'uso, la sicurezza, la pulizia, la manutenzione e la risoluzione dei problemi. Copre i modelli R1502, R1503, R1505, R1506, R1508, R1511.



MULTISTYLER

MULTISTYLER	IT	página	1
MULTISTYLER	EN	page	4
MULTISTYLER	FR	page	6
MULTISTYLER	HU	página	12
MULTISTYLER	SL	číslobo	20
OŚCIEPUNKÓW HUFARMIZÓ	ES	álbum	28
MODELLODAR MULTIFUNCIÓNES	PT	página	24
MULTISTYLER	BG	страница	28
VÍDEOPUKČKA NA VLASTI	CZ	strana	30
AVANTAGEHUP	SK	strana	30
OBKOLJANIK LAS	SZ	stran	40
SUSZARKO-ŁOKOWKA	PL	strona	42
MULTISTYLER	RO	pagina	46
MULTISTYLER	ZK	strana	50
MULTISTYLER	KK	éimrege	50
MULTISTYLER	LK	puščalica	50
MULTISTYLER	SO	faced	63
MULTISTYLER	HR	stranica	67
MONTAŽHUP	SR	stranica	71

Type C3003



IMETEC MULTISTYLER Type C7003: Manuale d'uso e istruzioni

Scopri come utilizzare al meglio il tuo IMETEC MULTISTYLER Type C7003 con il manuale d'uso completo. Istruzioni dettagliate per uno styling perfetto e sicuro dei capelli.



IMETEC Sistema Stirante S3901: Guida Completa all'Uso e alla Sicurezza

Scopri come utilizzare al meglio il tuo IMETEC Sistema Stirante S3901. Questa guida completa fornisce istruzioni dettagliate, consigli sulla sicurezza e manutenzione per un'esperienza di stiratura ottimale.



PIASTRA PER CAPELLI

IT	PIASTRA PER CAPELLI	pagina	1
EN	HAIR STRAIGHTENER	page	1
DE	FÜR A LUSSE	Seite	21
ES	HAIRGLÄTTER	serie	31
ES	PLANCHA PARA PELO	pagina	41
PT	PLANCHA PARA CABELOS	pag.	51
EL	ΠΑΑΚΑ ΜΑΛΑΓΙΩΝ	σελίδα	61
CZ	ŽEHLIČKA NA VLASY	strana	71
SK	ŽEHLIČKA NA VLASY	strana	81
HU	HÁMSÍTÓ	oldal	91
PL	PROSTOWNIK DO WŁOSÓW	strona	101
RU	ПЛАВКАМ ТЕЛ ДА ВЛОСОС	страница	111
UA	ПЛАВКА ТІЛІ ВІД ПОСІД	сторінка	121

TYPE 00602



IMETEC Q8602 Piastra per Capelli - Manuale d'Uso

Manuale d'uso completo per la piastra per capelli IMETEC Q8602, con istruzioni dettagliate su sicurezza, utilizzo, manutenzione e garanzia.



[Imetec Ferro a Vapore P8401/P8402: Manuale d'Uso e Sicurezza](#)

Manuale completo per il ferro da stiro a vapore Imetec P8401/P8402. Include istruzioni dettagliate per l'uso, avvertenze di sicurezza, manutenzione e risoluzione dei problemi per garantire un'esperienza di stiratura ottimale.