

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [BOLOLO](#) /

› BOLOLO Portable Milk Warmer Pro Instruction Manual

BOLOLO Portable Milk Warmer Pro

BOLOLO Portable Milk Warmer Pro

Instruction Manual

1. INTRODUCTION

The BOLOLO Portable Milk Warmer Pro is designed for convenient and efficient warming of milk or water for your baby, especially when on the go. Its innovative detachable design ensures easy cleaning and maintenance, while advanced heating technology provides quick and consistent temperatures. With a large capacity and extended battery life, it's an ideal solution for busy parents.

2. PRODUCT FEATURES

- **Upgraded Detachable Design:** The detachable base allows for easier cleaning and prevents water from accidentally entering the electronic components during washing.
- **Fast Heating:** Utilizes advanced thick-film heating technology to warm water to 98°F in just 2 minutes, and refrigerated breastmilk to 98°F in 4 minutes.
- **Large Battery Life:** Equipped with a 14,000mAh battery, capable of heating 5 ounces of water up to 16 times or breastmilk up to 10 times on a single full charge.
- **17.5 Ounces Capacity:** The generous capacity allows for one-time heating sufficient for multiple feedings.
- **Wireless and Portable:** Designed for use at home, on the go, during travel, or for nighttime feedings, offering a hassle-free experience.
- **Safety Features:** Includes microchip accurate and stable heating, anti-dry burning protection, and is made from food-grade, BPA-free 316L stainless steel.

14000mAh

Battery Supports One-day Use



1 hour charge =

80%

battery

one full charge=

24

warming cycles


Image: The BOLOLO Portable Milk Warmer Pro demonstrating its fast heating capabilities compared to other warmers.

Other Features

Insulation



Microchip
accurate and
stable heating

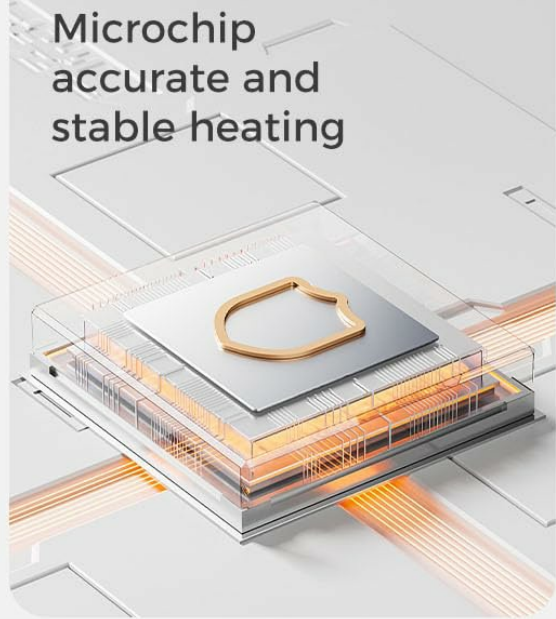

Anti-dry burning



Image: Illustration of the 14,000mAh battery life, indicating 80% charge in 1 hour and 24 warming cycles on a full charge.



Image: Diagram highlighting the internal insulation, microchip for accurate heating, and anti-dry burning protection of the

warmer.



Image: Close-up showing the food-grade, BPA-free 316L stainless steel interior and authoritative certification documents.

3. SETUP

1. **Charge the Device:** Before first use, fully charge the BOLOLO Portable Milk Warmer Pro using the provided 30W quick charger and Type-C cable. The battery indicator on the display will show charging progress.
2. **Prepare for Use:** Ensure all parts are clean and dry before assembling and adding liquid.

Other Features

Insulation



Microchip accurate and stable heating



Anti-dry burning



Image: The portable milk warmer connected to a Type-C charging cable, illustrating the charging process.

4. OPERATING INSTRUCTIONS

1. **Fill the Warmer:** Unscrew the top lid of the warmer. Carefully pour the desired amount of milk or water into the stainless steel inner container. Do not overfill.
2. **Secure the Lid:** Screw the top lid back onto the warmer securely to prevent leaks.
3. **Power On:** Press the power button located on the base of the warmer. The display will light up.
4. **Set Temperature:** Use the '+' and '-' buttons to adjust the desired temperature. For baby milk, 98°F is

typically recommended. The device can heat up to 130°F for other liquids like tea or soup.

5. **Start Warming:** Once the desired temperature is set, the warmer will automatically begin heating. The display will show the current temperature as it rises.
6. **Ready Notification:** The warmer will beep once it reaches the set temperature, indicating the liquid is ready.
7. **Dispense Liquid:** To pour, slide the safety lock on the lid to the unlock position, then press the button to open the flip-top lid. Carefully pour the warmed milk or water into your baby's bottle.
8. **Safety Lock:** After dispensing, close the lid and slide the safety lock back to the locked position to prevent accidental spills, especially when carrying in a diaper bag.

Night time feeding

Car

Airplane

Hotel / mall

Both a Warmer & Thermos

Image: A hand pouring warmed milk from the BOLOLO Portable Milk Warmer Pro into a baby bottle.

Your browser does not support the video tag.

Video: A demonstration of using the BOLOLO Portable Milk Warmer Pro to warm milk on the go in a store setting, highlighting its portability and ease of use.

5. CLEANING AND MAINTENANCE

The detachable design of the BOLOLO Portable Milk Warmer Pro makes cleaning straightforward. Follow these steps to ensure proper hygiene and longevity of your device:

1. **Disassemble:** Separate the main body of the warmer from the heating base. Open the top cover and remove the silicone ring.
2. **Clean the Body and Lid:** Wash the stainless steel inner container, the main body, the lid, and the silicone ring with water and mild detergent. Use a brush to thoroughly clean all parts, especially the silicone components.
3. **Clean the Heating Base:** The heating base (bottom part with buttons and charging port) contains electronic components. **DO NOT immerse it in water or place it in a dishwasher.** Use a damp cloth to gently wipe the exterior of the base.
4. **Dry Thoroughly:** After cleaning, ensure all parts, especially the contact points on the heating base and the bottom of the main body, are completely dry before reassembling or using.

Important: This product does not support dishwasher, soaking, or steam sterilization & drying methods for the electronic base.



Image: Visual guide demonstrating the three steps for cleaning the detachable milk warmer: separating parts, washing with brush and detergent, and wiping the base dry.

**Food grade
BPA free**

**316L
Stainless steel**



Image: The detachable design of the warmer, showing water being poured over the main body for flushing, with a warning against dishwasher, soaking, and steam sterilization.

6. TROUBLESHOOTING

If you encounter any issues with your BOLOLO Portable Milk Warmer Pro, please refer to the following common solutions:

- **Device not turning on:** Ensure the battery is fully charged. Connect the charger and check if the battery indicator lights up.

- **Not heating or heating slowly:** Verify that the heating base is securely attached to the main body. Ensure there is sufficient liquid in the container. If using refrigerated milk, allow up to 4 minutes for warming.
- **Leakage:** Check that the top lid is screwed on tightly and the silicone ring is properly seated. Ensure the safety lock is engaged when carrying.
- **Error codes:** If the display shows an error code, try turning the device off and on again. If the issue persists, contact customer service.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	8.98 x 3.39 x 3.39 inches
Battery	1 Lithium Ion battery (included), 14,000mAh
Material Composition	Stainless Steel (316L food-grade)
Item Weight	2.27 pounds
Capacity	17.5 Ounces
Charging	30W Quick Charger, Type-C Cable

8. WARRANTY AND SUPPORT

Your BOLOLO Portable Milk Warmer Pro comes with a worry-free 1-year warranty. For any questions, concerns, or support needs, please contact our friendly customer service team. Refer to the user manual included in the box for specific contact details or visit the official BOLOLO website for assistance.



Image: Contents of the BOLOLO Portable Milk Warmer Pro box, including the warmer, charger, cable, and user manual.

Your browser does not support the video tag.

Video: An overview of the BOLOLO Portable Milk Warmer Pro, highlighting its fast heating capabilities and 17.5 oz capacity, presented by the seller.