

[manuals.plus](#) /› [Peiyuu](#) /› [Peiyuu Q20 Rechargeable Fabric Shaver Instruction Manual](#)**Peiyuu Q20**

Peiyuu Q20 Rechargeable Fabric Shaver Instruction Manual

MODEL: Q20 | BRAND: PEIYUU

1. Introduction

The Peiyuu Q20 Rechargeable Fabric Shaver is designed to efficiently remove fuzz, pills, and lint from various fabrics. Its compact and portable design makes it suitable for both home use and travel, helping to restore the pristine appearance of your garments and upholstery.

This manual provides essential information for the safe and effective operation, maintenance, and care of your fabric shaver.

2. Safety Instructions

- Keep the device out of reach of children.
- Do not use the device on wet fabrics. Ensure fabrics are dry before use.
- Avoid pressing the shaver too hard against the fabric to prevent damage to the material or blades.
- Do not touch the blades directly when the device is open or in operation. The device features a safety lock that prevents operation when the blade cover is removed.
- Unplug the device before cleaning or when not in use.
- Store the device in a cool, dry place.

3. Package Contents

Verify that all items are present in the package:

- Fabric Shaver x 1
- Cleaning Brush x 1
- Type-C Charging Cable x 1
- User Manual x 1
- Replacement Blades x 2 (typically included, refer to packaging)



Image: Contents of the Peiyuu Q20 Fabric Shaver package.

4. Product Overview

The Peiyuu Q20 Fabric Shaver features a sleek design with intuitive controls and efficient pilling removal capabilities.

- **Digital LED Display:** Shows battery level and speed settings.
- **3 Speed Settings:** Adjustable for different fabric types and pilling levels.
- **6-Leaf Stainless Steel Blades:** Designed for effective and quick removal of lint and pills.
- **Bionic Honeycomb Mesh:** Protects fabrics while allowing pills to be captured.
- **Rechargeable Battery:** Built-in 2600mAh Lithium Polymer battery, charged via Type-C port.
- **Security Lock:** Automatically deactivates the device if the blade cover is loose or removed, ensuring safety.
- **Detachable Lint Container:** Transparent and easy to remove for emptying.



Image: Front and back view of the Peiyuu Q20 Fabric Shaver, highlighting the digital display and included replacement blades.

INNOVATIVE 6-LEAF STAINLESS STEEL BLADE

Double Cleaning Efficiency



Image: Detailed view of the shaver's internal components, including the 6-leaf blade, security lock mechanism, and honeycomb mesh.

5. Setup

5.1 Charging the Device

Before first use, fully charge the fabric shaver. Connect the provided Type-C charging cable to the charging port on the device and to a suitable USB power source. The digital LED display will indicate the charging status and battery percentage. A full charge typically takes approximately 2 hours.

RECHARGEABLE LINT REMOVER

The LED panel shows power levels, speed options, and charging status.

TYPE-C

Charging Port



2H

Fully Charged for Use



2600mAh

Built-in Battery



Image: Visual guide for charging the device via its Type-C port, indicating battery capacity and charging duration.

5.2 Blade Installation/Replacement

The device comes with pre-installed blades. If replacement is needed:

1. Ensure the device is turned off and unplugged.
2. Gently twist and remove the outer blade cover.
3. Carefully remove the old blade unit.
4. Place a new blade unit onto the spindle, ensuring it sits securely.
5. Reattach the outer blade cover by twisting it clockwise until it clicks into place. The safety lock prevents operation if the cover is not properly secured.

6. Operating Instructions

6.1 Power On/Off and Speed Adjustment

Press the power button to turn the device on. The digital LED display will light up, showing the current battery percentage and speed setting. Press the power button repeatedly to cycle through the 3 available speed settings (Low, Middle, High) to suit different fabric types. Press and hold the power button to turn the device off.



Image: The digital LED display indicating the three-speed adjustment options.

6.2 Using the Fabric Shaver

Lay the garment or fabric flat on a hard, smooth surface. Gently glide the shaver over the pilled areas. For delicate fabrics, use a lower speed setting and apply minimal pressure. For tougher pills or thicker fabrics, a higher speed may be more effective.

- Suitable for various fabrics including socks, sweaters, coats, bedding sets, and cloth furniture.
- Avoid using on very thin or loosely woven fabrics that may snag easily.



Image: Demonstrates the shaver's use on different fabric types and the corresponding speed settings.

QUICKLY BRING YOUR CLOTHING TO LIFE

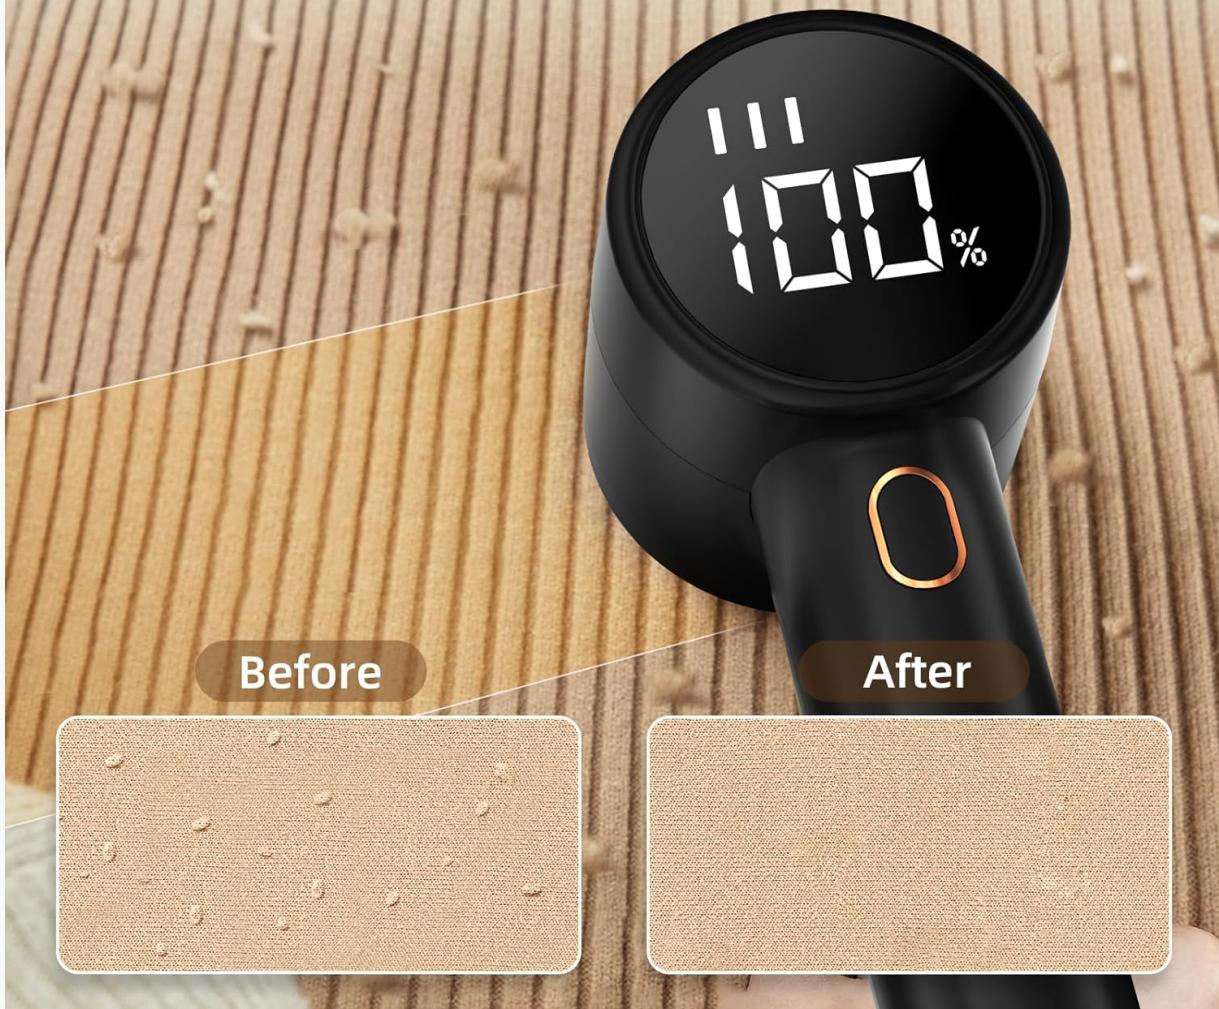


Image: A visual comparison of a fabric before and after using the shaver, illustrating its effectiveness.

6.3 Demonstration Videos

Video: A brief demonstration of the Peiyuu Q20 Fabric Shaver in action, showing its powerful lint removal.

Video: Highlights the portability and rechargeable nature of the Peiyuu Q20 Fabric Shaver.

Video: A user demonstrates the effectiveness of the Peiyuu Q20 Fabric Shaver on various items.

Video: Shows the ease of use and rechargeable functionality of the lint remover.

7. Maintenance

7.1 Cleaning the Lint Container

For optimal performance, empty the lint container regularly, especially after each significant use.

1. Ensure the device is turned off.
2. Gently pull the lint container downwards to detach it from the main body.
3. Discard the collected lint.
4. Reattach the lint container by sliding it back into place until it clicks securely.

EASY TO CLEAN THE LINT CONTAINER



Image: Instructions on how to detach and clean the lint collection container.

7.2 Cleaning the Blades

Use the provided cleaning brush to remove any lint or debris from around the blades and the mesh cover.

1. Ensure the device is turned off and unplugged.
2. Remove the outer blade cover (as described in Section 5.2).
3. Use the small brush to carefully sweep away any trapped lint from the blades and the inner mesh.
4. Reattach the blade cover securely.

8. Troubleshooting

- **Device not turning on:** Ensure the device is charged. Check if the blade cover is securely attached (safety lock feature).
- **Not removing lint effectively:** The lint container may be full and needs emptying. The blades might be dull and require replacement. Ensure the fabric is laid flat and taut.
- **Battery not charging:** Check the Type-C cable and power adapter. Ensure connections are secure.

9. Specifications

Feature	Detail
Brand	Peiyuu
Model Number	Q20
Material	Plastic, Alloy Steel (Handle)
Color	Black
Product Dimensions	2.5"D x 2.36"W x 6.25"H
Item Weight	7.4 ounces
Operation Mode	Automatic
Battery	1 Lithium Polymer battery required (included)
Manufacturer	Shenzhen Maijindian Technology Co., Ltd

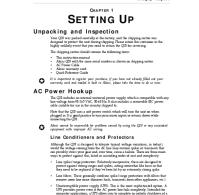


Image: Dimensions of the Peiyuu Q20 Fabric Shaver.

10. Warranty and Support

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official Peiyuu website. Keep your purchase receipt as proof of purchase.

Related Documents - Q20

 <p>Dados Técnicos Curaway Metze Care Arpões de aço para localização de mamas Curaway™ Sistema de localização pré-operatória reposicionável para lesões mamárias não palpáveis Modelo GW-Q</p> <p>Diagrama com os seguintes componentes:</p> <ul style="list-style-type: none"> 1 Arpão de localização 2 Rolo de fio de resiliência 3 Limitador de profundidade 4 Manguito de operação 5 Clip de fixação 	<p>Curaway GW-Q Harpoons-Wire Breast Localization System - Technical Data</p> <p>Detailed technical specifications and features of the Curaway GW-Q Harpoons-Wire system, a repositionable pre-operative localization device for non-palpable breast lesions.</p>
	<p>iCam365 WIFI Camera Quick Start Guide - Setup and Troubleshooting</p> <p>Comprehensive quick start guide for the iCam365 WIFI Camera (Model Q20). Learn how to download the app, connect the device, add it to your network, use its features, and resolve common issues. Includes FCC compliance information.</p>
 <p>Dados Técnicos Curaway Metze Care Arpões de alambre de localización de senos Curaway™ Sistema de localización preoperatoria reposicionable para lesiones mamarias no palpables Modelo GW-Q</p> <p>Diagrama com os seguintes componentes:</p> <ul style="list-style-type: none"> 1 Arpão de localização 2 Rolo de fio de resiliência 3 Rolo de profundidad 4 Manguito de operación 5 Clip de fijación 	<p>Sistema de Arpones de Alambre Curaway GW-Q para Localización Mamaria - Datos Técnicos</p> <p>Especificaciones técnicas detalladas, características, materiales, tabla de referencias y embalaje para el sistema de arpones de alambre Curaway GW-Q, un dispositivo de localización preoperatoria reposicionable para lesiones mamarias no palpables.</p>
	<p>75PAI Smart Wrist Ball Q20 User Manual</p> <p>User manual for the 75PAI Smart Wrist Ball Q20, covering device pairing, battery installation, usage, maintenance, precautions, warranty, and product specifications.</p>
	<p>Alesis Q20 Digital Effects Processor Setup Guide</p> <p>Comprehensive setup guide for the Alesis Q20 Digital Effects Processor, covering unpacking, power connections, audio interfacing with instruments and mixing consoles, MIDI setup, digital connections, footswitch configuration, and essential troubleshooting for hum and noise.</p>
	<p>Soundcore Life Q20+ Беспроводные наушники с шумоподавлением - Руководство пользователя и характеристики</p> <p>Полное руководство пользователя и технические характеристики для беспроводных наушников Soundcore Life Q20+ с активным шумоподавлением. Инструкции по сбросу, зарядке, сопряжению Bluetooth, управлению и использованию приложения.</p>