

[Manuals.plus](#) /

› [ACEMIRO](#) /

› ACEMIRO 16x24 Inch Black Mirror Medicine Cabinet Instruction Manual

ACEMIRO Metal01-1624

ACEMIRO 16x24 Inch Black Mirror Medicine Cabinet

Model: Metal01-1624

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before installation and use. Keep this manual for future reference.

- Always unplug and turn off power to the area before installing.
- Use appropriate safety gear when handling sharp objects or heavy components.
- Keep the cabinet away from heat sources and open flames.
- Do not overload the cabinet with heavy items to prevent tipping or damage.
- Always follow the installation instructions provided.

2. PRODUCT OVERVIEW

The ACEMIRO 16x24 Inch Black Mirror Medicine Cabinet is designed to provide both aesthetic appeal and practical storage for your bathroom. Constructed from robust metal with a sleek black finish, this cabinet offers durability and a modern look. Its versatile design allows for either recessed or wall-mounted installation, adapting to various bathroom layouts.



Image: ACEMIRO 16x24 Inch Black Mirror Medicine Cabinet in a bathroom setting.

Key Features:

- **Substantial and Durable Construction:** Engineered with robust metal for long-lasting use and resistance to daily wear.
- **Personalized and Flexible Storage:** Features adjustable shelves to organize vanity essentials efficiently.
- **Thoughtful Design Details:** Includes rounded edges, strong and flexible hinges, and hidden magnetic catches for enhanced safety and usability.
- **Flexible Installation:** Supports both recessed and wall-mounted installation, with 180° reverse installation capability for adaptability.
- **Shatter-proof Glass:** Equipped with 5MM shatterproof, copper-free mirror glass for clear, distortion-free reflection.

3. COMPONENTS AND DIMENSIONS

Verify that all components are present and undamaged before beginning installation.

Package Contents:

- Medicine Cabinet Unit with Mirror
- Adjustable Shelves (Quantity: 1)
- Shelf Supports / Brackets
- Mounting Hardware (Screws, Plastic Expansion Bolts)

Product Dimensions:

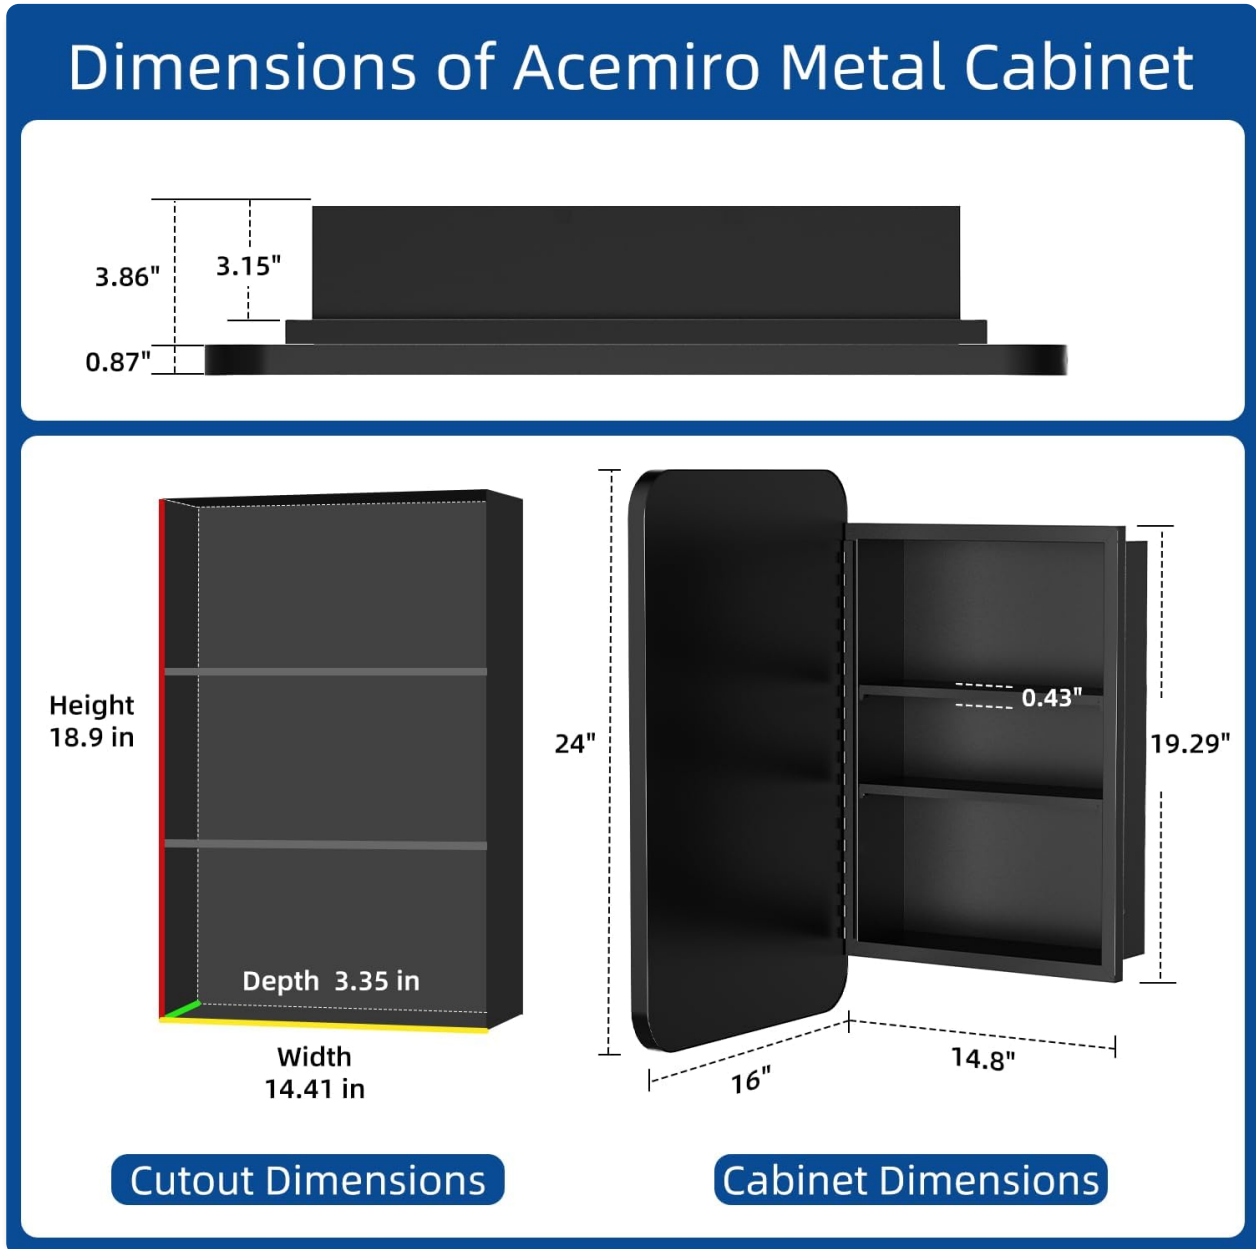


Image: Detailed dimensions for the ACEMIRO medicine cabinet and its required cutout for recessed installation.

Cutout Dimension Reference (for Recessed Installation)

Overall Size (inch)	Width (inch)	Height (inch)	Depth (inch)
16x24	13.87	18	3.5
20x28	17.63	22	3.5

Overall Size (inch)	Width (inch)	Height (inch)	Depth (inch)
24x30	21.87	24	3.5
30x32	29	26.17	3.5

Note Before Purchase: Please notice that the specific cutout size is not equal to the mirror size. Measure the cabinet size before selecting a recessed installation.

4. INSTALLATION INSTRUCTIONS

The ACEMIRO medicine cabinet supports both wall-mounted and recessed installation. A professional is highly recommended for installation.

4.1 Wall-mounted Installation

- Step 1: Measure and Mark.** Measure and mark the back mounting holes on the wall. Draw a horizontal line connecting the marker locations and keep it level.
- Step 2: Drill Holes.** Drill holes at the marked spots and insert the plastic expansion bolt. Use a 3/16" (8mm) drill bit.
- Step 3: Align and Secure.** Align the holes and secure the cabinet to the wall with screws. The cabinet can be flipped for a reverse installation, allowing the door to open either to the left or to the right.
- Step 4: Install Shelves.** Determine the proper shelf location. Insert the shelf supports into the sides of the cabinet, then attach the shelves to the shelf supports.



Image: Visual guide for wall-mounted installation.

4.2 Recessed Installation

- Step 1: Outline and Cut.** Outline the cabinet and cut the marked perimeter on the drywall. The cabinet height should be at least 2 inches above the faucet.
- Step 2: Drill Holes and Position.** Drill holes at the marked spots in the cutout opening, and apply wall anchors. Position the cabinet in the wall opening, securing both sides of the cabinet to the wall with mounting screws.
- Step 3: Install Shelves.** Determine the proper shelf location. Insert the shelf supports into the sides of the cabinet, then attach the shelves to the shelf supports.

NOTE: The cabinet body must be level for the door to work properly.



Image: Visual guide for recessed installation.

5. OPERATION AND USAGE

The ACEMIRO medicine cabinet is designed for ease of use and organization.

Adjusting Shelves:

The interior shelves are adjustable to accommodate items of various heights. Simply remove the shelves and their supports, reposition the supports into the desired slots on the cabinet sides, and then place the shelves back onto the supports.

Thoughtful Design To Improve User Experience



Image: Interior view highlighting detachable shelves and flexible hinges for easy adjustment.

Door Operation:

The cabinet door features strong and flexible hinges and hidden magnetic catches for smooth opening and secure closing. The 180° reverse installation allows you to choose whether the door opens to the left or right, depending on your bathroom layout.



Flexible & Reversible Installation

The flipped design achieves reverse installation. Adapts to any living space.

Image: Flexible and reversible installation options for the medicine cabinet.

6. MAINTENANCE AND CARE

Proper maintenance will ensure the longevity and appearance of your medicine cabinet.

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Spray the cleaner onto the cloth, not directly onto the mirror, to prevent liquid from seeping into the edges.
- **Cleaning the Frame and Interior:** Wipe down the metal frame and interior shelves with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Dry thoroughly immediately after cleaning.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, ammonia-based products, or solvents, as these can damage the finish and mirror coating.
- **Hinge Care:** Periodically check the hinges for smooth operation. If they become stiff, a small amount of silicone-based lubricant can be applied.
- **Prevent Moisture Buildup:** Ensure the bathroom is well-ventilated to prevent excessive moisture buildup, which can affect the cabinet's materials over time.

7. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Door does not close properly or is misaligned.	Cabinet not level; hinges loose or damaged; obstruction.	Ensure the cabinet is installed level. Check and tighten hinge screws. Remove any obstructions.
Mirror appears foggy or streaky after cleaning.	Improper cleaning solution; lint from cloth; residue.	Use a dedicated glass cleaner and a clean, lint-free microfiber cloth. Avoid spraying directly on the mirror.
Shelves are difficult to adjust or fall out.	Shelf supports not fully inserted; shelves overloaded.	Ensure shelf supports are securely seated in the desired slots. Do not exceed the weight capacity of the shelves.
Magnetic closure is weak.	Magnet or strike plate misaligned or damaged.	Check alignment of the magnet and strike plate. If damaged, contact customer support for replacement parts.

If you encounter issues not listed here or require further assistance, please contact ACEMIRO customer support.

8. PRODUCT SPECIFICATIONS

Specification	Detail
Brand	ACEMIRO
Model Number	Metal01-1624
Size	16 x 24 inch
Color	Black
Product Dimensions	5"D x 16"W x 24"H
Material	Metal (Frame, Back, Handle)
Mirror Type	Shatter-proof Glass with HD Reflection, Copper-free, 5MM
Mounting Type	Recessed & Surface Mount
Number of Shelves	1 (Adjustable)
Special Features	Round corner, Soft closing hinge, Adjustable Shelf

Specification	Detail
Item Weight	17.26 pounds
Assembly Required	Yes

9. WARRANTY AND SUPPORT

ACEMIRO is committed to providing sophisticated quality products and excellent customer service.

Warranty Information:

- **2-Year Repair:** Carefree with a 24-month warranty.
- **No Return Solution and Free Replacement:** For products that arrive in damaged condition.

Customer Support:

For any problems with ACEMIRO products or your purchased order, please reach us by following these steps:

1. Click "Acemiro" on the product page.
2. Click the "Ask a question" button and go to the Seller Messaging Assistant.
3. Follow the prompts in the chat window and select the options that relate to your question.
4. Type your question into the message box and click "Send Message".

ACEMIRO offers 24/7 online customer support via email assistant, with responses typically within 24 hours.



Image: Guide on how to contact ACEMIRO for professional support.