

SENSEA 3276000706922

SENSEA POP Oval Toilet Seat User Manual

MODEL: 3276000706922

1. Product Overview

The SENSEA POP Oval Toilet Seat is designed to offer a combination of aesthetic appeal and functional durability for your bathroom. Crafted from FSC-certified wood, this toilet seat is a natural and resilient choice, contributing to an environmentally conscious home. Its vibrant blue matte finish provides a distinctive touch to any standard toilet.

Key features include:

- **Universal Fit:** Equipped with adjustable hinges, this toilet seat is compatible with most standard toilet models.
- **Durable Construction:** Made from FSC wood, ensuring resistance and longevity.
- **High Load Capacity:** The seat can support a weight of up to 150 kg.
- **Extended Lifespan:** Engineered for approximately 30,000 opening cycles, equivalent to over 10 years of typical use.
- **Easy Maintenance:** Features stainless steel hinges for effortless cleaning and corrosion resistance.



Figure 1: The SENSEA POP Oval Toilet Seat in blue, shown in an open position, highlighting its design and color.



Figure 2: The SENSEA POP Oval Toilet Seat installed on a standard white toilet, demonstrating its appearance in a bathroom setting.

2. Safety Information

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- Ensure all components are present and undamaged before beginning installation.
- Do not overtighten screws during installation, as this may damage the product or toilet bowl.
- Avoid standing on the toilet seat or lid, as this can cause injury or damage to the product.
- Keep cleaning agents out of reach of children.
- Do not use abrasive cleaners or harsh chemicals, as these can damage the finish and material of the toilet seat.

3. Package Contents

Verify that all the following items are included in your package:



Figure 3: The SENSEA POP Oval Toilet Seat along with its complete set of mounting hardware, including bolts, washers, and nuts.

- 1 x SENSEA POP Oval Toilet Seat (Blue)
- 2 x Adjustable Metal Hinges (pre-attached or separate)
- 2 x Mounting Bolts
- 2 x Washers
- 2 x Nuts
- 4 x Rubber Bumpers (pre-attached to the seat underside)

4. Setup and Installation

The SENSEA POP toilet seat is designed for easy installation on most standard toilet bowls thanks to its adjustable hinges. Please refer to the dimensions below to ensure compatibility with your toilet.

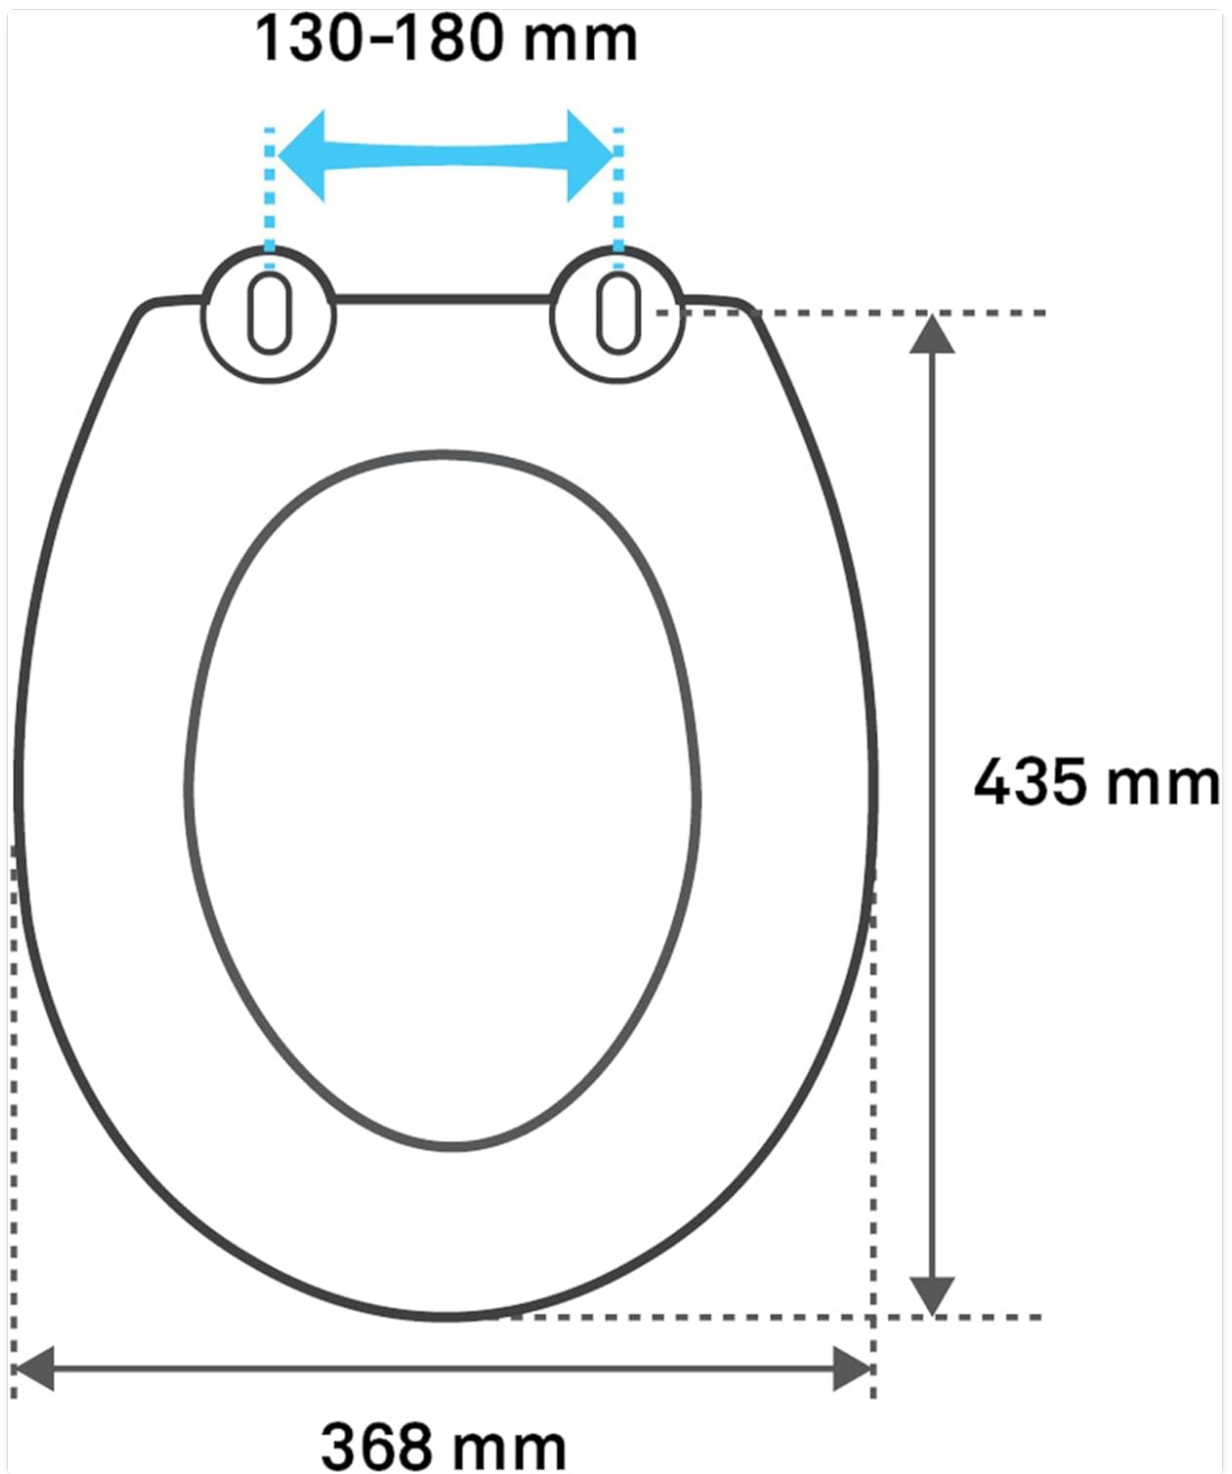


Figure 4: A technical diagram illustrating the key dimensions of the toilet seat: length 435 mm, width 368 mm, and adjustable hinge spacing between 130-180 mm.

Installation Steps:

1. **Prepare the Toilet:** Ensure the toilet bowl surface where the seat will be mounted is clean and dry. If replacing an old seat, remove it completely.
2. **Position the Hinges:** Place the toilet seat onto the toilet bowl, aligning the hinge posts with the mounting holes on the ceramic. The hinges are adjustable to fit hole spacings between 130mm and 180mm. Adjust the hinge positions as needed.
3. **Insert Bolts:** Insert the mounting bolts through the hinge posts and down into the toilet bowl's mounting holes.
4. **Secure with Washers and Nuts:** From underneath the toilet bowl, place a washer onto each bolt, followed by a nut.

5. **Tighten Securely:** Hand-tighten the nuts initially to ensure the seat is centered and aligned. Once aligned, use a suitable tool (e.g., a wrench) to tighten the nuts firmly. *Do not overtighten.*
6. **Test Stability:** Gently test the seat for stability. It should not wobble or shift. Adjust tightening if necessary.

5. Operation

The SENSEA POP toilet seat operates like any standard toilet seat. Lift the lid and seat to use the toilet. Lower them gently after use. The robust hinges are designed for smooth operation over many years.

6. Maintenance and Cleaning

Regular cleaning will help maintain the appearance and hygiene of your SENSEA POP toilet seat. The stainless steel hinges are designed to resist corrosion, simplifying maintenance.



Figure 5: The underside of the SENSEA POP Oval Toilet Seat, showing the rubber bumpers and the 'LONG LIFE x30000' emblem, indicating its durability.

Cleaning Instructions:

- Use a soft cloth or sponge with mild soap and water.
- Wipe the entire surface of the seat and lid, as well as the hinges.

- Rinse thoroughly with clean water and dry with a soft cloth to prevent water spots.
- **Avoid:** Abrasive cleaners, scouring pads, strong chemical detergents, or disinfectants containing chlorine or acids, as these can damage the finish and material.

7. Troubleshooting

If you encounter any issues with your toilet seat, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Seat wobbles or shifts	Mounting nuts are loose.	Tighten the mounting nuts underneath the toilet bowl. Do not overtighten.
Seat does not align properly	Hinges are not correctly positioned or bolts are not centered.	Loosen the mounting nuts, adjust the hinge positions and seat alignment, then retighten.
Squeaking noise when opening/closing	Hinges may need lubrication or cleaning.	Clean hinges thoroughly. Apply a small amount of silicone-based lubricant if necessary.

8. Specifications

Feature	Detail
Model Number	3276000706922
Brand	SENSEA
Manufacturer	ADEO
Color	Pop – Blue
Material	FSC Certified Wood
Shape	Oval
Product Dimensions (L x W)	435 mm x 368 mm (approximate, refer to diagram)
Adjustable Hinge Spacing	130 mm – 180 mm
Maximum Load Capacity	150 kg
Estimated Lifespan	30,000 opening cycles (approx. 10+ years)
Hinge Material	Stainless Steel
Item Weight	3.4 kg





9. Warranty and Support

SENSEA products are manufactured to high-quality standards. This product is covered by the standard warranty provided by the retailer at the point of purchase. Please retain your proof of purchase for any warranty claims.

For technical assistance, spare parts inquiries, or further support, please contact the retailer or the manufacturer, ADEO, through their official customer service channels. Information regarding spare parts availability is currently not provided.

© 2023 SENSEA. All rights reserved.

Related Documents

	<p>Sensea Neo WC with Soft-Closing Seat - User Manual</p> <p>User manual for the Sensea Neo WC with soft-closing seat, providing assembly instructions and product information.</p>
	<p>Sensea NEO Wall-Hung Toilet: Assembly, Use, and Maintenance Manual</p> <p>Comprehensive guide for the Sensea NEO wall-hung toilet, covering assembly instructions, usage guidelines, and maintenance advice. Includes multilingual support and detailed diagrams.</p>
	<p>SENSEA Remix Toilet - Assembly and Maintenance Manual</p> <p>Comprehensive guide for the assembly, use, and maintenance of the SENSEA Remix toilet. Includes detailed instructions, care advice, and troubleshooting tips in multiple languages.</p>
	<p>SENSEA Essential Bathroom Cabinet Assembly and Maintenance Manual</p> <p>This document provides assembly, usage, and maintenance instructions for the SENSEA Essential Bathroom Cabinet with one door. It includes detailed steps, safety warnings, and parts lists, with multilingual support.</p>