

## TELESIN TLSD-MNM-001-NV

# TELESIN Magnetic Neck Mount for Phones (Model TLSD-MNM-001-NV) - User Manual

Hands-Free POV/Vlog Video Recording

## INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your TELESIN Magnetic Neck Mount. This device is designed to offer a hands-free solution for recording point-of-view (POV) videos and vlogs with your smartphone, ensuring stable and versatile capture of your experiences.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Magnetic Neck Mount
- 1 x Magnetic Piece (for non-magnetic smartphones)
- 1 x Cleaning Kit (for phone case preparation)
- 1 x Anti-Lost Rope
- 1 x Specification Sheet

## SETUP INSTRUCTIONS

Follow these steps to prepare your TELESIN Magnetic Neck Mount for use:

### 1. Attaching the Magnetic Piece (for non-magnetic phones)

If your smartphone does not have built-in magnetic capabilities (e.g., MagSafe), you will need to attach the included magnetic piece to your phone case.

1. Choose a smooth, slim phone case. Use the provided cleaning cloth to thoroughly clean the center of the phone case where the magnetic piece will be affixed.

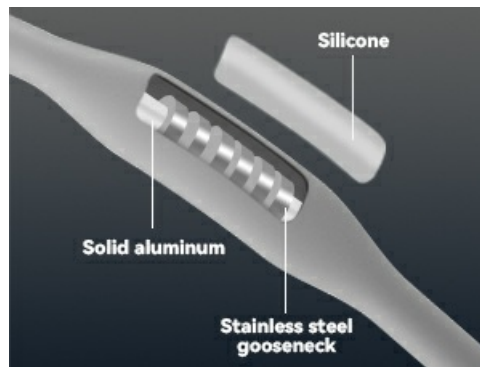


Image: A hand cleaning the back of a clear phone case with a white cloth.

2. Peel off the backing of the magnetic piece and carefully affix it to the center position on the cleaned phone case. Ensure it is securely attached.

*Note: Direct attachment of the magnetic piece to the surface of a phone without a case carries a risk of detachment due to strong magnetic force. It is recommended to affix the magnetic piece inside the phone case if possible for optimal security.*



Image: Hands applying a circular magnetic piece to the center of a phone case.

## 2. Using the Anti-Lost Safety Rope

For enhanced security, especially during intense physical activities or in complex environments, utilize the anti-lost safety rope.

3. Attach one end of the safety rope to the magnetic phone case or through a designated hole on your phone case with the affixed magnetic piece.



Image: A hand attaching a safety rope to a phone case with a magnetic ring.

4. Loop the other end of the rope through the neck holder and secure it in place.



Image: A person wearing the neck mount with a phone attached, showing the safety rope secured to both the phone and the mount.

## OPERATING INSTRUCTIONS

### 1. Wearing the Neck Mount

The TELESIN Magnetic Neck Mount features a quick-release design for easy wearing and removal.

1. To open the neck mount, press the quick-release button located on the side of the central unit. The neckband will separate.



Image: Hands demonstrating the quick-release button on the neck mount.

2. Place the neck mount around your neck. Reconnect the neckband by aligning the ends and pressing them together until a "click" sound is heard, indicating secure installation.



Image: Hands connecting the two ends of the neck mount, showing the "plug and play" mechanism.

### 2. Attaching Your Smartphone

Once the neck mount is worn, attach your smartphone to the magnetic holder.

- Align your smartphone (with its magnetic case or attached magnetic piece) with the magnetic ring on the neck mount. The strong magnets will securely hold your phone in place.



Image: A smartphone magnetically attaching to the neck mount, illustrating the strong magnetic connection.

### 3. Adjusting Angles

The neck mount allows for flexible angle adjustments to capture various POV/Vlog perspectives.

- The integrated zinc alloy rod lift structure allows for easy adjustment of the phone's position. You can switch between portrait and landscape modes, as well as adjust for overhead, low-angle, or chest-level shots.



Image: An illustration showing the adjustable arm of the neck mount, allowing for various phone angles.

## PRECAUTIONS

- When using the magnetic piece, always select a smooth and slim phone case. Affix the magnetic piece inside the case to minimize detachment risk due to strong magnetic force between the magnetic piece and the neck holder.
- For high-impact, high-speed, or complex environments, always use the safety rope to prevent detachment.
- iPhone 12-15 series can be used without a case with a magnetic force exceeding 3kg. If using a magnetic case, the magnetic force may slightly decrease but remains above 2.5kg (data from TELESIN's lab).
- Ensure the neck mount is securely connected with a "click" sound before wearing.
- Avoid bending the neck mount excessively beyond its intended range of motion to prevent damage to the internal structure.



Image: Two panels illustrating correct (sliding) and incorrect (pulling directly) methods for detaching the phone from

the magnetic mount.

## MAINTENANCE

- Clean the neck mount regularly with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Inspect the neck mount and magnetic piece periodically for any signs of wear or damage. Discontinue use if damage is observed.

## TROUBLESHOOTING

- **Phone not attaching securely:**

Ensure the magnetic piece is correctly installed on your phone case and is centered. Verify that the phone case is not excessively thick, which could weaken the magnetic connection. Clean both the magnetic piece and the mount's magnetic surface.

- **Neck mount feels uncomfortable:**

The neck mount is designed with a skin-friendly silicone exterior and an air-cushioned base for comfort. Adjust the position on your neck and chest to find the most comfortable fit. For prolonged use, take breaks.

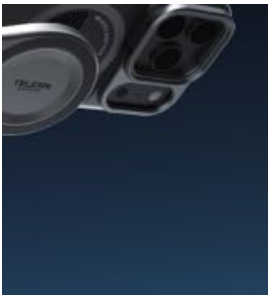


Image: An illustration highlighting the air-cushioned base of the neck mount for shock absorption and comfort.

- **Difficulty adjusting angles:**

The zinc alloy rod is designed to be firm to hold angles securely. Apply steady, gentle force to adjust the arm. Avoid sudden, forceful movements.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	10.43 x 7.68 x 10.43 inches
Item Weight	11.3 ounces
Model Number	TLSD-MNM-001-NV
Special Features	Hands-Free, Lightweight
Color	Premium Gray
Manufacturer	TELESIN

Compatible Devices	Smartphones
Compatible Phone Models	All Smartphones with Phone Case (Magnetic Ring Attached), Samsung Series with Magnetic Ring, iPhone 17/16/15/14/13/12 Series
Mounting Type	Neck Mount



WARRANTY INFORMATION

TELESIN products are covered by a limited warranty against manufacturing defects. For specific warranty terms and conditions, please refer to the official TELESIN website or contact customer support. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your TELESIN Magnetic Neck Mount, please visit the official TELESIN website or contact their customer service department. Contact details can typically be found on the product packaging or the official website.  
Official TELESIN Store: [TELESIN Amazon Store](#)

Related Documents - TLSD-MNM-001-NV

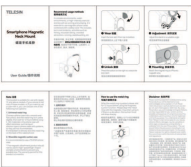	<p><a href="#">TELESIN Smartphone Magnetic Neck Mount User Guide</a></p> <p>Comprehensive user guide for the TELESIN Smartphone Magnetic Neck Mount, detailing recommended usage, installation, and safety precautions for smartphones.</p>
	<p><a href="#">TELESIN Fun Shot Magnetic Grip2 User Guide</a></p> <p>Comprehensive user guide for the TELESIN Fun Shot Magnetic Grip2 (model TPMP001-01), detailing its features, operation, connectivity, safety precautions, and product specifications.</p>
	<p><a href="#">TELESIN</a> ·</p> <p>TELESIN ·</p>

<div><div>TELESIN</div><div><div>Fun Shot Magnetic Grip</div><div>趣拍乐·磁吸乐享版</div></div><div>'de / 使用指南</div></div>	<div><div><a href="#">Telesin Fun Shot Magnetic Grip User Guide</a></div><div>Comprehensive user guide for the Telesin Fun Shot Magnetic Grip, detailing its features, operation, setup, and safety precautions.</div></div>
<div><div>USER GUIDE 使用指南</div><div>TELESIN</div><div>Product Part Name</div><div>产品部件名称</div><div><div><div>Magnetic attractor ring</div><div>磁吸环</div><div>Cardboard Bracket</div><div>悬臂支架</div><div>Telescope rod</div><div>伸缩杆</div><div>Base Mounting Screws</div><div>底座安装螺丝</div></div></div></div>	<div><div><a href="#">TELESIN Magnetic Cell Phone Stand - User Guide &amp; Assembly Instructions</a></div><div>Comprehensive user guide for the TELESIN Magnetic Cell Phone Video/Live Streaming Stand. Learn about product parameters, packing list, assembly, operation, and accessories.</div></div>
<div><div>TELESIN</div><div>Phone Magnetic Radiator</div><div>手机磁吸散热器</div><div><div><div></div></div></div><div>USER MANUAL</div><div>用户手册</div></div>	<div><div><a href="#">TELESIN Phone Magnetic Radiator User Manual</a></div><div>User manual for the TELESIN Phone Magnetic Radiator, covering product structure, key functions, usage instructions, product specifications, and safety information.</div></div>