

Manuals.plus /
› DICTAC /
› DICTAC 31.5"x23.6" Double Door LED Medicine Cabinet - User Manual

DICTAC Duble Doors

DICTAC 31.5"x23.6" Double Door LED Medicine Cabinet - User Manual

Brand: DICTAC | Model: Duble Doors

[Introduction](#) [Safety](#) [Contents](#) [Specifications](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Support](#)

1. INTRODUCTION

Thank you for purchasing the DICTAC 31.5"x23.6" Double Door LED Medicine Cabinet. This cabinet is designed to provide both mirror functionality and ample storage for your bathroom essentials. It features integrated LED lighting with adjustable color temperature and brightness, adjustable internal shelves, and a durable construction suitable for humid environments.

2. IMPORTANT SAFETY INFORMATION

- Electrical Safety:** Ensure the power supply is disconnected before installation or maintenance. All electrical connections should be performed by a qualified electrician in accordance with local codes.
- Mounting:** This cabinet is designed for wall mounting. Ensure the wall structure can support the weight of the cabinet and its contents. Use appropriate mounting hardware for your wall type (solid wall, cavity wall, etc.).
- Water Exposure:** While designed for bathroom environments (IP44 waterproof rating), avoid direct water spray onto electrical components.
- Glass Handling:** Handle mirrors with care to prevent breakage. Wear protective gloves during installation.
- Children:** Keep small parts and tools out of reach of children. Do not allow children to hang on the cabinet doors.
- Ventilation:** Ensure adequate ventilation in the bathroom to prevent excessive humidity buildup.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning assembly.

Product Size

W31.5"

H23.62"

D6.7"

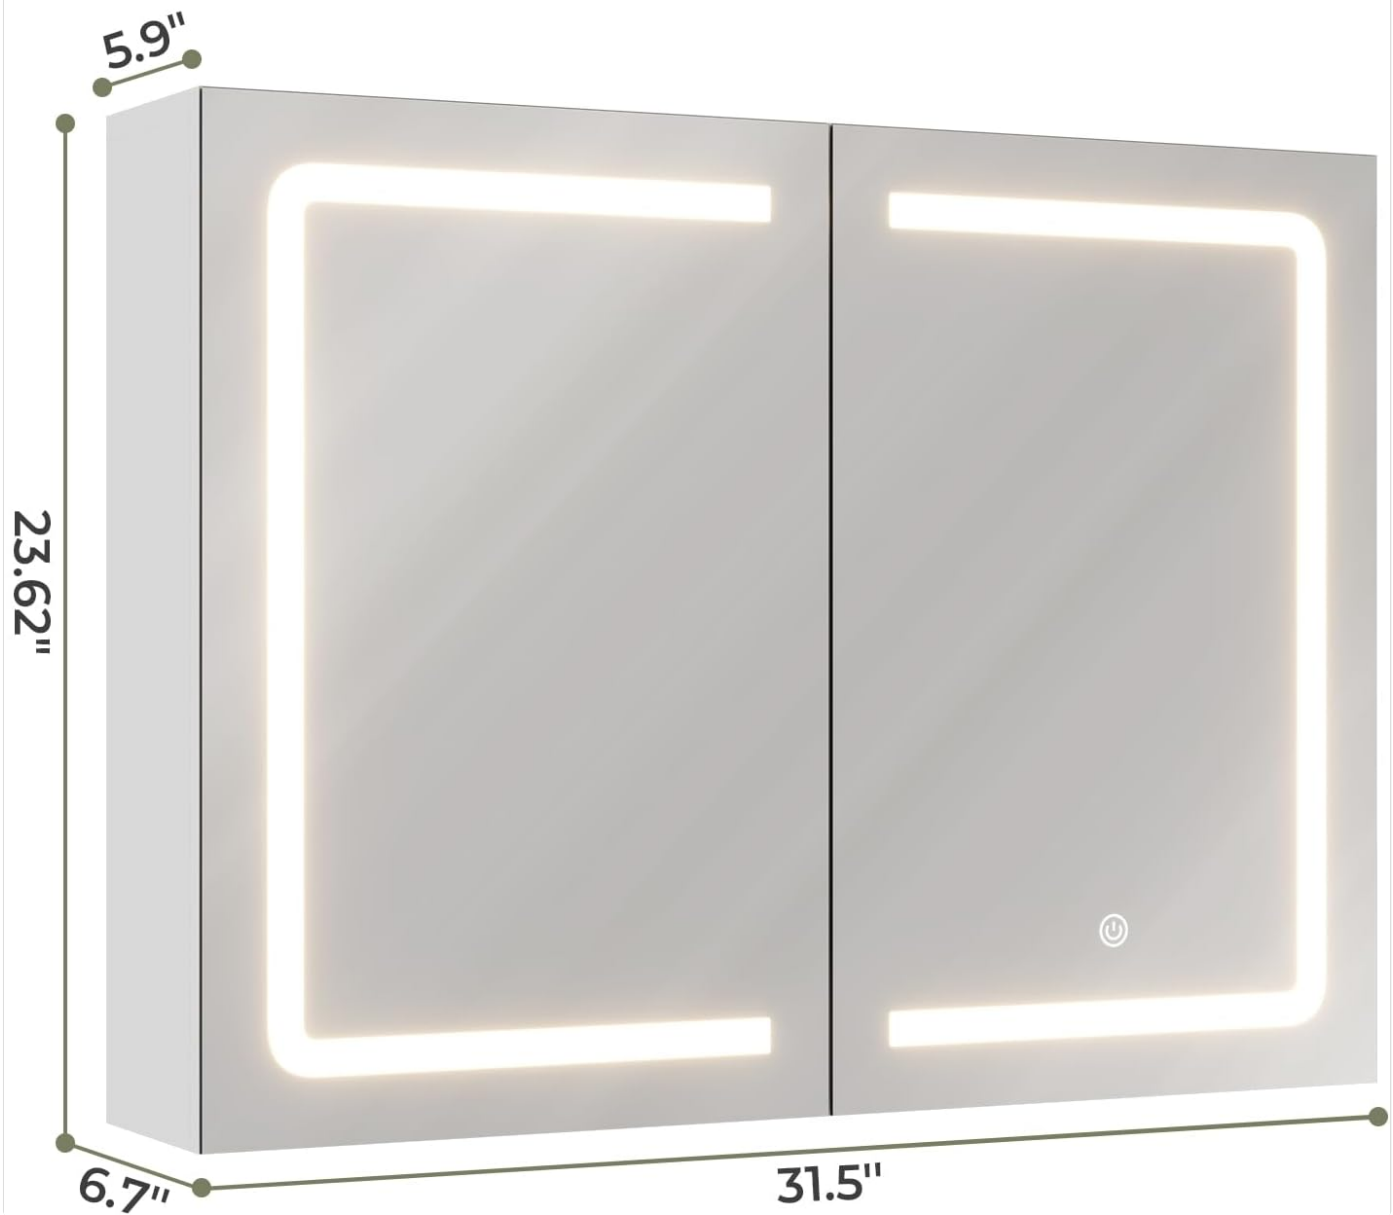


Image: Diagram showing the dimensions of the medicine cabinet (31.5"W x 23.62"H x 6.7"D).

- Medicine Cabinet Unit (1)
- Adjustable Shelves (2)
- Assembly Instructions (1)
- Mounting Hardware (screws, anchors)
- Small Assembly Tools (if applicable)

4. SPECIFICATIONS

Brand	DICTAC
Model	Duble Doors
Dimensions (W x H x D)	31.5" x 23.62" x 6.7"
Material	Engineered Wood (MDF E1 level)

Color	White
Mounting Type	Wall Mount
LED Light Features	3 Color Temperatures (3000K Warm, 4500K Natural, 6500K Cold), Adjustable Brightness, Memory Function
Waterproof Rating	IP44
Number of Shelves	2 (adjustable)
Item Weight	29.8 pounds

5. SETUP AND INSTALLATION

The DICTAC medicine cabinet requires assembly and wall mounting. Follow these steps carefully.

5.1 Assembly

Refer to the included assembly instructions for detailed steps on putting the cabinet structure together. Ensure all screws are tightened securely.

Your browser does not support the video tag.

Video: DICTAC Medicine Cabinet with LED Lights Assembly Guide. This video demonstrates the step-by-step assembly process for the medicine cabinet.

Your browser does not support the video tag.

Video: Medicine Cabinet Assembly & Mounting Introduction. This video provides an overview of the assembly and mounting process for a medicine cabinet.

5.2 Wall Mounting

Determine the desired mounting location. Mark the positions for drilling pilot holes. For solid walls, use the provided expansion anchors and screws. For cavity walls, specialized hollow-wall anchors and screws are required (not included). Ensure the cabinet is level before securing it to the wall.

Your browser does not support the video tag.

Video: LED Medicine Cabinet Suspension Fitting Installation. This video illustrates the process of installing the suspension fittings for wall mounting the medicine cabinet.

The cabinet can be installed as a wall-mounted unit or recessed into the wall, depending on your preference and bathroom design. Ensure proper electrical wiring for the LED lights is accessible at the chosen installation point.



Image: The medicine cabinet shown installed as a wall-mounted unit above a sink.

6. OPERATING INSTRUCTIONS

6.1 LED Light Control

The LED lights are controlled by a touch switch located on the mirror surface.

- **Turn On/Off:** Single touch the blue switch to turn the LED lights on or off.
- **Change Color Temperature:** While the lights are on, single click the blue button to cycle through the three color temperatures: 3000K (Warm Light), 4500K (Natural Light), and 6500K (Cold Light).
- **Adjust Brightness:** Long press the blue button to adjust the light brightness. The brightness will cycle from 10% to 100%. Release the button when the desired brightness is reached.
- **Memory Function:** The cabinet's memory function will retain the last used brightness setting when the lights are turned on again.



Image: Visual representation of the touch switch and its functions for adjusting light color and brightness.

**HD-
MIRROR**

**Perfect
Makeup With
Natural Lights**

DICTAC Wall Mounted Medicine Cabinet With Led Lights

Image: Detailed diagram illustrating the three color temperature options (3000K, 4500K, 6400K) and how to adjust brightness via long press.

Your browser does not support the video tag.

Video: DICTAC Bathroom Medicine Cabinet with Mirrors and LED Lights. This video showcases the LED light features, including color temperature and brightness adjustments.

6.2 Adjustable Shelves

The internal shelves are adjustable to accommodate items of various heights. Simply remove the shelf and reposition it to the desired height using the pre-drilled holes.



Image: The interior of the cabinet displaying adjustable shelves filled with toiletries, highlighting flexible storage.

7. CARE AND MAINTENANCE

- **Cleaning the Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner. Do not spray cleaner directly onto the mirror; apply it to the cloth first.
- **Cleaning the Cabinet:** Wipe the cabinet surfaces with a damp cloth and mild detergent. Dry immediately with a clean cloth. Avoid harsh chemicals or abrasive cleaners.
- **Hinge Maintenance:** Periodically check hinges for tightness and smooth operation. Lubricate if necessary.
- **Electrical Components:** Keep all electrical components dry. If any part becomes wet, disconnect power immediately and allow it to dry completely before re-energizing.

Medicine Cabinet For Bathroom with Well-Made Details



Image: Close-up view of the cabinet highlighting its easy-to-clean surfaces and durable stainless steel hinges.

8. TROUBLESHOOTING

8.1 LED Lights Not Working

- **Check Power:** Ensure the cabinet is properly connected to a power source and the wall switch (if hardwired) is on.
- **Inspect Wiring:** Verify all electrical connections are secure. If unsure, consult a qualified electrician.
- **Touch Switch:** Ensure the touch switch is clean and free from moisture or debris that might interfere with its operation.

8.2 Uneven or Misaligned Doors

If the cabinet doors appear uneven or do not close properly, adjust the hinges as follows:

- **Up and Down Adjustment:** Loosen or tighten the top/bottom screws on the hinge to move the door vertically.
- **Front and Back Adjustment:** Loosen or tighten the middle screw on the hinge to move the door closer to or further from the cabinet frame.
- **Left and Right Adjustment:** Loosen or tighten the side screws on the hinge to adjust the door horizontally.

Your browser does not support the video tag.

Video: How to Adjust Hinge? This video demonstrates how to adjust cabinet hinges to correct door alignment.

9. WARRANTY AND SUPPORT

DICTAC products are manufactured with quality and care. For specific warranty information regarding your medicine cabinet, please refer to the documentation included with your purchase or visit the official DICTAC website.

If you encounter any issues or have questions about your product, please contact DICTAC customer support for assistance. Our team is dedicated to providing satisfactory solutions.

You can visit the [DICTAC Store on Amazon](#) for more information and contact options.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/BOCML8BNGS>

More documents and user manuals: <https://manuals.plus/>