

MYTHIA A306 Pro

MYTHIA A306 Pro Massage Chair User Manual

Model: A306 Pro

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the MYTHIA A306 Pro Massage Chair. Retain this manual for future reference.

- Always use the chair as intended.
- Do not exceed the maximum weight capacity of 300 lbs (136 kg).
- Exercise caution when using the zero gravity, heat, and air compression features.
- Keep children and pets away from the chair when in use.
- Unplug and turn off the chair when not in use or during cleaning.
- Consult a physician before use if you have any medical conditions, are pregnant, or have a pacemaker.


2. SETUP AND PLACEMENT

2.1 Unpacking and Assembly

The MYTHIA A306 Pro Massage Chair typically arrives in multiple boxes. Follow the included assembly guide for detailed step-by-step instructions. Ensure all components are present before beginning assembly.

2.2 Chair Placement

Place the chair on a flat, stable surface. Ensure there is adequate clearance around the chair for reclining and leg rest extension. A minimum distance of 3.15 inches (8 cm) from the wall is recommended for full recline functionality.

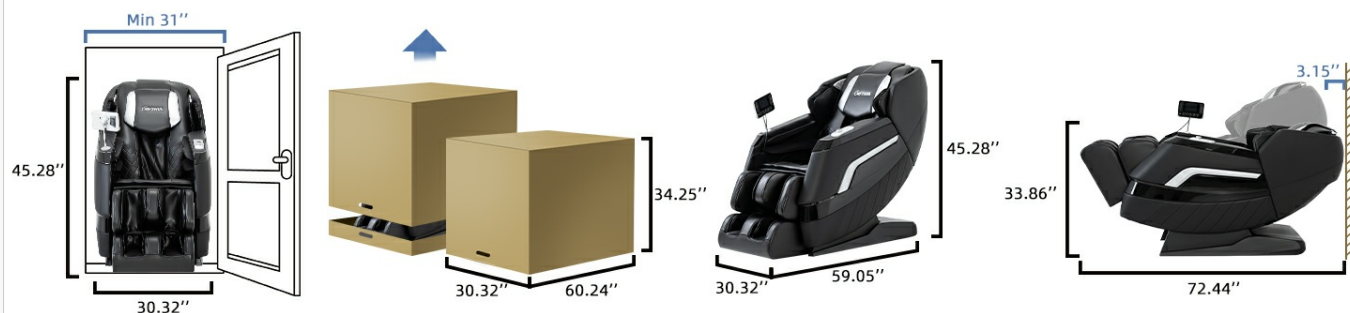

Maximum Weight Recommendation: 260 LB Maximum Height Recommendation: 6.1FT Minimum Distance From The Wall Recommendation: 3.15 Inches

Image: Recommended dimensions and wall clearance for the massage chair. Maximum weight recommendation: 260 LB. Maximum height recommendation: 6.1 FT. Minimum distance from the wall recommendation: 3.15 inches.

2.3 Power Connection

Connect the power cord to the chair and then to a grounded electrical outlet. Ensure the power switch on the chair is in the 'OFF' position before plugging it in.

3. OPERATING INSTRUCTIONS

3.1 Control Methods

The MYTHIA A306 Pro offers three ways to control your massage experience:

- **Touchscreen Control:** Use the integrated touchscreen panel to select programs, adjust settings, and customize your massage.
- **Shortcut Keys Control:** Convenient buttons located on the armrest provide quick access to frequently used functions.
- **AI Voice Control:** Activate voice commands by saying "Hi Alfi" or similar phrases to start, stop, or change massage settings.

Three Control Methods For Easy Use



3.2 Body Sensing Technology

Upon starting a program, the chair performs an automatic body scan to detect your body shape and adjust the massage rollers for optimal coverage and intensity. This ensures a personalized massage experience targeting your neck, shoulders, back, waist, hips, calves, and feet.



Image: Automatic Body Sensing Technology for full body massage, showing coverage from neck to feet.

3.3 Massage Programs and Techniques

The A306 Pro features a 3D intelligent massage mechanism with various techniques and preset programs:

- **Massage Techniques:** Kneading, Knocking, Tapping, Kneading & Tapping, Squeezing, Finger Pressing.
- **Preset Programs:** Comfort, Office Regimen, Stretching Massage, Neck & Shoulder Massage, Back & Waist Massage, Relief, Waist & Hip Massage, Sleep, Lady, Recovery, Relax, Older.



Image: 3D Intelligent Massage mechanism with 6 massage techniques and 12 preset massage programs.

3.4 Zero Gravity Positions

The chair offers 4 zero gravity positions to elevate your legs above your heart, reducing pressure on the spine and enhancing the massage experience. Select from Initial, Reclining, Comfort, and Deep Angle options.



Image: Full Body Stretching Massage with Three Zero Gravity Angles and 53.15" SL Track.

3.5 Yoga Stretch Feature

Engage the yoga stretch functionality to gently stretch your body, promoting flexibility and tension release.

3.6 Air Compression Massage

Airbags strategically placed throughout the chair provide compression massage to various body parts, including arms, waist, and shoulders, promoting circulation and relaxation.




Image: Full Body Airbags Massage.

3.7 Lumbar Heat Therapy

An integrated heating element provides soothing warmth to the lower back, enhancing muscle relaxation and therapeutic benefits.

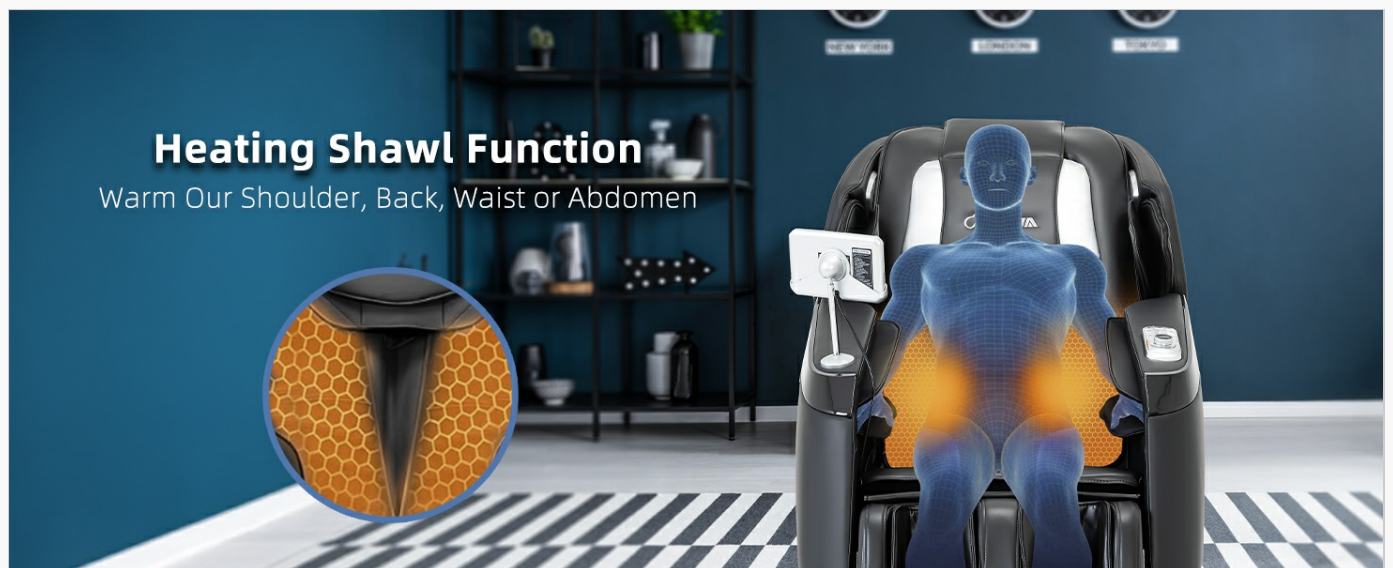


Image: Heating Shawl Function to warm the shoulder, back, waist, or abdomen.

3.8 Foot Rollers and Calf Massage

The footrest includes rollers for foot massage, complemented by kneading, rolling, and airbag compression for the calves.

Calves & Feet Massage



Calves Kneading Massage
& Calves Rollers Massage
& Calves Airbags Massage



Feet Rollers Massage
& Feet Airbags Massage



Image: Calves & Feet Massage, showing kneading, rollers, and airbags for calves, and rollers with airbags for feet.

3.9 Extendable Leg Rest

The leg rest can be extended by up to 5.9 inches to accommodate users of various heights, ensuring a comfortable and tailored massage.



Image: Extendable Footrest, showing an extension of 5.9 inches.

3.10 Additional Functions

- **Bluetooth Connectivity:** Connect your device to the chair via Bluetooth to enjoy music or audio during your massage.
- **USB Charging Port:** Conveniently charge your devices using the integrated USB port.
- **Moving Wheels:** The chair is equipped with wheels for easier relocation.

More Functions



Image: More Functions, including USB Charging, Moving Wheels, and Bluetooth Speaker.

3.11 Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the features and operation of the MYTHIA A306 Pro Massage Chair.

4. CARE AND MAINTENANCE

4.1 Cleaning

- Wipe the chair clean with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the faux leather material.
- Ensure the chair is unplugged before cleaning.

4.2 Storage

When not in use for extended periods, store the chair in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you encounter any issues with your MYTHIA A306 Pro Massage Chair, please refer to the following common solutions:

Problem	Possible Cause	Solution
Chair does not power on	Power cord not securely plugged in; Power switch off; No power from outlet.	Check power connections; Ensure power switch is ON; Test outlet with another device.

Problem	Possible Cause	Solution
Massage rollers not moving	Program not selected; Safety sensor activated.	Select a massage program; Ensure no obstructions are blocking the rollers.
Voice control not responding	Microphone muted; Environment too noisy; Incorrect command.	Ensure microphone is active; Reduce background noise; Use specified voice commands (e.g., "Hi Alfi").
Heat function not working	Heat function not activated; Overheating protection.	Activate heat via controls; Allow chair to cool down if used continuously for a long period.

For issues not listed here, please contact customer support.

6. TECHNICAL SPECIFICATIONS

- Brand:** MYTHIA
- Model Name:** A306 Pro
- Material:** Faux Leather, Foam (Fill Material), Metal (Frame Material)
- Product Dimensions (D x W x H):** 62.2" x 30.31" x 43.7" (158 cm x 77 cm x 111 cm)
- Chair Backrest Width:** 30.31 Inches (77 cm)
- Maximum Weight Capacity:** 300 lbs (136 kg)
- Recommended User Height:** Up to 6.1 ft (186 cm)
- Reclining Position Count:** 4 (Zero Gravity)
- Additional Features:** Arm Rest, Ergonomic Design, Foot Rest, Reclining, Bluetooth, USB Charging, Moving Wheels, AI Voice Control, Lumbar Heat.
- Indoor/Outdoor Usage:** Indoor only
- Power:** Electric

7. WARRANTY AND CUSTOMER SUPPORT

The MYTHIA A306 Pro Massage Chair comes with a 3-year coverage. For warranty claims, technical assistance, or any questions regarding your product, please contact MYTHIA customer support. You can typically find contact information on the manufacturer's website or through your purchase platform.

24/7 local customer support is available for your convenience.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CQC2QSQ2>

More documents and user manuals: **<https://manuals.plus/>**