

- Manuals.plus /
- > HYAKO /
 - > HYAKO Handheld Professional Mini Orbital Buffer Relief Massager User Manual

HYAKO LD-019

HYAKO Handheld Professional Mini Orbital Buffer Relief Massager User Manual

Model: LD-019 | Brand: HYAKO

PRODUCT OVERVIEW

The HYAKO Handheld Professional Mini Orbital Buffer Relief Massager is designed for therapeutic relaxation and muscle pain relief. Its unique ergonomic design allows for easy self-application across various body parts. Featuring adjustable speeds and interchangeable attachments, it provides a customized massage experience.



Figure 1: HYAKO Handheld Professional Mini Orbital Buffer Relief Massager with included accessories.

SETUP GUIDE

1. Unboxing and Initial Charge

Upon receiving your HYAKO massager, carefully remove all components from the packaging. The device comes with a USB-C charging cable. Connect the massager to a compatible 5V 2A power adapter (not included) using the provided USB-C cable. The indicator lights will show charging progress. A full charge typically takes 2.5 hours and provides 3-5 hours of working time.

Your browser does not support the video tag.

Video 1: Demonstrates unboxing and charging the HYAKO massager.

2. Attaching Massage Heads and Pads

The massager includes three interchangeable massage heads and three washable, skin-friendly pads. To attach a head, align it with the base of the massager and twist gently until it clicks into place. For a softer massage or use on bare skin,

place one of the fabric pads over the desired massage head.



Figure 2: Various massage heads and washable pads for customized use.

OPERATING INSTRUCTIONS

1. Power On/Off and Speed Adjustment

To power on the massager, press and hold the power button (located on the handle) for 3 seconds until the green light illuminates. To cycle through the 5 available speed levels, short press the power button. The blue indicator lights on the handle will show the current speed setting. To power off, press and hold the power button again for 3 seconds.

Your browser does not support the video tag.

Video 2: Demonstrates powering on, adjusting speeds, and powering off the massager.

2. Recommended Usage

The HYAKO massager is versatile and can be used on various body parts including the neck, shoulders, back, legs, feet, and hands. Apply gentle pressure and move the massager in circular motions over the desired area. The ergonomic design allows for comfortable gripping from different angles, enabling you to reach most parts of your body independently.

- **Neck & Shoulders:** Use the spherical head for tension relief.
- **Back & Legs:** The circular massage head is ideal for larger muscle groups and trigger points.
- **Deep Tissue:** Higher speeds (up to 2500 RPM) can target deeper muscle knots.

Simple & Light & Easy to us



Variable speed
1100- 2500rpm



Figure 3: Examples of using the massager on different body areas.

3. Auto-Timer Feature

For safety and optimal use, the massager is equipped with a 15-minute auto-timer. After 15 minutes of continuous operation, the device will automatically shut off. If you wish to continue your massage, simply power it on again.

MAINTENANCE

1. Cleaning

To clean the massage heads and fabric pads, detach them from the main unit. The fabric pads are washable and can be gently hand-washed with mild soap and water, then air-dried. Wipe the plastic massage heads and the main unit with a soft, damp cloth. Do not submerge the main unit in water.

2. Storage

Store the massager and its accessories in the provided storage bag in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the device is fully charged before long-term storage to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery or not powered on correctly.	Charge the device fully. Press and hold the power button for 3 seconds to turn on.
Massager stops unexpectedly.	15-minute auto-timer activated.	Power on the device again if further massage is desired.
Weak vibration.	Low battery or low speed setting.	Recharge the device. Increase the speed setting by short pressing the power button.

PRODUCT SPECIFICATIONS

- Brand: HYAKO
- Model Number: LD-019
- Product Dimensions: 4.5 x 5 x 2.8 inches
- Item Weight: 1.2 Pounds
- Power Source: Battery Powered (1 Lithium Ion battery included)
- Battery Capacity: 2500mAh
- Charging Time: 2.5 hours
- Working Time: 3-5 hours
- Speed Levels: 5 (up to 2500 RPM)
- Auto-Timer: 15 minutes
- Material: Acrylonitrile Butadiene Styrene
- Country of Origin: China

WARRANTY AND SUPPORT

HYAKO offers a 365-day unconditional replacement for any product issues, ensuring customer satisfaction. For any inquiries, technical assistance, or warranty claims, please contact our customer support team.

Email: hyako168@gmail.com

Online Service: 24-hour 1-on-1 online service available all year round.

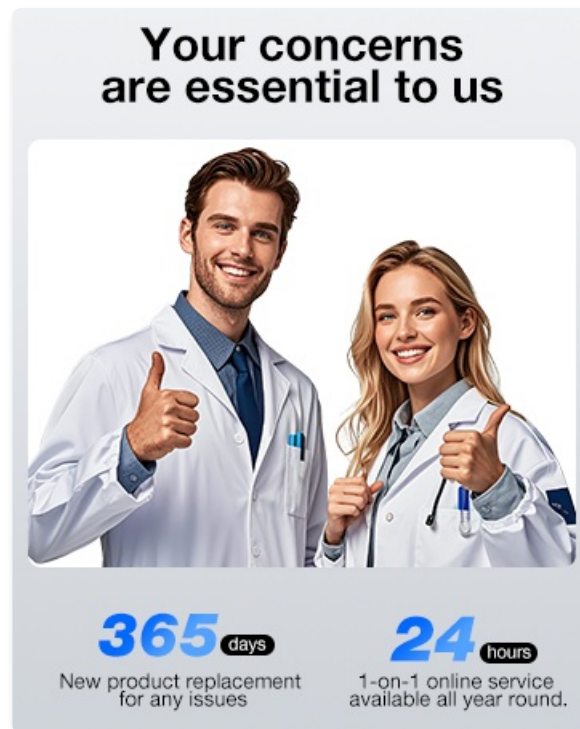


Figure 4: HYAKO's commitment to customer support and product replacement.

© 2025 HYAKO. All rights reserved.

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CRYLRRRB>

More documents and user manuals: <https://manuals.plus/>